

**En Roles Assignable to Z 8 Custom Controls (Available Roles for Custom Controls)**

Users can choose the roles played by certain camera controls during still photography, video recording, and playback. This document provides a list of the functions that can be assigned to each control. • The items shown may vary with the lens and with lens and camera firmware. The tables that follow list the items shown when a NIKKOR Z 70–200mm f/2.8 VR S lens with lens firmware version 1.21 is attached to a camera with "C" firmware version 2.00.

**Still Photography**

The roles played by custom controls during still photography are chosen using Custom Setting f2 [Custom controls (shooting)].

**■ Customizable Controls**

 
Fn1 button	Fn1	Fn2 button	Fn2	Fn button for vertical shooting	Fn	OK button	OK	Playback button	Play	Vertical multi selector center	VMS	AF-ON button for vertical shooting	AF-ON	Video record button	Record	Exposure compensation button	EV	ISO sensitivity button	ISO	Command dials	Command dials
Fn1 button	Fn1	Fn2 button	Fn2	Fn button for vertical shooting	Fn	OK button	OK	Playback button	Play	Vertical multi selector center	VMS	AF-ON button for vertical shooting	AF-ON	Video record button	Record	Exposure compensation button	EV	ISO sensitivity button	ISO	Command dials	Command dials
Fn1 button	Fn1	Fn2 button	Fn2	Fn button for vertical shooting	Fn	OK button	OK	Playback button	Play	Select center focus point	Focus	AF-ON button for vertical shooting	AF-ON	Video record button	Record	Exposure compensation button	EV	ISO sensitivity button	ISO	Command dials	Command dials
Fn1 button	Fn1	Fn2 button	Fn2	Fn button for vertical shooting	Fn	Focus mode button	Focus	Protect/Fn3 button	Protect	AF-ON button	AF-ON	Sub-selector center	Sub	DISP button	DISP	OK button	OK	Playback button	Play	Vertical multi selector center	VMS
Fn1 button	Fn1	Fn2 button	Fn2	Fn button for vertical shooting	Fn	Focus mode button	Focus	Protect/Fn3 button	Protect	AF-ON button	AF-ON	Sub-selector center	Sub	DISP button	DISP	OK button	OK	Playback button	Play	Vertical multi selector center	VMS
Fn1 button	Fn1	Fn2 button	Fn2	Fn button for vertical shooting	Fn	Focus mode button	Focus	Protect/Fn3 button	Protect	AF-ON button	AF-ON	Sub-selector center	Sub	DISP button	DISP	OK button	OK	Playback button	Play	Vertical multi selector center	VMS
Fn1 button	Fn1	Fn2 button	Fn2	Fn button for vertical shooting	Fn	Focus mode button	Focus	Protect/Fn3 button	Protect	AF-ON button	AF-ON	Sub-selector center	Sub	DISP button	DISP	OK button	OK	Playback button	Play	Vertical multi selector center	VMS
Fn1 button	Fn1	Fn2 button	Fn2	Fn button for vertical shooting	Fn	Focus mode button	Focus	Protect/Fn3 button	Protect	AF-ON button	AF-ON	Sub-selector center	Sub	DISP button	DISP	OK button	OK	Playback button	Play	Vertical multi selector center	VMS
Fn1 button	Fn1	Fn2 button	Fn2	Fn button for vertical shooting	Fn	Focus mode button	Focus	Protect/Fn3 button	Protect	AF-ON button	AF-ON	Sub-selector center	Sub	DISP button	DISP	OK button	OK	Playback button	Play	Vertical multi selector center	VMS
Fn1 button	Fn1	Fn2 button	Fn2	Fn button for vertical shooting	Fn	Focus mode button	Focus	Protect/Fn3 button	Protect	AF-ON button	AF-ON	Sub-selector center	Sub	DISP button	DISP	OK button	OK	Playback button	Play	Vertical multi selector center	VMS
Fn1 button	Fn1	Fn2 button	Fn2	Fn button for vertical shooting	Fn	Focus mode button	Focus	Protect/Fn3 button	Protect	AF-ON button	AF-ON	Sub-selector center	Sub	DISP button	DISP	OK button	OK	Playback button	Play	Vertical multi selector center	VMS
Fn1 button	Fn1	Fn2 button	Fn2	Fn button for vertical shooting	Fn	Focus mode button	Focus	Protect/Fn3 button	Protect	AF-ON button	AF-ON	Sub-selector center	Sub	DISP button	DISP	OK button	OK	Playback button	Play	Vertical multi selector center	VMS
Fn1 button	Fn1	Fn2 button	Fn2	Fn button for vertical shooting	Fn	Focus mode button	Focus	Protect/Fn3 button	Protect	AF-ON button	AF-ON	Sub-selector center	Sub	DISP button	DISP	OK button	OK	Playback button	Play	Vertical multi selector center	VMS
Fn1 button	Fn1	Fn2 button	Fn2	Fn button for vertical shooting	Fn	Focus mode button	Focus	Protect/Fn3 button	Protect	AF-ON button	AF-ON	Sub-selector center	Sub	DISP button	DISP	OK button	OK	Playback button	Play	Vertical multi selector center	VMS
Fn1 button	Fn1	Fn2 button	Fn2	Fn button for vertical shooting	Fn	Focus mode button	Focus	Protect/Fn3 button	Protect	AF-ON button	AF-ON	Sub-selector center	Sub	DISP button	DISP	OK button	OK	Playback button	Play	Vertical multi selector center	VMS
Fn1 button	Fn1	Fn2 button	Fn2	Fn button for vertical shooting	Fn	Focus mode button	Focus	Protect/Fn3 button	Protect	AF-ON button	AF-ON	Sub-selector center	Sub	DISP button	DISP	OK button	OK	Playback button	Play	Vertical multi selector center	VMS
Fn1 button	Fn1	Fn2 button	Fn2	Fn button for vertical shooting	Fn	Focus mode button	Focus	Protect/Fn3 button	Protect	AF-ON button	AF-ON	Sub-selector center	Sub	DISP button	DISP	OK button	OK	Playback button	Play	Vertical multi selector center	VMS
Fn1 button	Fn1	Fn2 button	Fn2	Fn button for vertical shooting	Fn	Focus mode button	Focus	Protect/Fn3 button	Protect	AF-ON button	AF-ON	Sub-selector center	Sub	DISP button	DISP	OK button	OK	Playback button	Play	Vertical multi selector center	VMS
Fn1 button	Fn1	Fn2 button	Fn2	Fn button for vertical shooting	Fn	Focus mode button	Focus	Protect/Fn3 button	Protect	AF-ON button	AF-ON	Sub-selector center	Sub	DISP button	DISP	OK button	OK	Playback button	Play	Vertical multi selector center	VMS
Fn1 button	Fn1	Fn2 button	Fn2																		

Role	Fn1	Fn2	Fn3	Fn4	Fn5	Fn6	Fn7	Fn8	Fn9	Fn10	Fn11	Fn12	Fn13	Fn14	Fn15	Fn16	Fn17	Fn18	Fn19	Fn20	M-SET	0
[Flash mode/compensation]	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	—
[Release mode]	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	—
AF/[•]	[Focus mode/AF-area mode]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	—
BKT	[Auto bracketing]	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	—
[■]	[Multiple exposure]	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	—
HDR	[HDR overlay]	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	—
[PIXEL]	[Pixel shift shooting]	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	—
[DLY]	[Exposure delay mode]	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	—
LOCK	[Control lock]	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	—
[○◎]	[1 step spd/aperture]	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	—
Non-CPU	[Choose non-CPU lens number]	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	—
M/A	[Focus (M/A)]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
[◎]	[Aperture]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓
[◎]	[Aperture (close)]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—
[◎]	[Aperture (open)]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	—
[▼]	[Exposure compensation +]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—
[▲]	[Exposure compensation -]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—
[ISO+]	[ISO sensitivity (increase)]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—
[ISO-]	[ISO sensitivity (decrease)]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—
[None]	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Role with command dial	Fn1	Fn2	Fn3	Fn4	Fn5	Fn6	Fn7	Fn8	Fn9	Fn10	Fn11	Fn12	Fn13	Fn14	Fn15	Fn16	Fn17	Fn18	Fn19	Fn20	M-SET	0
[Exposure setting]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	—	—	—
[Focus/AF-area mode selection]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	—	—	—	—
[Sub-command dial zoom role]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	—	—	—	—

## **Video Recording**

The roles played by custom controls during video recording are chosen using Custom Setting g2 [Custom controls].

### ■ Customizable Controls

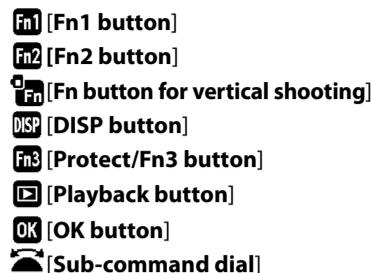
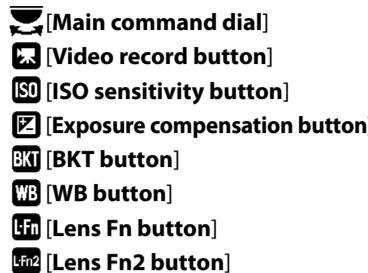
 <b>Fn1</b> [Fn1 button]	 <b>Fn2</b> [Fn2 button]	 <b>OK</b> [OK button]	 <b>[Shutter-release button]</b>
 <b>Fn1</b> [Fn button for vertical shooting]	 <b>[Focus mode button]</b>	 <b>[Playback button]</b>	 <b>[WB button]</b>
 <b>Fn3</b> [Protect/Fn3 button]	 <b>[Vertical multi selector center]</b>	 <b>[AF-ON button for vertical shooting]</b>	 <b>[BKT button]</b>
 <b>Fn4</b> [AF-ON button]	 <b>[Video record button]</b>	 <b>[Lens Fn2 button]</b>	 <b>[Lens Fn ring (clockwise)]</b>
 <b>Fn5</b> [Sub-selector center]	 <b>[Exposure compensation button]</b>	 <b>[Lens Fn button]</b>	 <b>[Lens Fn ring (counterclockwise)]</b>
 <b>Fn6</b> [DISP button]	 <b>[ISO sensitivity button]</b>	 <b>[Command dials]</b>	 <b>[Lens memory set button]</b>
		 <b>0</b> [Lens control ring]	

## ■ Available Roles

## Playback

The roles played by custom controls during playback are chosen using Custom Setting f3 [Custom controls (playback)].

### ■ Customizable Controls

 f3 Custom controls (playback) Fn1 button None	 Fn1 [Fn1 button] Fn2 [Fn2 button] Fn [Fn button for vertical shooting] DISP [DISP button] Fn3 [Protect/Fn3 button] [Playback button] OK [OK button] [Sub-command dial]	 f3 Custom controls (playback) Main command dial	 [Main command dial] [Video record button] ISO [ISO sensitivity button] [Exposure compensation button] BKT [BKT button] WB [WB button] L-Fn [Lens Fn button] L-Fn2 [Lens Fn2 button]
--	--	---	---

### ■ Available Roles

Role	Fn1	Fn2	[Fn]	DISP	Fn3	[ ]	OK	[ ]	[ ]	[ ]	ISO	[ ]	[ ]	BKT	WB	L-Fn	L-Fn2
[Protect]	✓	✓	✓	✓	✓	✓	—	—	—	✓	✓	✓	✓	✓	✓	✓	
[Delete]	✓	✓	✓	✓	✓	✓	—	—	—	✓	✓	✓	✓	✓	✓	✓	
[Zoom on/off]	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	
[Filtered playback]	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	
[Filtered playback (select criteria)]	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	
[Start series playback]	✓	✓	✓	✓	✓	✓	✓	—	—	✓	✓	✓	✓	✓	✓	✓	
[Voice memo]	✓	✓	✓	✓	✓	✓	✓	—	—	✓	✓	✓	✓	✓	✓	✓	
[Select for upload to computer]	✓	✓	✓	✓	✓	✓	✓	—	—	✓	✓	✓	✓	✓	✓	✓	
[Select for upload (FTP)]	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	
[Thumbnail on/off]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
[View histograms]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
[Choose slot and folder]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
DISP [Cycle info display]	✓	✓	✓	✓	✓	✓	✓	—	—	✓	✓	✓	✓	✓	✓	✓	
[Resume shooting]	✓	✓	✓	✓	✓	✓	✓	—	—	✓	✓	✓	✓	✓	✓	✓	
[Rating]	✓	✓	✓	✓	✓	✓	✓	—	—	✓	✓	✓	✓	✓	—	—	
[None]	✓	✓	✓	✓	✓	✓	✓	—	—	✓	✓	✓	✓	✓	✓	✓	
Role with command dial	Fn1	Fn2	[Fn]	DISP	Fn3	[ ]	OK	[ ]	[ ]	[ ]	ISO	[ ]	[ ]	BKT	WB	L-Fn	L-Fn2
[Frame advance]	—	—	—	—	—	—	—	✓	✓	—	—	—	—	—	—	—	
[Video playback]	—	—	—	—	—	—	—	—	✓	✓	—	—	—	—	—	—	
[Frame advance zoom position]	—	—	—	—	—	—	—	—	✓	✓	—	—	—	—	—	—	
[Playback zoom face selection]	—	—	—	—	—	—	—	—	✓	—	—	—	—	—	—	—	