

**En Roles Assignable to Z 9 Custom Controls**

Users can choose the roles played by certain camera controls during still photography, video recording, and playback. This document provides a list of the functions that can be assigned to each control.

The items shown may vary with the lens and with lens and camera firmware. The tables that follow list the items shown when a NIKKOR Z 70–200mm f/2.8 VR S lens with lens firmware version 1.21 is attached to a camera with "C" firmware version 4.00.

**Still Photography**

The roles played by custom controls during still photography are chosen using Custom Setting f2 [Custom controls (shooting)].

**■ Customizable Controls**

Fn1 button	Fn1	Fn2	Fn3	Fn	ISO	AF-ON	Fn4	DISP	○	OK	Audio	QUAL	WB	PLAY	VSEL	AF-ON	REC	EXP COMP	ISO	COMMAND DIALS	FLASH MODE	BKT	L-Fn	L-Fn2	Fn	Fn	M-SET	LENS CONTROL RING
Fn1 button																												
Shooting menu bank																												
MENU Done																												
Reset																												

**■ Available Roles**

Role	Fn1	Fn2	Fn3	Fn	ISO	AF-ON	Fn4	DISP	○	OK	Microphone	QUAL	WB	PLAY	VSEL	AF-ON	REC	EXP COMP	ISO	COMMAND DIALS	FLASH MODE	BKT	L-Fn	L-Fn2	Fn	Fn	M-SET	○		
PRE <sup>(1)</sup> [Preset focus point]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	
RESET [Select center focus point]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—
←FOCUS [Save focus position]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
→FOCUS [Recall focus position]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
→@ [Switch eyes]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
[+/-] [AF-area mode]	✓	✓	✓	✓	—	—	✓	—	✓	✓	—	—	—	—	—	—	✓	✓	—	—	—	—	✓	✓	✓	✓	✓	✓	✓	✓
[+/-AF] [AF-area mode + AF-ON]	✓	✓	✓	✓	—	—	✓	—	✓	✓	—	—	—	—	—	—	✓	✓	—	—	—	—	✓	✓	✓	✓	✓	✓	✓	✓
AF-ON [AF-ON]	✓	✓	✓	✓	—	—	✓	—	✓	✓	—	—	—	—	—	—	✓	✓	—	—	—	—	✓	✓	✓	✓	✓	✓	✓	✓
AF [AF lock only]	✓	✓	✓	✓	—	—	✓	—	✓	✓	—	—	—	—	—	—	✓	✓	—	—	—	—	✓	✓	✓	✓	✓	✓	✓	✓
AE [AE lock (Hold)]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
AWB [AWB lock (hold)]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
AE/AWB [AE/AWB lock (hold)]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
AE/ [AE lock (Reset on release)]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
AE [AE lock only]	✓	✓	✓	✓	—	—	✓	—	✓	✓	—	—	—	—	—	—	✓	✓	—	—	—	—	✓	✓	✓	✓	✓	✓	✓	✓
AE/AF [AE/AF lock]	✓	✓	✓	✓	—	—	✓	—	✓	✓	—	—	—	—	—	—	✓	✓	—	—	—	—	✓	✓	✓	✓	✓	✓	✓	✓
FV [FV lock]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
⊖/⊕ [Disable/enable]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
FX/DX [Switch FX/DX]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
FLICKER [Photo flicker reduction]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
PREVIEW [Preview]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Role	Fn1	Fn2	Fn3	Fn	ISO	AF-ON	Fn4	DISP	○	OK	Microphone	QUAL	WB	PLAY	VSEL	AF-ON	REC	EXP COMP	ISO	COMMAND DIALS	FLASH MODE	BKT	L-Fn	L-Fn2	Fn	Fn	M-SET	○		
RECALL [Recall shooting functions]	✓	✓	✓	—	—	✓	—	✓	✓	—	—	✓	✓	✓	✓	✓	✓	✓	—	—	—	✓	✓	✓	✓	✓	✓	✓	✓	✓
RECALL HOLD [Recall shooting functions (hold)]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
HIGH-FREQUENCY FLICKER REDUCTION [High-frequency flicker reduction]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
BRACKETING BURST [Bracketing burst]	✓	✓	✓	✓	—	—	✓	—	✓	✓	—	—	—	—	—	—	✓	✓	—	—	—	—	✓	✓	✓	✓	✓	✓	✓	✓
SYNC. RELEASE SELECTION [Sync. release selection]	✓	✓	✓	✓	—	—	✓	—	✓	✓	—	—	—	—	—	—	✓	✓	—</td											

Role		Fn1	Fn2	Fn3	Fn4	ISO	AF-ON	Fn4	DISP	OK	Microphone	QUAL	WB	Video	AF-ON	AF-ON	WB	ISO	WB	BKT	L-Fn	L-Fn2	Fn	Fn	M-SET	01
[Release mode]		✓	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	—	—	—	—
[Focus mode/AF-area mode]		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	—	—	—	—
[Auto bracketing]		✓	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	—	—	—	—
[Multiple exposure]		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	—	—	—	—
[HDR overlay]		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	—	—	—	—
[Exposure delay mode]		✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	—	—	—	—
[Control lock]		✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	—	—	—	—
[1 step spd/aperture]		✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	—	—	—	—
[Choose non-CPU lens number]		✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	—	—	—	—
[M/A]		—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
[Aperture]		—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—
[Aperture (close)]		—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	—
[Aperture (open)]		—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	—	—
[Exposure compensation +]		—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	—
[Exposure compensation -]		—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	—	—	—
[ISO sensitivity (increase)]		—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	—	—	—
[ISO sensitivity (decrease)]		—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	—	—	—
[None]		✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Role with command dial		Fn1	Fn2	Fn3	Fn4	ISO	AF-ON	Fn4	DISP	OK	Microphone	QUAL	WB	Video	AF-ON	AF-ON	WB	ISO	WB	BKT	L-Fn	L-Fn2	Fn	Fn	M-SET	01
[Exposure setting]		—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	—	—	—	—	—	—
[Focus/AF-area mode selection]		—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	—	—	—	—	—	—
[Sub-command dial zoom role]		—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	—	—	—	—	—	—

## **Video Recording**

The roles played by custom controls during video recording are chosen using Custom Setting g2 [Custom controls].

### ■ Customizable Controls

 <b>Fn1</b> [Fn1 button]	 <b>Fn1</b> [Fn1 button]	 <b>[Audio button]</b>	 <b>[Shutter-release button]</b>
 Fn1 button	 Fn1 button	 <b>OK</b> [OK button]	 <b>[Command dials]</b>
Fn1 button bank	Fn1 button	 <b>WB</b> [WB button]	 <b>[Flash mode button]</b>
Shooting menu bank	Fn1 button	 <b>QUAL</b> [QUAL button]	 <b>BKT</b> [BKT button]
                                                                                <img alt="Fn1 button icon			

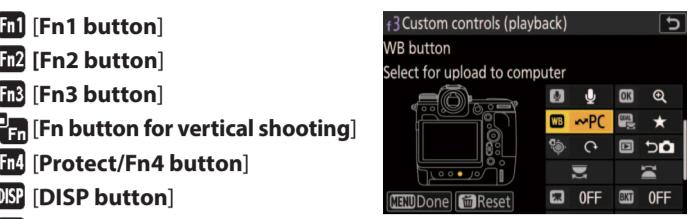
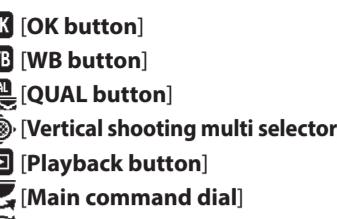
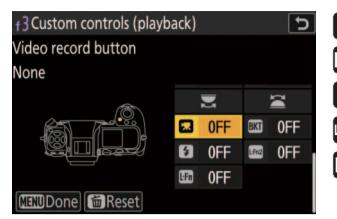
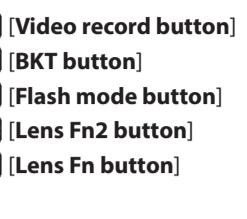
## ■ Available Roles

Role		Fn1	Fn2	Fn3	Fn4	ISO	Fn4	AF-ON	DISP	OK	WB	QUAL	AF-ON	ISO	Fn4	Fn4	BKT	L-Fn	L-Fn2	Fn	Fn	M-SET	01
PRE <sup>[a]</sup>	[Preset focus point]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	
RESET	[Select center focus point]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
↖FOCUS	[Save focus position]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
↗FOCUS	[Recall focus position]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
↔EYES	[Switch eyes]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
AF-ON	[AF-ON]	—	—	—	—	—	—	✓	✓	✓	—	—	✓	—	—	—	—	—	✓	✓	✓	✓	
FAST AF-ON	[Fast AF-ON]	—	—	—	—	—	—	✓	✓	✓	—	—	✓	—	—	—	—	✓	✓	✓	✓	✓	
AF	[AF lock only]	—	—	—	—	—	—	✓	✓	✓	—	—	✓	—	—	—	—	✓	✓	✓	✓	✓	
AE	[AE lock (Hold)]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
AWB	[AWB lock (hold)]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
AE/AWB	[AE/AWB lock (hold)]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
AE	[AE lock only]	—	—	—	—	—	—	✓	✓	✓	—	—	✓	—	—	—	—	✓	✓	✓	✓	✓	
AE/AF	[AE/AF lock]	—	—	—	—	—	—	✓	✓	✓	—	—	✓	—	—	—	—	✓	✓	✓	✓	✓	
FX/DX	[Switch FX/DX]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
ASSIST	[View assist]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
HFLICKER	[High-frequency flicker reduction]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
SL	[Silent mode]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
DISP	[Cycle live view info display]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
OFF	[Live view info display off]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
GRID	[Framing grid]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Role		Fn1	Fn2	Fn3	Fn4	ISO	Fn4	AF-ON	DISP	OK	WB	QUAL	AF-ON	ISO	Fn4	Fn4	BKT	L-Fn	L-Fn2	Fn	Fn	M-SET	01
Q	[Zoom on/off]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Horiz	[Virtual horizon]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
PEAK	[Focus peaking display]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
MY	[MY MENU]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
TOP	[Access top item in MY MENU]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
PLAY	[Playback]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
FP	[Filtered playback]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
FPT	[Filtered playback (select criteria)]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
PA	[Power aperture (open)]	✓	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	—	
PC	[Power aperture (close)]	—	✓	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	
EXC	[Exposure compensation +]	✓	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	
EXM	[Exposure compensation -]	—	✓	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	
ISO+	[ISO sensitivity (increase)]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	
ISO-	[ISO sensitivity (decrease)]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	
HZ+	[Hi-Res Zoom +]	✓	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	
HZ-	[Hi-Res Zoom -]	—	✓	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	—	—	
PZ+	[Power zoom +]	✓	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
PZ-	[Power zoom -]	—	✓	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
PT	[Pattern tone range]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
REC	[Record videos]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Role		Fn1	Fn2	Fn3	Fn4	ISO	Fn4	AF-ON	DISP	OK	WB	QUAL	AF-ON	ISO	Fn4	Fn4	BKT	L-Fn	L-Fn2	Fn	Fn	M-SET	01
=AFON	[Same as AF-ON button]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
SHOOT	[Shooting menu bank]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
MODE	[Shooting mode]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
AREA	[Choose image area]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
EXC	[Exposure compensation]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
ISO	[ISO sensitivity]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
WB	[White balance]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
PICT	[Set Picture Control]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
D-LIT	[Active D-Lighting]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
METERING	[Metering]	✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
AF/AF	[Focus mode/AF-area mode]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
LOCK	[Control lock]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
SENS	[Microphone sensitivity]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
M/A	[Focus (M/A)]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
POWER	[Power aperture]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	
HZ	[Hi-Res Zoom]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	
[None]		✓	✓	✓	✓	✓	—	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Role with command dial		Fn1	Fn2	Fn3	Fn4	ISO	Fn4	AF-ON	DISP	OK	WB	QUAL	AF-ON	ISO	Fn4	Fn4	BKT	L-Fn	L-Fn2	Fn	Fn	M-SET	01
EXPOSURE	[Exposure setting]	—	—</																				

## Playback

The roles played by custom controls during playback are chosen using Custom Setting f3 [Custom controls (playback)].

### ■ Customizable Controls

 Fn1 [Fn1 button] Fn1 button None	 Fn2 [Fn2 button] Fn2 button Select for upload to computer	 Fn3 [Fn3 button] Fn3 [Fn button for vertical shooting] Fn4 [Protect/Fn4 button] DISP [DISP button] [Audio button]	 OK [OK button] WB [WB button] DUAL [QUAL button] [Vertical shooting multi selector] [Playback button] [Main command dial] [Sub-command dial]	 Video record button BKT [BKT button] Flash mode button Lfn2 [Lens Fn2 button] Lfn [Lens Fn button]
---	--	---	--	--

### ■ Available Roles

Role	Fn1	Fn2	Fn3	Fn	Fn4	DISP	[Microphone]	OK	WB	QUAL	[Shutter speed dial]	[Exposure compensation dial]	[Zoom dial]	[Focus stick]	[AF-ON button]	BKT	[Flash]	Lfn2	Lfn
[Protect]	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓
[Delete]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓
[Zoom on/off]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓
[Filtered playback]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓
[Filtered playback (select criteria)]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓
[Start series playback]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓
[Voice memo]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓
[~PC]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓
[~FTP]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓
[DISP]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓
[Thumbnail on/off]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓
[View histograms]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓
[Choose slot and folder]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓
[Resume shooting]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	—	—	✓	✓	✓	✓	✓
[Rating]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	—	—	✓	✓	✓	—	—
[  switched]	—	—	—	—	—	—	—	—	—	—	—	✓	—	—	—	—	—	—	—
[  unswitched]	—	—	—	—	—	—	—	—	—	—	—	✓	—	—	—	—	—	—	—
[None]	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	—	✓	✓	—	✓	✓	✓	✓	✓
Role with command dial	Fn1	Fn2	Fn3	Fn	Fn4	DISP	[Microphone]	OK	WB	QUAL	[Shutter speed dial]	[Exposure compensation dial]	[Zoom dial]	[Focus stick]	[AF-ON button]	BKT	[Flash]	Lfn2	Lfn
[Frame advance]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	✓	—	—	—
[Video playback]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	✓	—	—	—
[Frame advance zoom position]	—	—	—	—	—	—	—	—	—	—	—	—	—	—	✓	✓	—	—	—