

DIGITAL CAMERA



Reference Guide

- Read this document thoroughly before using the camera.
- To ensure proper use of the camera, be sure to read "For Your Safety" (page 25).
- After reading this document, keep it readily accessible for future reference.

When Your First Photo Can't Wait

Getting Ready

1 Insert the battery (\Box 77).

When Your First Photo Can't Wait

2

3 Attach a lens (**1**83).

2 Insert a memory card (🗆 81).


• Align the white dot on the lens with the white dot on the camera body (①) and rotate the lens in the direction shown (2).

For information on charging the battery, see "Charging the Battery" (272).

• A strap can be attached to the camera. For more information, see "Attaching the Strap" (C271).

4 Turn the camera on and then choose a language and set the clock ($\square 85$).



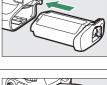



■ Take (□288) and View (□297) Pictures


1 To focus, press the shutter-release button halfway (i.e., lightly press the shutter-release button, stopping when it is pressed halfway).



2 Without lifting your finger from the shutter-release button, press the button the rest of the way down to take the picture.



3 View the picture.

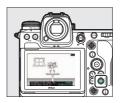

Package Contents

Be sure all items listed here were included with your camera.

Camera



- DK-33 rubber eyecup (comes attached to camera, ¹²843)
- BF-N1 body cap



- EN-EL18d rechargeable Li-ion battery with terminal cover
- Memory cards are sold separately.
- MH-33 battery chargers and EH-7P charging AC adapters are sold separately in some countries or regions.

🔽 The Nikon Download Center

Visit the Nikon download center to download firmware updates, NX Studio and other Nikon software, and manuals for Nikon products including cameras, NIKKOR lenses, and flash units.

https://downloadcenter.nikonimglib.com/

- MH-33 battery charger
- EH-7P charging AC adapter (supplied with a plug adapter attached in countries or regions where required; shape depends on country of sale— (275)
- □ HDMI/USB cable clip (□ 847)
- AN-DC24 strap (271)
- Warranty
- 🖵 User's Manual
- UC-E24 USB cable (¹¹ 323)

About This Document

Symbols

This document employs the following symbols. Use them to help locate the information you need.

V	This icon marks notes, information that should be read before using this product.
Ø	This icon marks tips, additional information you may find helpful when using this product.
	This icon marks references to other sections in this document.

Conventions

- This camera uses CFexpress (Type B) and XQD memory cards. Memory cards of all types are referred to throughout this document as "memory cards". Where it is necessary to distinguish between the different types, the terms "CFexpress memory card" and "XQD memory card" may be used.
- Throughout this document, battery chargers are referred to as "battery chargers" or "chargers".
- Throughout this document, the display in camera monitor and viewfinder during shooting is referred to as the "shooting display". In most cases, the illustrations show the monitor.
- Throughout this document, smartphones and tablets are referred to as "smart devices".
- Throughout this document, the term "default settings" is used to refer to the settings in effect at shipment. The explanations in this document assume that default settings are used.

Table of Contents

When Your First Photo Can't Wait	2
Package Contents	4
About This Document	
For Your Safety	25
Notices	

Getting to Know the Camera and Its Menus 34

Parts of the Camera		34
	Camera Body	34
	The Control Panel	
	The Monitor	42
	The Viewfinder	46
	Touch Controls	53
The Menus		59
	The MENU Button	59
	The i Button (the i Menu)	65

First Steps

71
72
72
75
77
79
80
81
82
83
85

Taking Photographs	88
Shooting Videos	93
Playback	97
Viewing Videos	98
Deleting Unwanted Pictures	101

Shooting Settings

102

Image Recording Options (Image Area, Quality, and Size)10		
Adjusting Image Area Settings	102	
Adjusting Image Quality	105	
Choosing an Image Size		
Focus	110	
Focus Mode	110	
AF-Area Mode	113	
Choosing a Subject Type for Autofocus	119	
Focus Point Selection	123	
The Touch Shutter	124	
Focus Lock	126	
Manual Focus	129	
Exposure	132	
Choosing a Shooting Mode	132	
Long Time-Exposures (Mode M Only)	138	
Autoexposure Lock	141	
Exposure Compensation	143	
Release Mode	145	
Choosing a Release Mode	145	
High-Speed Frame Capture (C30/C120)		
Using the Self-Timer (🕙)		

ISO Sensitiv	ity	
	About ISO Sensitivity	
	Auto ISO Sensitivity Control	
White Balar	се	
	About White Balance	
	Fine-Tuning White Balance	
	Choosing a Color Temperature	
	Preset Manual	170
Bracketing .		177
	Auto Bracketing Set	
	Exposure and Flash Bracketing	
	White Balance Bracketing	
	ADL Bracketing	
Picture Con	trols	
	About Picture Controls	
	Modifying Picture Controls	
	Custom Picture Controls	
Location Da	ıta	
	Location Data Options	
Two-Button	Reset	
	Photo Shooting Menu	
	Video Recording Menu	211
	Custom Settings Menu	
	Other Settings	213
Video Rec	ording	214
Video File T	ypes	
	Tone Mode	215
Video Fram	e Size and Rate Options	216
	Average Bit Rate	

Video Image Area Options	218
Points to Note When Filming Videos	220
Recording HLG Video	223
View Assist	224
Recording N-Log Video	225
View Assist	
Viewing and Retouching Pictures	227
Viewing Pictures	
Full-Frame Playback	
Thumbnail Playback	
Photo Information	230
File Information	231
Exposure Data	232
Highlight Display	232
RGB Histogram	233
Shooting Data	235
Overview	239
The $m{i}$ Button (Playback Mode)	241
Photos	241
Videos	245
Videos (Playback Paused)	
Playback Zoom	247
Using Playback Zoom	247
Protecting Pictures from Deletion	249
Rating Pictures	251
Selecting Pictures for Upload	253
Filtered Playback	255
[Filtered Playback Criteria]	255
Viewing Slide Shows	257
During the Show	258

Deleting Pictures	259
Using the Delete Button	
Deleting Multiple Pictures	
Creating Retouched Copies	
RAW Processing	
Trim	
Resize	
D-Lighting	
Straighten	
Distortion Control	
Perspective Control	
Monochrome	
Overlay (Add)	
"Lighten" and "Darken"	
Editing Videos	200
Trimming Videos	
5	
Trimming Videos	
Trimming Videos Saving Selected Frames as JPEG Stills	290 294 295
Trimming Videos Saving Selected Frames as JPEG Stills	
Trimming Videos Saving Selected Frames as JPEG Stills Voice Memos Recording Voice Memos	
Trimming Videos Saving Selected Frames as JPEG Stills Voice Memos Recording Voice Memos Playing Voice Memos	
Trimming Videos Saving Selected Frames as JPEG Stills Voice Memos Recording Voice Memos Playing Voice Memos Deleting Voice Memos	290 294 295 295 298 299 300
Trimming Videos Saving Selected Frames as JPEG Stills Voice Memos Recording Voice Memos Playing Voice Memos Deleting Voice Memos Connecting to HDMI TVs and Recorders	290 294 295 295 298 299 300 300
Trimming Videos Saving Selected Frames as JPEG Stills Voice Memos Recording Voice Memos Playing Voice Memos Deleting Voice Memos Connecting to HDMI TVs and Recorders Connecting to HDMI Devices	290 294 295 295 298 299 300 300 301
Trimming Videos Saving Selected Frames as JPEG Stills Voice Memos Recording Voice Memos Playing Voice Memos Deleting Voice Memos Connecting to HDMI TVs and Recorders Connecting to HDMI Devices TVs	290 294 295 295 298 299 300 300 301 302
Trimming Videos Saving Selected Frames as JPEG Stills Voice Memos Recording Voice Memos Playing Voice Memos Deleting Voice Memos Connecting to HDMI TVs and Recorders Connecting to HDMI Devices TVs Recorders	290 294 295 295 298 299 300 300 301 302 302

Connecting to Computers or FTP Servers 321 Computers: Connecting via Ethernet or FTP Servers: Connecting via Ethernet or Copying Pictures to a Computer Using NX Studio324 Uploading Pictures354

311

Troublesho	oting Wireless LAN and Ethernet Connections	
	Problems and Solutions	
	Error Codes	
Connectin	g to Other Cameras	401
What Inter-	camera Connections Can Do for You	
	Camera-Based Remote Photography	
	(Synchronized Release)	401
	Clock Synchronization	
	(Synchronize Date and Time)	401
Synchroniz	ed Release	
	Configuring and Using Synchronized Release	
Synchronizi	ing Camera Clocks	
Flash Phot	tography	422
"On-Camera	a" Versus "Remote"	
	Camera-Mounted Flash Units	
	Remote Flash Photography	
Using an Or	n-Camera Flash	
Flash Contr	ol Mode	
Flash Mode	S	
Flash Comp	ensation	432
	Adjusting Flash Compensation	432
FV Lock		434
Remote Fl	ash Photography	437
What Is Ren	note Flash Photography?	437
	Using Remote Flash Units	438
Radio AWL		439
	Establishing a Wireless Connection	
	Remote Flash Photography	
	Adding a Shoe-Mounted Flash Unit	452

Optical AW	L	453
	Using Optical AWL with the SB-5000 or SB-500	454
/lenu Gui	de	464
Defaults		
	Photo Shooting Menu Defaults	
	Video Recording Menu Defaults	
	Custom Settings Menu Defaults	471
	Playback Menu Defaults	
	Setup Menu Defaults	
	Network Menu Defaults	
🗅 The Pho	to Shooting Menu: Shooting Options	491
Shootir	ng Menu Bank	493
	Renaming Shooting Menu Banks	
	Copying Shooting Menu Banks	
	Restoring Default Settings	
Extend	ed Menu Banks	
Storage	e Folder	
	Renaming Folders	497
	Select Folder by Number	498
	Select Folder from List	500
File Nar	ming	
Role Pla	ayed by Card in Slot 2	503
	Deleting Copies	505
Image /	Area	506
Image (Quality	
Image S	Size	507
RAW Re	ecording	507
ISO Ser	sitivity Settings	508
White E	Balance	510
Set Pict	ure Control	510
Manage	e Picture Control	510
Color S	pace	511

Active D-Lighting	512
Long Exposure NR	514
High ISO NR	515
Vignette Control	516
Diffraction Compensation	517
Auto Distortion Control	517
Photo Flicker Reduction	518
Metering	520
Flash Control	521
Flash Control Mode	
Wireless Flash Options	
Remote Flash Control	
Radio Remote Flash Info	524
Focus Mode	525
AF-Area Mode	525
AF Subject Detection Options	
Vibration Reduction	526
Auto Bracketing	527
Multiple Exposure	528
Creating a Multiple Exposure	530
HDR Overlay	537
Taking HDR Photographs	538
Interval Timer Shooting	542
Interval-Timer Photography	545
Time-Lapse Video	556
Recording Time-Lapse Videos	558
Focus Shift Shooting	568
Focus Shift Photography	569
🐙 The Video Recording Menu: Video Recording Options	
Shooting Menu Bank	577
Extended Menu Banks	577
Storage Folder	577
File Naming	578

Destination	578
Video File Type	
Frame Size/Frame Rate	
Image Area	
ISO Sensitivity Settings	
White Balance	
Set Picture Control	
Manage Picture Control	581
HLG Quality	582
Active D-Lighting	583
High ISO NR	583
Vignette Control	584
Diffraction Compensation	584
Auto Distortion Control	
Video Flicker Reduction	585
Metering	
Focus Mode	586
AF-Area Mode	586
AF Subject Detection Options	587
Subject Detection	587
AF When Subject Not Detected	
Vibration Reduction	
Electronic VR	
Microphone Sensitivity	
Attenuator	
Frequency Response	
Wind Noise Reduction	589
Mic Jack Plug-in Power	590
Headphone Volume	
Timecode	591
External Rec. Cntrl (HDMI)	

🖋 Custom Settings: Fine-Tuning Camera Settings	
Custom Settings Bank	597
Renaming Custom Settings Banks	597
Copying Custom Settings Banks	597
Restoring Default Settings	597
a: Focus	598
a1: AF-C Priority Selection	
a2: AF-S Priority Selection	
a3: Focus Tracking with Lock-On	600
Blocked Shot AF Response	600
Subject Motion	600
a4: Focus Points Used	601
a5: Store Points by Orientation	602
a6: AF Activation	604
a7: Focus Point Persistence	605
a8: Limit AF-Area Mode Selection	606
a9: Focus Mode Restrictions	606
a10: Focus Point Wrap-Around	606
a11: Focus Point Display	607
Manual Focus Mode	607
Dynamic-Area AF Assist	607
AF-C In-Focus Display	608
a12: Built-in AF-Assist Illuminator	609
a13: Focus Peaking	610
Focus Peaking Display	610
Focus Peaking Sensitivity	610
Focus Peaking Highlight Color	610
a14: Manual Focus Ring in AF Mode	611
b: Metering/Exposure	612
b1: ISO sensitivity Step Value	612
b2: EV Steps for Exposure Cntrl	612

b3: Easy Exposure Compensation	613
b4: Matrix Metering Face Detection	613
b5: Center-Weighted Area	614
b6: Fine-Tune Optimal Exposure	615
b7: Keep Exp. When f/ Changes	616
c: Timers/AE Lock	
c1: Shutter-Release Button AE-L	617
c2: Self-Timer	617
c3: Power Off Delay	618
d: Shooting/Display	619
d1: Continuous Shooting Speed	619
d2: Maximum Shots per Burst	619
d3: Limit Release Mode Selection	620
d4: Sync. Release Mode Options	620
d5: Extended Shutter Speeds (M)	621
d6: Limit Selectable Image Area	621
d7: File Number Sequence	622
d8: View Mode (Photo Lv)	
d9: Starlight View (Photo Lv)	626
d10: Warm Display Colors	626
d11: LCD Illumination	627
d12: View All in Continuous Mode	629
d13: Release Timing Indicator	629
d14: Image Frame	630
d15: Grid Type	630
d16: Virtual Horizon Type	631
Roll	632
Pitch	633
d17: Custom Monitor Shooting Display	634
d18: Custom Viewfinder Shooting Display	636

e: Bracketing/Flash	637
e1: Flash Sync Speed	.637
e2: Flash Shutter Speed	.639
e3: Exposure Comp. for Flash	.639
e4: Auto 🕻 ISO Sensitivity Control	.640
e5: Modeling Flash	.640
e6: Auto Bracketing (Mode M)	.641
e7: Bracketing Order	642
e8: Flash Burst Priority	.643
f: Controls	644
f1: Customize 🛿 Menu	644
View Memory Card Info	645
Split-Screen Display Zoom	646
f2: Custom Controls (Shooting)	647
Command Dials	658
f3: Custom Controls (Playback)	659
Command Dials	663
f4: Control Lock	665
f5: Reverse Dial Rotation	666
f6: Release Button to Use Dial	666
f7: Reverse Indicators	.667
f8: Reverse Ring for Focus	667
f9: Focus Ring Rotation Range	668
f10: Control Ring Response	669
f11: Full-Frame Playback Flicks	670
Flick Up/Flick Down	.670
Flick Advance Direction	.671
g: Video	672
g1: Customize 🖬 Menu	672
Multi-Selector Power Aperture	673
Multi Selector Exposure Comp	.673

q2: Custom Controls	674
Command Dials	
g3: Control Lock	
g4: Limit AF-Area Mode Selection	683
g5: Focus Mode Restrictions	683
g6: AF Speed	684
g7: AF Tracking Sensitivity	685
g8: View Assist	685
g9: Zebra Pattern	686
Pattern Tone Range	686
Pattern	686
Highlight Threshold	686
Mid-tone Range	687
g10: Limit Zebra Pattern Tone Range	688
g11: Grid Type	688
g12: Custom Monitor Shooting Display	689
g13: Custom Viewfinder Shooting Display	691
▶ The Playback Menu: Managing Pictures	692
Delete	693
Playback Folder	694
Playback Display Options	694
Delete Pictures from Both Slots	695
Dual-Format Recording PB Slot	695
Filtered Playback Criteria	696
Picture Review	696
After Delete	697
After Burst, Show	698
Rotate Tall	698
Copy Image(s)	699
Copying Pictures	699

The Setup Menu: Camera Setup	
Format Memory Card	
Language	708
Time Zone and Date	
Monitor Brightness	709
Monitor Color Balance	710
Viewfinder Brightness	711
Viewfinder Color Balance	712
Finder Display Size (Photo Lv)	712
Limit Monitor Mode Selection	713
Auto Rotate Info Display	713
AF Fine-Tuning Options	714
Creating and Saving Fine-Tuning Values	716
Choosing a Default Fine-Tuning Value	717
Non-CPU Lens Data	718
Save Focus Position	718
Sensor Shield Behavior at Power Off	719
Clean Image Sensor	719
Image Dust Off Ref Photo	720
Acquiring Image Dust Off Reference Data	720
Pixel Mapping	723
Image Comment	724
Input Comment	724
Attach Comment	724
Copyright Information	725
Artist/Copyright	725
Attach Copyright Information	725

IPTC	6
Creating, Renaming, Editing, and Copying Presets722	27
Deleting Presets722	7
Embedding Presets728	8
Copying Presets to a Memory Card728	8
Copying Presets to the Camera729	9
Voice Memo Options732	2
Voice Memo Control732	2
Audio Output (Playback)732	2
Camera Sounds733	3
Shutter Sound733	3
Beep On/Off733	3
Volume733	3
Pitch734	4
Silent Mode735	5
Touch Controls	6
Enable/Disable Touch Controls	6
Glove Mode736	6
HDMI	6
USB Connection Priority732	7
Location Data (Built-In)737	7
Wireless Remote (WR) Options738	8
LED Lamp738	8
Link Mode739	9
Assign Remote (WR) Fn Button747	1
Conformity Marking74	1
Battery Info742	2
USB Power Delivery744	4
Energy Saving (Photo Mode)	6
Slot Empty Release Lock	7

Save/Load Menu Settings	
Save Menu Settings	753
Load Menu Settings	753
Reset All Settings	754
Firmware Version	754
The Network Menu: Network Connections	755
Airplane Mode	756
Wired LAN	756
Connect to Smart Device	757
Pairing (Bluetooth)	757
Select Pictures for Upload	758
Wi-Fi connection	758
Upload While Off	759
Location Data (Smart Device)	759
Connect to Computer	
Network Settings	
Connection Type	
Options	
Connect to FTP Server	
Network Settings	
Options	
Connect to Other Cameras	770
Synchronized Release	770
Network Settings	770
Group Name	772
Master/Remote	772
Remote Camera List	772
Synchronize Date and Time	772
USB	773
Start via LAN	773
Router Frequency Band	
MAC Address	

≂ My Menu/ c Recent Settings	775
➡ My Menu: Creating a Custom Menu	775
Recent Settings: Accessing Recently-Used	
Settings	780
Troubleshooting	781
Before Contacting Customer Support	781
Problems and Solutions	783
Battery/Display	783
Shooting	784
Playback	790
Bluetooth and Wi-Fi (Wireless Networks)	792
Miscellaneous	793
Alerts and Error Messages	794
Alerts	794
Error Messages	797
Technical Notes	801
Technical Notes Compatible Lenses and Accessories	
Compatible Lenses and Accessories	
Compatible Lenses and Accessories Camera Displays	
Compatible Lenses and Accessories Camera Displays The Monitor	
Compatible Lenses and Accessories Camera Displays The Monitor The Viewfinder	
Compatible Lenses and Accessories Camera Displays The Monitor The Viewfinder The Control Panel	
Compatible Lenses and Accessories Camera Displays The Monitor The Viewfinder The Control Panel Compatible Flash Units	
Compatible Lenses and Accessories Camera Displays The Monitor The Viewfinder The Control Panel Compatible Flash Units The Nikon Creative Lighting System (CLS)	801 802 802 809 813 813 816 816

Compatible Accessories	
Calibrating Batteries	850
Attaching a Power Connector and AC Adapter	
Software	
Caring for the Camera	
Long-Term Storage	856
Cleaning	
Image Sensor Cleaning	858
Manual Cleaning	
Caring for the Camera and Battery: Cautions	
Cautions: Using the Camera	
Cautions: Using Batteries	
Cautions: Using the Charger	
Cautions: Using the Charging AC Adapter	
Specifications	
Nikon Z 9 Digital Camera	
Approved Memory Cards	
Memory Card Capacity	
Battery Endurance	
Trademarks and Licenses	
Cautions: Location Data (GPS/GLONASS)	
Notices	
Bluetooth and Wi-Fi (Wireless LAN)	901
Index	907

For Your Safety

To prevent damage to property or injury to yourself or to others, read "For Your Safety" in its entirety before using this product.

After reading these safety instructions, keep them readily accessible for future reference.

 \triangle **DANGER**: Failure to observe the precautions marked with this icon carries a high risk of death or severe injury.

WARNING: Failure to observe the precautions marked with this icon could result in death or severe injury.

 \triangle **CAUTION**: Failure to observe the precautions marked with this icon could result in injury or property damage.

Do not use while walking or operating a vehicle.

Failure to observe this precaution could result in accidents or other injury.

Do not disassemble or modify this product. Do not touch internal parts that become exposed as the result of a fall or other accident.

Failure to observe these precautions could result in electric shock or other injury.

Should you notice any abnormalities such as the product producing smoke, heat, or unusual odors, immediately disconnect the battery or power source.

Continued operation could result in fire, burns or other injury.

Keep dry. Do not handle with wet hands. Do not handle the plug with wet hands.

Failure to observe these precautions could result in fire or electric shock.

Do not let your skin remain in prolonged contact with this product while it is on or plugged in.

Failure to observe this precaution could result in low-temperature burns.

Do not use this product in the presence of flammable dust or gas such as propane, gasoline or aerosols.

Failure to observe this precaution could result in explosion or fire.

Do not directly view the sun or other bright light source through the lens.

Failure to observe this precaution could result in visual impairment.

Do not aim the flash or AF-assist illuminator at the operator of a motor vehicle.

Failure to observe this precaution could result in accidents.

Keep this product out of reach of children.

Failure to observe this precaution could result in injury or product malfunction. In addition, note that small parts constitute a choking hazard. Should a child swallow any part of this product, seek immediate medical attention.

Do not entangle, wrap or twist the straps around your neck. Failure to observe this precaution could result in accidents.

Do not use batteries, chargers, or AC adapters not specifically designated for use with this product. When using batteries, chargers, and AC adapters designated for use with this product, do not:

- Damage, modify, forcibly tug or bend the cords or cables, place them under heavy objects, or expose them to heat or flame.
- Use travel converters or adapters designed to convert from one voltage to another or with DC-to-AC inverters.

Failure to observe these precautions could result in fire or electric shock.

Do not handle the plug when charging the product or using the AC adapter during thunderstorms.

Failure to observe this precaution could result in electric shock.

Do not handle with bare hands in locations exposed to extremely high or low temperatures.

Failure to observe this precaution could result in burns or frostbite.

\triangle CAUTION

Do not leave the lens pointed at the sun or other strong light sources. Light focused by the lens could cause fire or damage to product's internal parts. When shooting backlit subjects, keep the sun well out of the frame. Sunlight focused into the camera when the sun is close to the frame could cause fire.

Turn the product off when its use is prohibited. Disable the location data feature. End location tracking. Disable wireless features when the use of wireless equipment is prohibited.

The radio-frequency emissions produced by this product could interfere with equipment onboard aircraft or in hospitals or other medical facilities.

Remove the battery and disconnect the AC adapter if this product will not be used for an extended period.

Failure to observe this precaution could result in fire or product malfunction.

Do not fire the flash in contact with or in close proximity to the skin or objects.

Failure to observe this precaution could result in burns or fire.

Do not leave the product where it will be exposed to extremely high temperatures, for an extended period such as in an enclosed automobile or in direct sunlight.

Failure to observe this precaution could result in fire or product malfunction.

Do not look directly at the AF-assist illuminator.

Failure to observe this precaution could have adverse effects on vision.

Do not transport cameras or lenses with tripods or similar accessories attached.

Failure to observe this precaution could result in injury or product malfunction.

Do not touch the memory card when a high-temperature warning is displayed in the monitor or viewfinder.

The memory card will be hot, potentially causing burns or causing the card to be dropped and damaged when removed.



⚠ DANGER (Batteries)

Do not mishandle batteries.

Failure to observe the following precautions could result in the batteries leaking, overheating, rupturing, or catching fire:

- Use only rechargeable batteries approved for use in this product.
- Do not expose batteries to flame or excessive heat.
- Do not disassemble.
- Do not short-circuit the terminals by touching them to necklaces, hairpins, or other metal objects.
- Do not expose batteries of the products in which they are inserted to powerful physical shocks.
- Do not step on batteries, pierce them with nails, or strike them with hammers.

Charge only as indicated.

Failure to observe this precaution could result in the batteries leaking, overheating, rupturing, or catching fire.

If battery liquid comes into contact with the eyes, rinse with plenty of clean water and seek immediate medical attention.

Delaying action could result in eye injuries.

Follow the instructions of airline personnel.

Batteries left unattended at high altitudes in an unpressurized environment may leak, overheat, rupture, or catch fire.

⚠ WARNING (Batteries)

Keep batteries out of reach of children.

Should a child swallow a battery, seek immediate medical attention.

Keep batteries out of reach of household pets and other animals.

The batteries could leak, overheat, rupture, or catch fire if bitten, chewed, or otherwise damaged by animals.

Do not immerse batteries in water or expose to rain.

Failure to observe this precaution could result in fire or product malfunction. Immediately dry the product with a towel or similar object should it become wet.

Discontinue use immediately should you notice any changes in the batteries, such as discoloration or deformation. Cease charging EN-EL18d rechargeable batteries if they do not charge in the specified period of time.

Failure to observe these precautions could result in the batteries leaking, overheating, rupturing, or catching fire.

When batteries are no longer needed, insulate the terminals with tape. Overheating, rupture, or fire may result should metal objects come into contact with the terminals.

If battery liquid comes into contact with a person's skin or clothing, immediately rinse the affected area with plenty of clean water.

Failure to observe this precaution could result in skin irritation.

Notices

- No part of the documentation included with this product may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without Nikon's prior written permission.
- Nikon reserves the right to change the appearance and specifications of the hardware and software described in this documentation at any time and without prior notice.
- Nikon will not be held liable for any damages resulting from the use of this product.
- While every effort has been made to ensure that the information in this documentation is accurate and complete, we would appreciate it were you to bring any errors or omissions to the attention of the Nikon representative in your area (address provided separately).

Notice Concerning Prohibition of Copying or Reproduction

Note that simply being in possession of material that has been digitally copied or reproduced by means of a scanner, digital camera, or other device may be punishable by law.

· Items prohibited by law from being copied or reproduced

Do not copy or reproduce paper money, coins, securities, government bonds, or local government bonds, even if such copies or reproductions are stamped "Sample".

The copying or reproduction of paper money, coins, or securities which are circulated in a foreign country is prohibited.

Unless the prior permission of the government has been obtained, the copying or reproduction of unused postage stamps or post cards issued by the government is prohibited.

The copying or reproduction of stamps issued by the government and of certified documents stipulated by law is prohibited.

Cautions on certain copies and reproductions

The government has issued cautions on copies or reproductions of securities issued by private companies (shares, bills, checks, gift certificates, etc.), commuter passes, or coupon tickets, except when a minimum of necessary copies are to be provided for business use by a company. Also, do not copy or reproduce passports issued by the government, licenses issued by public agencies and private groups, ID cards, and tickets, such as passes and meal coupons.

• Comply with copyright notices

Under copyright law, photographs or recordings of copyrighted works made with the camera cannot be used without the permission of the copyright holder. Exceptions apply to personal use, but note that even personal use may be restricted in the case of photographs or recordings of exhibits or live performances.

Use Only Nikon Brand Electronic Accessories

Nikon cameras include complex electronic circuitry. Only Nikon brand electronic accessories (including lenses, chargers, batteries, AC adapters, and flash accessories) certified by Nikon specifically for use with this Nikon digital camera are engineered and proven to operate within the operational and safety requirements of this electronic circuitry.

The use of non-Nikon electronic accessories could damage the camera and may void your Nikon warranty. The use of third-party rechargeable Li-ion batteries not bearing the Nikon

kon Nikon Nik byjn uoyjn uo byjn uoyjn uo

holographic seal shown at right could interfere with normal operation of the camera or result in the batteries overheating, igniting, rupturing, or leaking. For more information about Nikon brand accessories, contact a local authorized Nikon dealer.

Memory Cards

- Memory cards may be hot after use. Observe due caution when removing memory cards from the camera.
- Do not perform the following operations during formatting or while data are being recorded, deleted, or copied to a computer or other device. Failure to observe these precautions could result in loss of data or in damage to the camera or card.
 - Do not remove or insert memory cards.
 - Do not turn the camera off.
 - Do not remove the battery.
 - Do not disconnect AC adapters.
- Do not touch the card terminals with your fingers or metal objects.
- Do not use excessive force when handling memory cards. Failure to observe this precaution could damage the card.
- Do not bend or drop memory cards or subject them to strong physical shocks.
- Do not expose memory cards to water, heat, or direct sunlight.
- Do not format memory cards in a computer.

Before Taking Important Pictures

Before taking pictures on important occasions (such as at weddings or before taking the camera on a trip), take a test shot to ensure that the camera is functioning normally. Nikon will not be held liable for damages or lost profits that may result from product malfunction.

🔽 Life-Long Learning

As part of Nikon's "Life-Long Learning" commitment to ongoing product support and education, continually-updated information is available on-line at the following sites:


- For users in the U.S.A.: https://www.nikonusa.com/
- For users in Europe: https://www.europe-nikon.com/support/
- For users in Asia, Oceania, the Middle East, and Africa: https://www.nikon-asia.com/

Visit these sites to keep up-to-date with the latest product information, tips, answers to frequently-asked questions (FAQs), and general advice on digital imaging and photography. Additional information may be available from the Nikon representative in your area. See the following URL for contact information: https://imaging.nikon.com/

Getting to Know the Camera and Its Menus


Parts of the Camera

Camera Body

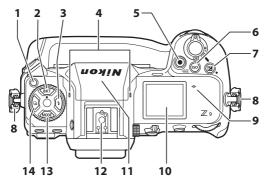


- 1 Release mode dial lock release (© 145)
- 2 **BKT** button (^[]] 177)
- 3 🕻 button (🎞 429)
- 4 Stereo microphone (for videos;
- 5 Video-record button (1193)
- 6 **ISO** () button (🕮 154)
- 7 🖬 button (🕮 143)


- 8 Eyelet for camera strap (🕮 71)
- 9 (focal plane mark; 🕮 131)
- 10 Control panel (241, 813)
- 11 GNSS antenna (🕮 204)
- 12 Accessory shoe (for optional flash unit; 12423, 816)
- 13 MODE button (1132)
- 14 🖳 button (🕮 145)

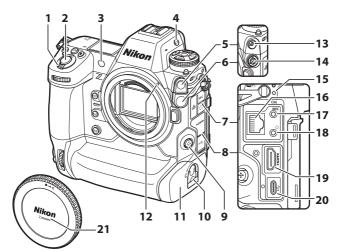

- 1 Power switch (🕮 85, 88)
- 2 Shutter-release button (🗆 88)
- 3 AF-assist illuminator (
 90, 609) Red-eye reduction lamp (
 429)
 - Self-timer lamp (CII 152)
- 4 |🗆 | button (🕮 50, 713)
- 5 Flash sync terminal cover
- 6 Ten-pin remote terminal cover
- 7 Cover for microphone, headphone, and Ethernet connectors
- 8 Cover for USB and HDMI connectors
- 9 Focus-mode button (🕮 110)

- 10 Battery chamber cover latch (⁽¹⁾77)
- 11 Battery chamber cover (CD 77)
- 12 Lens mounting mark (🕮 83)
- 13 Flash sync terminal (11425)
- 14 Ten-pin remote terminal
- 15 Charge lamp (CD 75)
- 16 Ethernet connector (🕮 346, 382)
- 17 Connector for external microphone (🖽 845)
- 18 Headphone connector (🕮 590)
- 19 HDMI connector (🕮 300)
- 20 USB connector (🕮 323, 744)
- 21 Body cap (🖽 83)

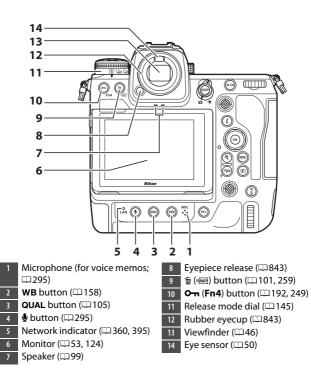

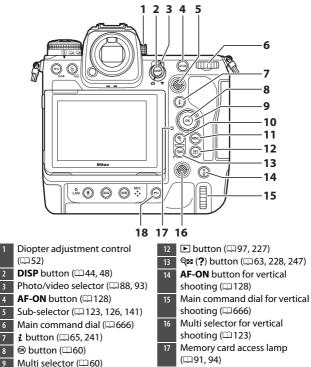

2


8

10

€ button (□ 129, 228, 247)

MENU button (2259, 464)

18 *i* button for vertical shooting (165, 241)

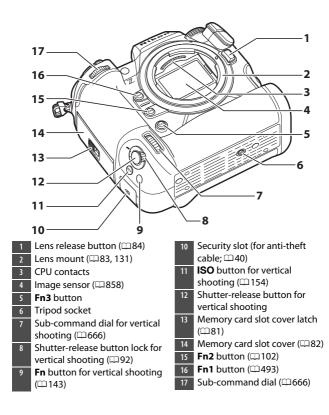

🔽 Do Not Touch the Image Sensor or Sensor Shield

Under no circumstances should you poke or exert pressure on the image sensor or sensor shield (\Box 719) or subject them to powerful air currents from a blower. Failure to observe this precaution could scratch or otherwise damage the sensor or shield. For information on cleaning the image sensor, see "Image Sensor Cleaning" (\Box 858).

🖉 Notes on the Monitor

The angle of the monitor can be adjusted.













Product Serial Number

The serial number for this product can be found by opening the monitor.




🖉 The GNSS Antenna

If possible, stay in the open when using location data services. Keep the antenna pointed to the sky for best reception.

🖉 The LCD Illuminator


Rotating the power switch to activates the backlights for the buttons and control panel (LCD illuminator). The backlights will remain lit for a few seconds after the power switch is released. The backlights turn off when the switch

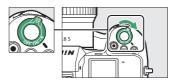

is rotated to * a second time or the shutter-release button is pressed halfway. Activating the button backlight makes the camera easier to use in the dark.


The Security Slot

The security slot serves as an attachment point for third-party anti-theft cables. It is compatible and intended for use with Kensington security cable locks. For more information, see the documentation provided with the security cable lock.

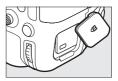


The Control Panel


The control panel lights when the camera is on. At default settings, the following indicators are displayed. For more information, see "Camera Displays" (\square 802) in "Technical Notes".

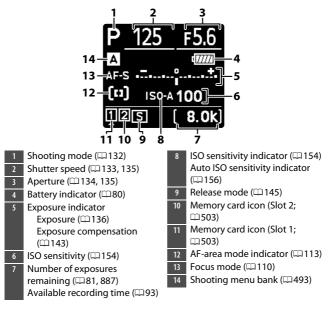

The Monitor

At default settings, the following indicators appear in the monitor. For more information, see "Camera Displays" (\square 802) in "Technical Notes".

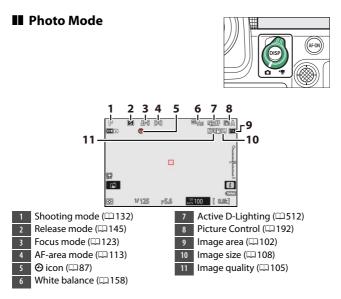

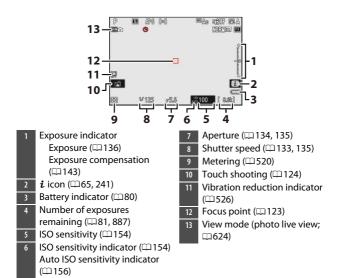

Using the Monitor with the Camera in "Tall" Orientation

When the camera is rotated to take pictures in "tall" (portrait) orientation, the display in the monitor rotates to match (photo mode only).





🖉 Choosing a Display

Press the **DISP** button to cycle the shooting display. Choose from up to five displays, each with a customizable selection of icons and indicators. The items displayed can be selected using Custom Setting d17 [**Custom monitor shooting display**] (\square 634).



Video Mode

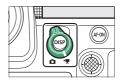

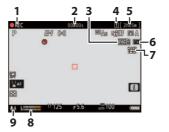



- Recording indicator (193)
- "No video" indicator (194) Video recording time (¹93)
- Frame size and rate ($\square 216$)
- 3
- Destination (2578) 4

- Time remaining (CD93)
- Image area (C218) 6
- 7 Video file type (C214)
- Sound level (1588) 8
- Microphone sensitivity (2588) 9

The Viewfinder

At default settings, the following indicators appear in the viewfinder. For more information, see "Camera Displays" (\Box 802) in "Technical Notes".

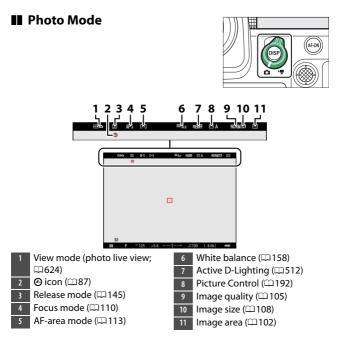

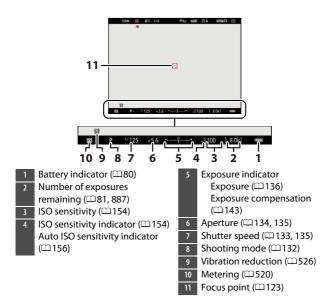

Using the Viewfinder with the Camera in "Tall" Orientation

When the camera is rotated to take pictures in "tall" (portrait) orientation, the display in the viewfinder rotates to match (photo mode only).





🖉 Choosing a Display

Press the **DISP** button to cycle the shooting display. Choose from up to four displays, each with a customizable selection of icons and indicators. The items displayed can be selected using Custom Setting d18 [**Custom viewfinder shooting display**] (\square 636).



Video Mode

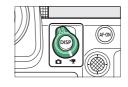

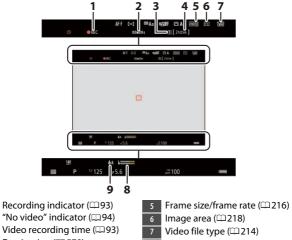

- Destination (🕮 578)
- 4 Time remaining (🕮 93)
- 8 Sound level (🕮 588)
- 9 Microphone sensitivity (2588)

The Monitor Mode Button and the Eye Sensor

Placing your eye to the viewfinder activates the eye sensor, switching the display from the monitor to the viewfinder. Note that the eye sensor will also respond to other objects, such as your fingers.

- The viewfinder can be used for menus and playback if desired.
- Press the II (monitor mode) button to cycle between viewfinder and monitor displays.





• Press the II button to cycle through the displays as follows.

[Automatic display switch]: The camera automatically switches between the viewfinder and monitor displays based on information from the eye sensor.

[Viewfinder only]: The monitor remains blank. The viewfinder is used for shooting, menus, and playback.

[Monitor only]: The monitor is used for shooting, menus, and playback. The viewfinder display will remain blank even if you put your eye to the viewfinder.

[Prioritize viewfinder]: The camera functions in a manner similar to existing digital SLR cameras. During photo mode, placing your eye to the viewfinder turns the viewfinder on; the monitor remains off after you take vour eve away.








🔽 The Diopter Adjustment Control

- The viewfinder can be focused by lifting and rotating the diopter adjustment control.
- Be careful not to put your fingers or fingernails in your eye.
- After adjusting diopter, push the diopter adjustment control back into its original position.

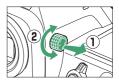

Tilting the Monitor

Putting your eye to the camera when the monitor is tilted will not trigger the viewfinder if both the following conditions are met:

- [Automatic display switch] or [Prioritize viewfinder] is selected for monitor mode, and
- a menu, picture, or other display currently appears in the monitor.

🖉 Extended Use

When using the viewfinder for extended periods, you can select [**Adjust for ease of viewing**] for Custom Setting d8 [**View mode (photo Lv)**] to ensure that viewfinder brightness and hue are adjusted for ease of viewing.

Limit Monitor Mode Selection

You can limit the choice of monitor modes available using the [Limit monitor mode selection] item in the setup menu.

Touch Controls

The touch-sensitive monitor offers a variety of controls that can be operated by touching the display with your fingers. During viewfinder photography, touch controls are disabled and cannot be used for focus or the like.

Focusing and Releasing the Shutter

- Touch the monitor to focus on the selected point (touch AF).
- In photo mode, the shutter will be released when you lift your finger from the display (touch shutter).
- Touch shutter/AF settings can be adjusted by tapping the 📸 icon (🕮 124).

Adjusting Settings

- Tap highlighted settings in the display.
- You can then choose the desired option by tapping icons or sliders.








• Tap rightarrow or press ightarrow to select the chosen option and return to the previous display.

• In full-frame playback, touching the bottom of the display brings up a frame-advance bar. Slide your finger left or right over the bar to scroll rapidly to other pictures.

- Playback
- Flick left or right to view other pictures during full-frame playback.




 To zoom in on a picture displayed during full-frame playback, use a stretch gesture or give the display two quick taps. You can adjust the zoom ratio using stretch gestures to zoom in and pinch gestures to zoom out.

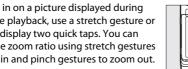





- Use slide gestures to view other parts of the picture during zoom.
- Giving the display two quick taps while zoom is in effect cancels zoom.
- To "zoom out" to a thumbnail view, use a pinch gesture during full-frame playback.
 Use pinch and stretch to choose the number of pictures displayed from 4, 9, and 72 frames.

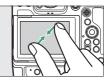

Viewing Videos

- Videos are indicated by a 🐙 icon; to start playback, tap the on-screen guide.
- Tap 🕁 to exit to full-frame playback.



I The i Menu

• Tap the **D** icon to display the *i* menu during shooting ($\square 65$).



- Tap items to view and change options.
- You can choose the items displayed in the
 - *i* menu (□170).

	Set Picture Control				
BA	™A₀	NÔRM	Ĩ	[11]	AF-S
0	(a)SPT	SHOOTIA	⊜≡	₩	1.5
	🖬 🕁 🗷 Set				

Text Entry

• When a keyboard is displayed, you can enter text by tapping the keys.




- 1 Text display area
 - Keyboard area
- 3 Keyboard selection
- To position the cursor, tap ◀ or ➤ or tap directly in the text display area.
- To cycle through the upper- and lower-case and symbol keyboards, tap the keyboard selection button.

Navigating the Menus

• Slide up or down to scroll.

• Tap a menu icon to choose a menu.

- Tap menu items to display options. You can then choose the desired option by tapping icons or sliders.
- To exit without changing settings, tap 5.

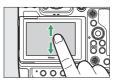



۵,	PLAYBACK MENU	
-	Playback folder	ALL >
1	Playback display options	,
	Delete pictures from both slots	0N*= >
	Dual-format recording PB slot	(1)
1	Filtered playback criteria	>
;⊞	Picture review	OFF >
₽	After delete	



🔽 Cautions: The Touch Screen

- The touch screen responds to static electricity. It may not respond when touched with fingernails or gloved hands. For improved response when using the touch screen with gloves, select [ON] for [Touch controls] > [Glove mode] in the setup menu.
- Do not touch the screen with sharp objects.
- Do not use excessive force.
- The screen may not respond when covered with third-party protective films.
- The screen may not respond when touched simultaneously in multiple locations.


Enabling or Disabling Touch Controls


Touch controls can be enabled or disabled using the [**Touch controls**] item in the setup menu.

The Menus

The MENU Button

Press the MENU button to view the menus.

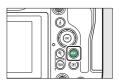


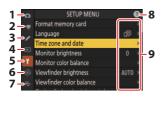

- 1 **(PHOTO SHOOTING MENU**] ((1)491)
- P \Record [VIDEO RECORDING MENU] (□ 576)
- 3 ✔ [CUSTOM SETTINGS MENU] (□ 593)
- 4 [PLAYBACK MENU] (11692)
- 5 Y [SETUP MENU] (1 706)
- 6 🕲 [NETWORK MENU] (11755)
- 7 ≂ [MY MENU]/
 - [RECENT SETTINGS]*
 (□ 775)
- 8 🕐 (help) icon (🎞 63)
- 9 Current settings
- * You can choose the menu displayed. The default is [MY MENU].

Using the Menus

You can navigate the menus using the multi selector and ® button.

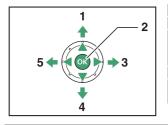

- Move cursor up
- 2 Select the highlighted item
- Display sub-menu, select highlighted item, or move cursor right
- 4 Move cursor down
- 5 Cancel and return to previous menu, or move cursor left

1 Highlight the icon for the current menu.

Press ④ to place the cursor in the menu-selection area.



	Δ.	SETUP MENU	
	-	ormat memory card	>
		anguage	>
	1	Time zone and date	
		Monitor brightness	
	Υ.	Monitor color balance	
	1	/iewfinder brightness	
	⇒	/iewfinder color balance	
-ι			

2 Select a menu.

Press O or O to select the desired menu.





3 Position the cursor in the selected menu.

Press () to position the cursor in the selected menu.



	PLAYBACK MENU		B
-	Delete	Ű	>
	Playback folder		>
1	Playback display options		
Þ	Delete pictures from both slots	0N•=	
۲	Dual-format recording PB slot		
۲	Filtered playback criteria		
⇒	Picture review		

4 Highlight a menu item.

Press 🕙 or 🕞 to highlight a menu item.




	PLAYBACK MENU		
	Playback folder		>
1	Playback display options		>
	Delete pictures from both slots	0N'=	>
	Dual-format recording PB slot		>
	Filtered playback criteria		>
	Picture review	0FF	~
	After delete		>

5 Display options.


Press () to display options for the selected menu item.



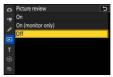

6 Highlight an option.

Press 🕙 or 🝚 to highlight an option.

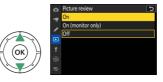

7 Select the highlighted option.

- Press
 to save changes and exit.
- To exit without making a selection, press the MENU button.



• To exit the menus and return to shooting mode, press the shutter-release button halfway.

Grayed-Out Items

- Some items and menu options may be unavailable depending on camera status. Unavailable items are displayed in gray.
- In some cases, pressing
 when a grayed-out item is highlighted will display a message explaining why the item is unavailable.





62

The Menus


ON/OFF Only Items

If the only options available for the current item are **[ON]** and **[OFF]**, you can switch from **[ON]** to **[OFF]** or *vice versa* simply by pressing ^(®), pressing the multi selector right ([®]), or tapping the item in the display.

۵	PHOTO SHOOTING MENU		8
١Ŗ	Vignette control		
1	Diffraction compensation	OON)
	Auto distortion control	ON	
	Photo flicker reduction	(OFF)
	Metering	0	>
	Focus mode	AF-S	

🜌 The 🕐 (Help) Icon

- Where available, a description of the currently-selected item can be viewed by pressing the ♀∞ (?) button.
- Press 🕙 or 🕞 to scroll.
- Press 🖓 🛚 (?) again to return to the menus.

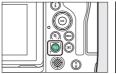



Touch Controls

You can also navigate the menus using touch controls (253).

🖉 Text Entry

A keyboard is displayed when text entry is required, for example if you are called on to enter a file name or the like. Enter text as described below.


1



- Text display area
- 2 Keyboard area
- 3 Keyboard selection
- Enter characters at the current cursor position by highlighting them with the multi selector arrow keys and then pressing ®.
- To move the cursor left or right in the text display area, rotate the main command dial.
- To cycle through the upper- and lower-case and symbol keyboards, highlight the keyboard selection icon and press [®]. The keyboard selection icon may not be available in some cases.
- If a character is entered when the text display area is full, the rightmost character will be deleted.
- To delete the character under the cursor, press the $\tilde{\textbf{m}}$ (****) button.
- To complete entry, press ♥.
- To exit without completing text entry, press MENU.

The *i* Button (the *i* Menu)

For quick access to frequently-used settings, press the i button or tap the \mathbf{I} icon to view the i menu.

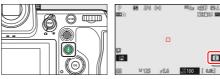

- Different menus are displayed in photo and video modes.
- Options can be viewed by tapping items in the display or by highlighting items and pressing ⁽¹⁾/₍₂₎; selections can then be made using the multi selector.
- Items for which the camera displays an onscreen guide can be adjusted by highlighting them in the *i* menu and rotating a command dial. In some cases, adjustments can be made using both the main and sub-command dials.





Grayed-Out Items

Some items and menu options may be unavailable depending on camera status. Unavailable items are displayed in gray.



Using the i Menu with the Camera in "Tall" Orientation


When the camera is rotated to take pictures in "tall" (portrait) orientation, the \boldsymbol{i} menu for photo mode rotates to match.



II The Still Photography *i* Menu


6

Pressing the i button during still photography displays the items listed below. Highlight the desired item using the multi selector and press w to view options.

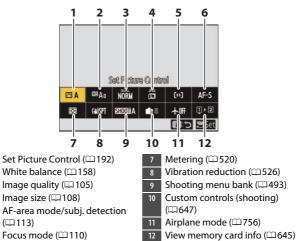

💵 The Video i Menu

Pressing the i button during video recording displays the items listed below. Highlight the desired item using the multi selector and press \circledast to view options.

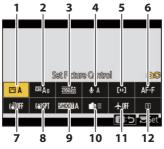

- 1 Set Picture Control (192)
- 2 White balance (CL 158)
- 3 Frame size/frame rate (¹²216)
- 4 Microphone sensitivity (¹¹588)
- 5 AF-area mode/subj. detection (© 113)
- 6 Focus mode (🕮 110)

- 7 Electronic VR (🕮 587)
- 8 Vibration reduction (11587)
- 9 Shooting menu bank (🕮 493)
- 10 Custom controls (🕮 674)
- 11 Airplane mode (CD 756)
- 12 Destination (11578)

II The Playback *i* Menu

Pressing the *i* button during playback displays a context-sensitive i menu of playback options.



Photos



Videos

II Customizing the *i* Menu

The items displayed in the *i* menu during shooting can be chosen using Custom Setting f1 or g1 [**Customize B menu**].



$\mathbf{3}$ Highlight the desired item and press $\boldsymbol{\otimes}$.

- The item will be assigned to the selected position and the options shown in Step 2 will be displayed.
- Repeat Steps 2 and 3 as desired.

4 Press the MENU button.


Changes will be saved and the Custom Settings menu will be displayed.



First Steps

Attaching the Strap

To attach a strap (whether the supplied strap or one that has been purchased separately):

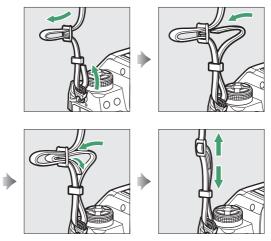

Charging the Battery


Charge the supplied EN-EL18d battery before use.

Caution: The Battery and Charger

Read and follow the warnings and cautions in "For Your Safety" (D 25) and "Caring for the Camera and Battery: Cautions" (D 862).

The Battery Charger

• Before charging the battery, connect the EH-7P charging AC adapter to the MH-33 battery charger and plug it into a household power outlet. You can then insert the battery to begin charging.

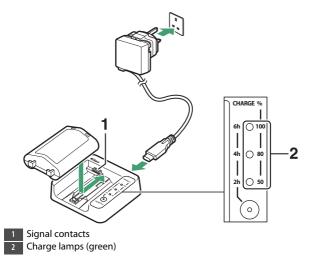

- The charge lamps flash while charging is in progress and stop flashing as charging completes. Note that depending on the battery charge state, there may be a delay of about ten seconds before the lamps start flashing.
- Insert the battery (terminals first), aligning the end of the battery with the guide and then sliding the battery in the direction indicated until it clicks into place.
- Leave the charger in a location where it will remain stable and free from vibration during use.
- An exhausted battery will fully charge in about 4 hours.
- As charging progresses, the charge lamps will light one at a time until charging is complete and all three lamps are lit.

	Charge state			
Charge lamps	<50%	≥50%, <80%	≥80%, <100%	100%
100%	• (off)	• (off)	🔆 (flashes)	(on)
80%	• (off)	🔅 (flashes)	(on)	\bigcirc (on)
50%	☆ (flashes)	\bigcirc (on)	\bigcirc (on)	\bigcirc (on)

• Battery status is shown by the charge lamps:

Caution: Charging EN-EL18d Batteries

EN-EL18d rechargeable Li-ion batteries are not compatible with MH-26a or MH-26 battery chargers. Be sure to use the MH-33 when charging EN-EL18d batteries via a charger.

🔽 If the Charge Lamps Flash Rapidly

If the charge lamps flash rapidly (8 times a second):


- The battery was not inserted correctly: Unplug the charger and remove and reinsert the battery.
- The ambient temperature is too hot or too cold: Use the battery charger at temperatures within the designated temperature range (0–40 °C/+32– 104 °F).

If the problem persists, unplug the charger and end charging. Bring the battery and charger to a Nikon-authorized service representative.

The Charging AC Adapter: Charging

When inserted in the camera, the battery can be charged using the supplied EH-7P charging AC adapter.

• After confirming that the camera is off, connect the charging AC adapter (①) and plug the adapter in. The battery will charge while the camera is off. Keep the plug straight during insertion and removal.

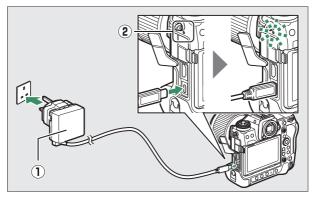

- The camera charge lamp ([®]) lights amber while charging is in progress. The lamp turns off when charging is complete.
- An exhausted battery will fully charge in about 3 hours and 40 minutes.
- When charging is complete, unplug the charging AC adapter and disconnect it from the camera.

🔽 Caution: Charging EN-EL18a/EN-EL18 Batteries

The charging AC adapter cannot be used to charge EN-EL18a or EN-EL18 rechargeable Li-ion batteries. Use an MH-26a battery charger.

🔽 Caution: The Charging AC Adapter

- If the battery cannot be charged using the charging AC adapter, for example because the battery is not compatible or the temperature of the camera is elevated, the charge lamp will flash rapidly for about 30 seconds and then turn off. If the charge lamp is off and you did not observe the battery charging, turn the camera on and check the battery level.
- Batteries with a "4" (€) showing for [Battery info] > [Battery age] in the setup menu cannot be charged.

The Charging AC Adapter: Power Delivery

- If [ON] is selected for [USB power delivery] in the setup menu, the charging AC adapter will supply power to the camera when the camera is on.
- The battery will not charge while the camera is powered by an outside power source.
- For more information, see "'Power Delivery' Versus 'Charging'" (2745).

Computer USB Power Delivery and Battery Charging

- Computers will supply current to power the camera or charge the battery only when connected via a UC-E25 USB cable (available separately; 12843). The supplied USB cable cannot be used for this purpose.
- Depending on the model and product specifications, some computers will not supply current to power the camera or charge the battery.

Inserting the Battery

Turn the camera off before inserting or removing the battery.

1 Remove the BL-7 battery chamber cover.

Lift the battery chamber cover latch, turn it to the open (\bigcirc) position (\bigcirc) and remove the battery chamber cover (O).




2 Attach the cover to the battery.

- If the battery release is positioned so that the arrow (◄) is visible, slide the battery release to cover the arrow (◄).
- Insert the two projections on the battery into the matching slots in the cover as shown. The battery release will slide aside to completely reveal the arrow (◄).



3 Insert the battery.

Insert the battery fully and securely as shown.

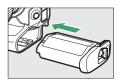

4 Latch the cover.


- Rotate the battery chamber cover latch to the closed position $(\ensuremath{\overline{0}})$ and fold it down as shown $(\ensuremath{\overline{e}}).$



• Be sure the cover is securely latched to prevent the battery from becoming dislodged during operation.

Removing the Battery

Before removing the battery, turn the camera off, lift the battery chamber cover latch, and turn it to the open (\mathfrak{C}) position.

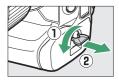

Removing the Battery Chamber Cover


To unlatch the battery chamber cover so that it can be removed from the battery, slide the battery release in the direction indicated by the arrow (\blacktriangleleft) until it stops.

The Battery Chamber Cover

- Use BL-7 battery chamber covers only; other battery chamber covers cannot be used with this camera.
- You can leave the cover attached when charging batteries in a charger.
- To prevent dust accumulating inside the battery chamber, replace the battery chamber cover on the camera when the battery is not inserted.

Battery Level

• The battery level is shown in the shooting display and control panel while the camera is on.

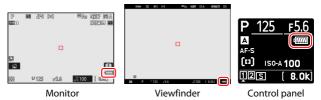

- The battery level display changes as the battery level diminishes, from we through (we, (we, and (we), When the battery level falls to (we), suspend shooting and charge the battery or ready a spare battery.
- If the message [Shutter release disabled. Recharge battery.] is displayed, charge or exchange the battery.

The Standby Timer

The camera uses a standby timer to help reduce the drain on the battery. If no operations are performed for about 30 seconds, the standby timer will expire and the monitor, viewfinder, and control panel will turn off. A few seconds prior to turning off, the monitor and viewfinder will dim. They can be reactivated by pressing the shutter-release button halfway. The length of time before the standby timer expires automatically can be selected using Custom Setting c3 [Power off delay] > [Standby timer].

Inserting Memory Cards

The camera is equipped with two memory card slots (Slots 1 and 2), allowing simultaneous use of two memory cards.

- Turn the camera off before inserting or removing memory cards.
- Holding the memory card in the orientation shown, slide it straight into the slot until it clicks into place.



Number of Exposures Remaining

- The shooting display and control panel show the number of photographs that can be taken at current settings.
- Values over 1000 are rounded down to the nearest hundred. For example, values between 8000 and 8099 are shown as 8.0 k.
- If no memory cards are inserted, an [-E-] indicator will be displayed.



Removing Memory Cards

After confirming that the memory card access lamp is off, turn the camera off, open the memory card slot cover, and press the card in to eject it (\mathbb{T}) . The card can then be removed by hand (\mathfrak{D}) .


🔽 Memory Card High-Temperature Warning

As indicated on the inside of the memory card slot cover, memory cards inserted in the camera may become hot. Do not attempt to remove memory cards if a high-temperature warning appears in the shooting display; instead, wait for the camera to cool and the warning to clear from the display.

🖉 Slot Icons

The location of the current picture is shown by an icon at the bottom left corner of the playback display.




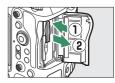




Attaching a Lens

- The camera can be used with Z mount lenses. The lens generally used in this document for illustrative purposes is a NIKKOR Z 50mm f/1.8 S.
- Be careful to prevent dust entering the camera.
- Confirm that the camera is off before attaching the lens.
 - Remove the camera body cap (1), 2) and rear lens cap (3, 4).

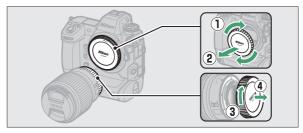

- Align the mounting marks on the camera (⑤) and lens (⑥). Do not touch the image sensor or lens contacts.

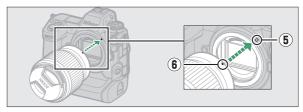

- Rotate the lens as shown until it clicks into place (⑦).




• Remove the front lens cap before taking pictures.

🔽 F Mount Lenses

- Be sure to attach the FTZ II/FTZ mount adapter (available separately) before using F mount lenses (C2844).
- Attempting to attach F mount lenses directly to the camera could damage the lens or image sensor.

Detaching Lenses

- After turning the camera off, press and hold the lens release button (①) while turning the lens in the direction shown (②).
- After removing the lens, reattach the lens caps and camera body cap.

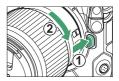

Camera Setup

Turn the camera on, choose a language, and set the clock. Before using the camera for the first time, follow the steps below to choose a language and time zone and set the clock so that the correct time and date will be recorded with any pictures you take.

1	Press MENU, and in the setup menu
	highlight [Language] and press 🕃.
	For information on using the menus, see

"Using the Menus" (🕮 60).

	SETUP MENU		
-	Format memory card		
<u>,</u>	Language	5	>
	Time zone and date		
	Monitor brightness		
	Monitor color balance		
	Viewfinder brightness	AUTO	
	Viewfinder color balance		

2 Select a language.

Press O or O to highlight the desired language and press O (the languages available vary with the country or region in which the camera was originally purchased).

3 Highlight [Time zone and date] and press ().

-	SETUP MENU		9
D			۳.
10	Format memory card		>
	Language	s B	>
1	Time zone and date		>
Þ	Monitor brightness		
	Monitor color balance		
	Viewfinder brightness	AUTO	
	Viewfinder color balance		

4 Choose a time zone.

- Select [Time zone] in the [Time zone and date] display.
- The display lists selected cities in the chosen zone and the difference between the time in the chosen zone and UTC.
- Highlight a time zone in the [Time zone] display and press ®.

5 Turn daylight saving time on or off.

- Select [Daylight saving time] in the [Time zone and date] display.
- Select [**ON**] (daylight saving time on) or [**OFF**] (daylight saving time off).
- Selecting [ON] advances the clock one hour; to undo the effect, select [OFF].

6 Set the clock.

- Select [Date and time] in the [Time zone and date] display.
- Press
 [®] after using the multi selector to set the clock to the date and time in the selected time zone in the [Date and

time] display (note that the camera uses a 24-hour clock).







7 Choose a date format.

- Select [Date format] in the [Time zone and date] display.
- Highlight the desired date (year, month, and day) display order and press ®.



8 Exit the menus.

Lightly press the shutter-release button halfway to exit to shooting mode.



🔽 The 🕑 Icon

A flashing O icon in the shooting display indicates that the camera clock has been reset. The date and time recorded with new photographs will not be correct; use the [**Time zone and date**] > [**Date and time**] option in the setup menu to set the clock to the correct time and date. The camera clock is powered by an independent clock battery. The clock battery charges when the main battery is inserted in the camera. It takes about 2 days to charge. Once charged, it will power the clock for about a month.

Basic Photography and Playback

Taking Photographs

The basic steps involved in taking photographs are described below.

🔽 Lenses with Retractable Barrels

Lenses with retractable barrels must be extended before use. Rotate the zoom ring as shown until the lens clicks into the extended position.

Select photo mode by rotating the photo/video selector to **D**.



2 Ready the camera.

Holding the handgrip in your right hand and cradling the camera body or lens with your left, bring your elbows in against the sides of your chest.



Landscape (wide) orientation



Portrait (tall) orientation

3 Frame the photograph.

Position the main subject near the center of the frame.



4 To focus, press the shutter-release button halfway (i.e., lightly press the shutter-release button, stopping when it is pressed halfway).

- The focus point will be displayed in green when the camera focuses. If the camera is unable to focus, the focus point will flash red.
- The AF-assist illuminator may light to assist the focus operation if the subject is poorly lit.



• You can also focus by pressing the **AF-ON** button.

🔽 The AF-Assist Illuminator

Do not obstruct the AF-assist illuminator while it is lit.



5 Without lifting your finger from the shutter-release button, press the button the rest of the way down to take the picture.

The Memory Card Access Lamp

The memory card access lamp will light while the photograph is being recorded. Do not remove the memory card or battery.

The Touch Shutter

You can also take a photograph by touching the monitor. Touch your subject to focus and lift your finger to release the shutter (\Box 124).








Framing Photos in Portrait ("Tall") Orientation

The camera is equipped with controls for use in portrait ("tall") orientation, including vertical shutter-release, **ISO**, **Fn**, **AF-ON**, and *i* buttons, main and sub-command dials, and a multi selector.



 Rotate the vertical shooting shutter-release button lock to L to avoid accidentally operating these controls when the camera is in landscape ("wide") orientation.

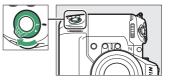

🖉 Using Zoom in Photo Mode

To zoom in on the display in photo mode (to a maximum of approximately 16×), press the \P button.

- Use the \mathfrak{P} and \mathfrak{P} (?) buttons to zoom in and out.
- A navigation window showing the area currently visible will appear at the bottom right corner of the display.
- Use the multi selector to scroll to areas of the frame not visible in the monitor.






Shooting Videos

The basic steps involved in shooting videos are described below.


1 Select video mode by rotating the photo/video selector to 课.

Note that optional flash units cannot be used when the camera is in video mode.

2 Press the video-record button to start recording.

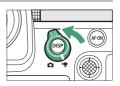

• A recording indicator will be displayed in the monitor. The monitor also shows the time remaining, or in other words the approximate amount of new footage that can be recorded to the memory card.

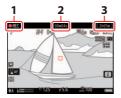



Recording indicator Video recording time (length of footage recorded)


3 Time remaining

- The camera can be refocused during recording by pressing the **AF-ON** button.
- Sound is recorded via the video microphone. Do not cover the video microphone during recording.
- You can also focus by tapping your subject in the monitor.

3 Press the video-record button again to end recording.

🔽 The Memory Card Access Lamp

The memory card access lamp will light while the video is being recorded. *Do not remove the memory card or battery*.

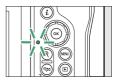

🔽 The 🕅 Icon


A 🗽 icon indicates that videos cannot be recorded.

Cautions: Recording Videos

- Video recording will end automatically if:
 - the maximum length is reached,
 - you choose a different shooting mode,
 - you switch modes using the photo/video selector, or
 - the lens is removed.
- Sounds made by the camera may be audible in footage recorded:
 - during autofocus,
 - during vibration reduction, or
 - when power aperture is used.

🚺 Memory Card High-Temperature Warning

During video recording, memory cards may become hot and a high-temperature warning may appear in the shooting display. Do not attempt to remove the memory card; instead, wait for the camera to cool and the warning to clear from the display.

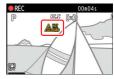

Cautions: Photography and Video Recording

- You may notice the following in the shooting display. These phenomena will also be visible in any photos or footage recorded with the camera:
 - flicker or banding in scenes lit by such sources as fluorescent, mercury vapor, or sodium lamps,
 - distortion during motion (individual subjects such as trains or cars moving at high speed through the frame may be distorted, or the entire frame may appear distorted when the camera is panned horizontally),
 - jagged edges, color fringing, moiré, or bright spots,
 - bright regions or bands in scenes lit by flashing signs and other intermittent light sources or when the subject is briefly illuminated by a strobe or other bright, momentary light source, or
 - flicker when power aperture is used during video recording.
- Note that noise (randomly-spaced bright pixels, fog, or lines) and unexpected colors may appear if you use the ^Q button to zoom in on the view through the lens.
- When recording, avoid pointing the camera at the sun or other powerful light sources. Failure to observe this precaution could result in damage to the camera's internal circuitry.

🖉 Using Zoom in Video Mode

The \mathfrak{P} button can also be used to zoom in on the display in video mode (\Box 92).

- Pressing \mathfrak{P} during recording zooms the display in to a 1:1 (100%) zoom ratio. Press \mathfrak{P} (?) to cancel zoom.
- When viewing videos, you can zoom in on the current frame when playback is paused.


Playback

Press the D button to view photos and videos in the monitor or viewfinder after shooting.

- Press ① or ③ or flick left or right to view additional pictures.
- To end playback and return to shooting mode, press the shutterrelease button halfway.





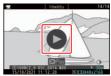


Viewing Videos

The video playback display and controls are described below.

The Video Playback Display

During video playback, the display shows the length of the video, the current playback position, and the other indicators listed below. Your approximate position in the video can also be ascertained from the video progress bar.

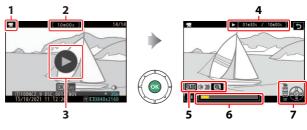

- 1 🖷 icon
- 2 Length
- 3 Dicon
- 4 Current position/total length
- 5 Volume
- 6 Progress bar
- 7 Guide

II Video Playback Controls

The following operations can be performed while playback is in progress:

Operation	Description
Pause	Press 🕞 to pause playback.
Resume	Press the ® button to resume playback when playback is paused or during rewind/advance.
Rewind/advance	Press \textcircled{O} to rewind, \textcircled{O} to advance. Speed increases with each press, from 2× to 4× to 8× to 16×.
Start slow-motion playback	Press 🐨 while the video is paused to start slow- motion playback.
Jog rewind/advance	 Press ① or ③ while the video is paused to rewind or advance one frame at a time. Keep ① or ③ pressed for continuous rewind or advance.
Skip 10 s	Rotate the sub-command dial one stop to skip ahead or back 10 s.
Skip 10 frames	Rotate the main command dial one stop to skip ahead or back 10 frames.
Skip to last or first frame	 Keep € or € pressed to skip respectively to the first frame or last frame. The first frame is indicated by a → in the top right corner of the display, the last frame by a →I.

Operation	Description
Zoom in	Press ♥ to zoom in on the current frame while playback is paused.
Adjust volume	Press 🕏 to increase volume, 🖓 (?) to decrease.
Edit video	To display video <i>i</i> menu, pause playback and press the <i>i</i> button.
Exit	Press 🕭 or 🖿 to exit to full-frame playback.
Resume shooting	Press the shutter-release button halfway to return to shooting mode.

Deleting Unwanted Pictures

Press the **m** (**ems**) button to delete the current picture. Note that pictures cannot be recovered once deleted.

- Display a picture you want to delete and press the 節 () button to display a confirmation dialog. Press the 節 () button again to delete the picture and return to playback.
- To exit without deleting the picture, press
 .

🜌 The Playback Menu [Delete] Item

Use [Delete] in the playback menu to:

- delete multiple pictures,
- delete all pictures currently rated 5 (candidate for deletion),
- · delete all pictures taken on selected dates, or
- delete all pictures in selected folders.





Shooting Settings

Image Recording Options (Image Area, Quality, and Size)

Adjusting Image Area Settings

At default settings, image area can be selected by holding the **Fn2** button and rotating a command dial.






• Image area settings can be displayed by selecting [**Image area**] in the photo shooting menu.



Choose Image Area

Choose the image area. The following options are available:

Option		Description
FX	[FX (36×24)]	Record pictures in FX format with an angle of view equivalent to a 35 mm format camera.
DX	[DX (24×16)]	 Pictures are recorded in DX format. To calculate the approximate focal length of the lens in 35 mm format, multiply by 1.5. Image-area selection is fixed at [DX (24×16)] when a DX lens is attached.
1:1	[1:1 (24×24)]	Pictures are recorded with an aspect ratio of 1:1.
16:9	[16:9 (36×20)]	Pictures are recorded with an aspect ratio of 16:9.

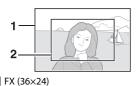

DX (24×16)

2



3 1:1 (24×24) 4 16:9 (36×20)

DX Crop Alert

If **[ON]** is selected for this option in the camera menus, the image area icon in the shooting display will flash when DX (24×16) is selected.



Adjusting Image Quality

Choose the image quality option used when photographs are recorded.

Choosing an Image Quality Option

Hold the QUAL button and rotate the main command dial.





The Photo Shooting Menu [Image Quality] Option

Image quality can also be adjusted using the [Image quality] item in the photo shooting menu.

Option	Description		
[RAW + JPEG fine★]	 Record two copies of each photo: an NEF (RAW) picture and a JPEG copy. For the JPEG copy, you can choose from options prioritizing image quality or file size. Choose options with a star ("*") to maximize image quality. Choose options without a star ("*") to 		
[RAW + JPEG fine]			
[RAW + JPEG normal★]	 ensure that the JPEG copies all have more or less the same file size. Only the JPEG copy is displayed during playback. If only one memory card was inserted in the camera when the photos were recorded, the NEF (RAW) copies can only be viewed using a computer. 		
[RAW + JPEG normal]			
[RAW + JPEG basic★]	 If the photo was recorded with only one memory card inserted or with [Overflow] or [Backup] selected for [Role played by card in Slot 2] and 		
[RAW + JPEG basic]	two memory cards inserted, deleting the JPEG copy on the camera will also delete the NEF (RAW) picture.		
[RAW]	Record photos in NEF (RAW) format.		
[JPEG fine★]	Record photos in JPEG format. "Fine" produces		
[JPEG fine]	higher quality pictures than "normal" and "normal"		
[JPEG normal★]	 higher quality pictures than "basic". Choose options with a star ("★") to maximize 		
[JPEG normal]	image quality. Choose options without a star (" \star ")		
[JPEG basic★]	to ensure that the JPEG copies all have more or less		
[JPEG basic]	the same file size.		

🖉 NEF (RAW)

- NEF (RAW) files have the extension "*.nef".
- The process of converting NEF (RAW) pictures to other highly-portable formats such as JPEG is referred to as "NEF (RAW) processing". During this process, Picture Controls and settings such as exposure compensation and white balance can be freely adjusted.
- The RAW data themselves are unaffected by NEF (RAW) processing and their quality will remain intact even if the pictures are processed multiple times at different settings.
- NEF (RAW) processing can be performed using [Retouch] > [RAW processing (current picture)] or [RAW processing (multiple pictures)] in the playback i menu or on a computer using Nikon's NX Studio software. NX Studio is available free-of-charge from the Nikon Download Center.

"NEF (RAW) + JPEG"

If **[RAW Slot 1 - JPEG Slot 2]** is selected for **[Role played by card in Slot 2]**, the NEF (RAW) copies will be recorded to the card in Slot 1 and the JPEG copies to the card in Slot 2 (\Box 503).

Choosing an Image Size

Choose a size for new JPEG pictures. The size for JPEG pictures can be selected from [Large], [Medium], and [Small].

II Choosing an Image Size

Hold the QUAL button and rotate the sub-command dial.



The Photo Shooting Menu [Image Size] Item

Image size can also be adjusted using the [**Image size**] item in the photo shooting menu.

The number of pixels in the picture varies with the option selected for image area (\Box 102).

Image area	Image size	Size when printed at 300 dpi
	Large	Approx. 69.9 × 46.6 cm/
	(8256 × 5504 pixels)	27.5 × 18.3 in.
[FX (36×24)]	Medium	Approx. 52.4 × 35.0 cm/
[FA (30×24)]	(6192 × 4128 pixels)	20.6 × 13.8 in.
	Small	Approx. 35.0 × 23.3 cm/
	(4128 × 2752 pixels)	13.8 × 9.2 in.
	Large	Approx. 45.7 × 30.4 cm/
	(5392 × 3592 pixels)	18.0 × 12.0 in.
[DX (24×16)]	Medium	Approx. 34.1 × 22.8 cm/
[DA (24×10)]	(4032 × 2688 pixels)	13.4 × 9.0 in.
	Small	Approx. 22.8 × 15.2 cm/
	(2688 × 1792 pixels)	9.0 × 6.0 in.
	Large	Approx. 46.6 × 46.6 cm/
	(5504 × 5504 pixels)	18.3 × 18.3 in.
[1:1 (24×24)]	Medium	Approx. 35.0 × 35.0 cm/
[1:1 (24×24)]	(4128 × 4128 pixels)	13.8 × 13.8 in.
	Small	Approx. 23.3 × 23.3 cm/
	(2752 × 2752 pixels)	9.2 × 9.2 in.
	Large	Approx. 69.9 × 39.3 cm/
	(8256 × 4640 pixels)	27.5 × 15.5 in.
[16:9 (36×20)]	Medium	Approx. 52.4 × 29.5 cm/
[10:9 (30×20)]	(6192 × 3480 pixels)	20.6 × 11.6 in.
	Small	Approx. 35.0 × 19.6 cm/
	(4128 × 2320 pixels)	13.8 × 7.7 in.

🖉 Print Size

Print size in inches equals image size in pixels divided by printer resolution in dots per inch (dpi; 1 inch = 2.54 cm).


Focus

Focus Mode

Control how the camera focuses.

II Choosing a Focus Mode

The focus mode can be selected by holding the focus-mode button and rotating the main command dial.

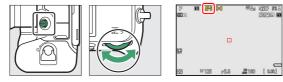

[Focus Mode]

The focus mode can also be selected using the [Focus mode] items in the photo shooting and video recording menus.

Option		Description	
AF-S	[Single AF]	 Use with stationary subjects. When you press the shutter-release button halfway to focus, the focus point will turn from red to green and focus will lock. If the camera fails to focus, the focus point will flash red and the shutter release will be disabled. At default settings, the shutter can only be released if the camera is able to focus (focus priority). 	
AF-C	 Use for shots of athletes and other moving subjects. The camera adjusts focus continuously i response to changes in the distance to the subject while the shutter-release button is pressed halfway. At default settings, the shutter can be released whether or not the subject is in focus (release priority). 		
AF-F	 F [Full-time AF] • The camera adjusts focus continuously in responto subject movement or changes in composition • When you press the shutter-release button halfway to focus, the focus point will turn from retogreen and focus will lock. • This option is only available in video mode. 		
MF	[Manual focus]	Focus manually (\Box 129). The shutter can be released whether or not the subject is in focus.	

Cautions: Autofocus

- The camera may be unable to focus if:
 - the subject contains lines parallel to the long edge of the frame,
 - the subject lacks contrast,
 - the subject in the focus point contains areas of sharply contrasting brightness,
 - the focus point includes night-time spot lighting or a neon sign or other light source that changes in brightness,
 - flicker or banding appears under fluorescent, mercury-vapor, sodium-vapor, or similar lighting,
 - a cross (star) filter or other special filter is used,
 - the subject appears smaller than the focus point, or
 - the subject is dominated by regular geometric patterns (e.g., blinds or a row of windows in a skyscraper).
- The display may brighten or darken while the camera focuses.
- The focus point may sometimes be displayed in green when the camera is unable to focus.
- The camera may take longer to focus when lighting is poor.

🖉 Low-Light AF

For improved focus when shooting under low light, select [**ON**] for Custom Setting d9 [**Starlight view (photo Lv)**]. This option takes effect only in photo mode.

AF-Area Mode

Choose how the camera selects the focus point for autofocus.

 In modes other than [Auto-area AF], the focus point can be positioned using the sub-selector (
 ^[123]) or multi selector.

II Choosing an AF-Area Mode

To choose the AF-area mode, hold the focus-mode button and rotate the sub-command dial.





🖉 [AF-Area Mode]

The AF-area mode can also be selected using the [**AF-area mode**] items in the photo shooting and video recording menus.

	Option	Description	
[e] Pin	[Pinpoint AF]	 With a focus area smaller than that employed for single-point AF, pinpoint AF is used for pinpoint focus on a selected spot in the frame. Focusing may be slower than with single-point AF. Recommended for shots involving static subjects, such as buildings, in-studio product photography, or close-ups. This option is only available when photo mode is selected and [Single AF] is chosen for focus mode. 	
[11]	[Single-point AF]	 The camera focuses on a point selected by the user. Use with stationary subjects. 	

Option		Description	
ØS	[Dynamic- area AF (S)]	 The camera focuses on a point selected by the user. If the subject briefly leaves the selected poin the camera will focus based on information from surrounding focus points. This option is only available when photo mode is selected and [Continuous AF] is chosen for focu mode. Use for photographs of athletes and other active 	
EØM	[Dynamic- area AF (M)]	 Use for photographs of athletes and other active subjects that are hard to frame using single-point AF. The size of the area used for focus can be selected from S (small), M (medium), and L (large). S is the smallest and L the largest. [Dynamic-area AF (S)]: Choose when there is time to compose the photograph or when photographing subjects that are moving predictably (e.g., runners or race cars on a track). [Dynamic-area AF (M)]: Choose when photographing subjects that are moving unpredictably (e.g., players at a football game). [Dynamic-area AF (L)]: Choose when photographing subjects that are moving unpredictably (e.g., players at a football game). 	
ØL	[Dynamic- area AF (L)]		

	Option	Description	
हि है। Wide-S	[Wide-area AF (S)]	 As for single-point AF except that the camera focuses on a wider area. Choose for snapshots, subjects that are in motion, and other subjects that are difficult to photograph using single-point AF. During video recording, wide-area AF can be used for smooth focus when making panning or tilting shots or filming moving subjects. If the selected focus area contains subjects at different distances from the camera, the camera will assign priority to the closest subject. The focus areas for [Wide-area AF (L)] are larger than those for [Wide-area AF (S)]. 	
баў ₩ide ¹ L	[Wide-area AF (L)]		
(30)	[3D-tracking]	 The camera tracks focus on a selected subject. Position the focus point over your subject and start tracking by pressing AF-ON or by pressing the shutter-release button halfway; focus will then track the selected subject as it moves through the frame. Release the button to end tracking and restore the previously-selected focus point. If the subject leaves the frame, remove your finger from the shutter-release button and recompose the photograph with the subject in the selected focus point. This option is only available when photo mode is selected and [Continuous AF] is chosen for focus mode. 	

Option		Description	
-@	[Subject- tracking AF]	 Track focus on a selected subject. Position the reticle over the target and start tracking by pressing the shutter-release button halfway or by pressing (a) or AF-ON; the focus point will track the selected subject as it moves through the frame. To end tracking and select the center focus point, press (a). This option is only available in video mode. 	
[=]	[Auto-area AF]	 The camera automatically detects the subject and selects the focus area. Use on occasions when you don't have time to select the focus point yourself, for portraits, or for snapshots and other spur-of-the-moment photos. 	

Caution: 3D-Tracking and Subject Tracking

The camera may be unable to track subjects that:

- are similar in color, brightness, or pattern to the background,
- change visibly in size, color, or brightness,
- · are too large or too small,
- are too bright or too dark,
- move quickly, or
- are obscured by other objects or leave the frame.

🖉 ⊡: The Center Focus Point

In all AF-area modes except [Auto-area AF], [3D-tracking], and [Subject-tracking AF], a dot appears in the focus point when it is in the center of the frame.

Quick Focus-Point Selection

- For quicker focus-point selection, choose [Alternating points] for Custom Setting a4 [Focus points used] to use only a quarter of the available focus points. Selecting [Alternating points] does not affect the number of points available for [Pinpoint AF].
- If you prefer to use the sub-selector for focus-point selection, you can choose [Select center focus point] for Custom Setting f2 [Custom controls (shooting)] > [Sub-selector center] to allow the center of the sub-selector to be used to quickly select the center focus point.

Choosing a Subject Type for Autofocus

The class of subjects given priority during autofocus can be chosen using the [AF subject detection options] items in the photo shooting and video recording menus, which offer a choice of [Auto], [People], [Animal], [Vehicle], and [Subject detection off]. The subject detected by the camera is indicated by a focus point.

- In the case of the video recording menu, the choice of subject is made via [AF subject detection options] > [Subject detection]. Separate subject types can be selected for photo and video modes.
- Subject detection is available when [Wide-area AF (S)], [Wide-area AF (L)], [3D-tracking], [Subject-tracking AF], or [Auto-area AF] is selected for [AF-area mode].
- Human faces detected by the camera when [**People**] is selected are identified by a border indicating the focus point. If the camera detects the subject's eyes, the focus point will instead appear over one or the other of their eyes (face/eye-detection AF). If the subject looks away after their face is

detected, the focus point will move to track their motion.





If a dog, cat, or bird is detected when
[Animal] is selected, the focus point will
appear over the face of the animal in
question (animal-detection AF). If the
camera detects the subject's eyes, the focus
point will instead appear over one or the
other of their eyes. If the camera can detect

neither face nor eyes, it will display a focus point over the detected animal.

- If a car, motorcycle, train, airplane, or bicycle is detected when [Vehicle] is selected, the focus point will appear over the vehicle in question. In the case of trains, the camera will detect only the front end. With planes, the camera will detect the body, nose, or cockpit depending on the aircraft's size.
- If [Auto] is selected, the camera will detect humans, animals, and vehicles and choose a subject for focus automatically.
- To disable AF subject detection altogether, choose [Subject detection off].
- If more than one subject of the selected type is detected, a gray focus point will appear over each of the subjects detected. If [Auto-area AF] is selected for [AF-area mode],

 and ▶ icons will appear on the focus point selected by the camera. The focus point can be positioned over the other subjects by pressing ③ or ④.
- During playback, you can zoom in on the subject used for focus by pressing ®.





Caution: Face/Eye-Detection AF

Subject detection may not perform as expected if:

- the subject's face is too large or small relative to the frame,
- the subject's face is too brightly or dimly lit,
- the subject is wearing glasses or sunglasses,
- the subject's face or eyes are obscured by hair or other objects, or
- the subject moves excessively during shooting.

Cautions: Animal-Detection AF

- Subject detection may not perform as expected if:
 - the subject's face is too large or small relative to the frame,
 - the subject's face is too brightly or dimly lit,
 - the subject's face or eyes are obscured by fur or the like,
 - the subject's face and eyes are of similar colors, or
 - the subject moves excessively during shooting.
- The camera may display a border around subjects that are not dogs, cats, or birds but which resemble these animals.
- The light from the AF-assist illuminator may adversely affect the eyes of some animals; when using animal-detection AF, select [**OFF**] for Custom Setting a12 [**Built-in AF-assist illuminator**].

Cautions: Vehicle-Detection AF

- Subject detection may not perform as expected with subjects that are:
 - too large or small relative to the frame,
 - too bright or too dark,
 - partially hidden,
 - similar in color to surrounding objects, or
 - moving quickly.
- The camera may fail to detect vehicles of some shapes and colors. Alternatively, it may display a border around subjects that are not vehicles.

Subject Detection

The performance of subject-detection may drop:

- during high-speed frame capture or
- if either [HLG] or [N-Log] is selected as the tone mode for [Video file type]
 [ProRes 422 HQ 10-bit (MOV)] or [H.265 10-bit (MOV)] in the video recording menu.

Focus Point Selection

Except when [**Auto-area AF**] is selected for AF-area mode, the focus point can be selected manually, allowing photographs to be composed with the subject positioned almost anywhere in the frame.

- Use the multi selector to select the focus point while the standby timer is on.
- Pressing ® selects the center focus point.

The Sub-Selector

- The sub-selector can be used for focus-point selection in place of the multi selector.
- Exposure and focus lock while the center of the sub-selector is pressed.
- Be careful not to put your fingers in your eye while using the sub-selector with your eye to the viewfinder.

Portrait ("Tall") Orientation


You may find it convenient to use the vertical multi selector when taking photographs in portrait ("tall") orientation.

Using the Sub-Selector and Vertical Multi Selector

You can press the centers of the sub-selector and vertical multi selector or tilt them as shown. The controls may not function as expected when pressed from the side.

Focus-Point Lock

Focus-point selection can be locked by choosing [**ON**] for Custom Setting f4 or g3 [**Control lock**] > [**Focus-point lock**].

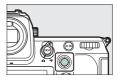




The Touch Shutter

Touch the display to focus on the selected point. The shutter will be released when you lift your finger from the display.

Tap the icon shown in the illustration to choose the operation performed by tapping the display.

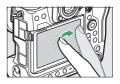



Option		Description
Ĩ	[Touch shutter/ touch AF]	 Touch the display to focus on the selected point and lift your finger to release the shutter. When choosing an eye using touch controls, note that the camera may not focus on the eye on the side you intend. Use the multi selector to choose the desired eye. If [Auto-area AF] is selected for AF-area mode, the camera will focus on the chosen point, release the shutter, and track the selected subject. Press ® to end subject tracking. Available only in photo mode.
GFF 🖥	[Off]	Touch shutter disabled.

Option		Description	
[] •	[Position focus point]	 Touch the display to position the focus point. The camera will not focus and lifting your finger from the display will not release the shutter. If [Subject-tracking AF] or [Auto-area AF] is selected for AF-area mode, focus will track the subject at the chosen point. Press to end subject tracking. 	
[]] AF	[Touch AF]	 Touch the display to focus on the selected point. Lifting your finger from the display does not release the shutter. If [Subject-tracking AF] or [Auto-area AF] is selected for AF-area mode, the camera will focus on and track the subject at the chosen point. Press ® to end subject tracking. 	

Cautions: Taking Pictures Using Touch Shooting Options

- Touch controls cannot be used for manual focus.
- The shutter-release button can be used to take pictures when the 🛱 icon is displayed.
- During burst photography, touch controls can be used only to take one picture at a time. Use the shutter-release button for burst photography.
- In self-timer mode, focus locks on the selected subject when you touch the monitor and the shutter is released about 10 seconds after you lift your finger from the display. If the number of shots selected is greater than 1, the remaining shots will be taken in a single burst.

Focus Lock

Use focus lock in cases in which the camera has trouble focusing with autofocus.


- Use focus lock to lock focus on the current subject when **AF-C** is selected for focus mode.
- When using focus lock, choose an AF-area mode other than [Auto-area AF].

1 Position the subject in the selected focus point and press the shutter-release button halfway.

2 Press the center of the sub-selector.

- Keeping the shutter-release button pressed halfway (①), press the center of the sub-selector (②) to lock focus. Focus will remain locked while the center of the sub-selector is pressed, even if you lift your finger from the shutter-release button.
- Exposure will also lock.
- AE-L icons will appear in the displays.




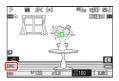

3 Keeping the center of the sub-selector pressed, recompose the photograph and shoot.



Do not change the distance between the camera and the subject. If the distance to the subject changes, release the lock and focus again at the new distance.

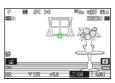

Locking Focus When AF-S Is Selected for Focus Mode

Focus locks while the shutter-release button is pressed halfway. You can also lock focus by pressing the center of the sub-selector.

🔽 Taking Multiple Shots at the Same Focus Distance

- If you locked focus by pressing the center of the sub-selector, focus will remain locked between shots if you keep the center of the sub-selector pressed.
- If you locked focus by pressing the shutter-release button halfway, focus will remain locked if you keep the button pressed halfway between shots.


Locking Focus with the AF-ON Button

- The **AF-ON** button can be used for focus in place of the shutter-release button.
- When [AF-ON only] is selected for Custom Setting a6 [AF activation], focus can be initiated only by pressing the AF-ON button; the camera will not focus when the shutter-release button is pressed halfway. Focus will remain locked after the AF-ON button is released. To end focus lock, press the AF-ON button again.


Manual Focus

Manual focus is available in manual focus mode. Use manual focus when, for example, autofocus does not produce the desired results.

• Position the focus point over your subject and rotate the focus or control ring until the subject is in focus.

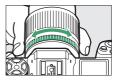

• For greater precision, press the ♥ button to zoom in on the view through the lens.

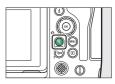

• The focus indicator (●) in the shooting display can be used to confirm whether the subject in the selected focus point is in focus (electronic rangefinding). The focus point will also light green when the subject is in focus.



Focus indicator	Description	
(steady)	The subject is in focus.	
(steady)	The focus point is in front of the subject.	
(steady)	The focus point is behind the subject.	
(flashes)	The camera is unable to focus.	


 When using manual focus with subjects not suited to autofocus, note that the in-focus indicator (●) may be displayed when the subject is not in focus. Zoom in on the view through the lens and check focus. Use of a tripod is recommended when the camera is having trouble focusing.

Lenses with Focus-Mode Selection

Manual focus mode can be chosen using focus-mode selection controls on the lens (where available).

🚺 The Focal Plane Mark and Flange-Back Distance

Focus distance is measured from the focal plane mark (\rightarrow) on the camera body, which shows the position of the focal plane inside the camera (①). Use this mark when measuring the distance to your subject for manual focus or macro photography. The distance between the focal plane and the lens mounting flange is known as the "flange-back distance" (\hat{e}). On this camera, the flange-back distance is 16 mm (0.63 in.).

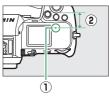

Focus Peaking


- If [ON] is selected for Custom Setting a13
 [Focus peaking] > [Focus peaking display],
 objects that are in focus will be indicated by
 colored outlines that appear when focus is
 adjusted manually (focus peaking).
- Note that the focus peaking display may not appear if the camera is unable to detect outlines. Check focus in the shooting display.



Exposure

Choosing a Shooting Mode

To choose a shooting mode, hold the **MODE** button and rotate the main command dial. The selected option is shown in the shooting display and control panel.

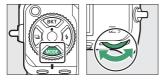



	Mode	Description	
Ρ	Programmed auto (🗆 133)	Use for snapshots and in other situations in which there is little time to adjust camera settings. The camera chooses both shutter speed and aperture automatically.	
S	Shutter- priority auto (□ 133)	Use to freeze or blur motion. You choose the shutter speed; the camera adjusts aperture automatically.	
A	Aperture- priority auto (□134)	Use to blur backgrounds or bring both foreground and background into focus. You choose the aperture; the camera adjusts shutter speed automatically.	
М	Manual (🕮 135)	You control both shutter speed and aperture. Choose a shutter speed of "Bulb" or "Time" for long time-exposures.	

- In this mode, the camera automatically adjusts shutter speed and aperture according to a built-in program to ensure optimal exposure in most situations.
- Different combinations of shutter speed and aperture that produce the same exposure can be selected by rotating the main command dial ("flexible program").
 - While flexible program is in effect, a flexible program indicator (*****) is displayed.
 - To restore default shutter speed and aperture settings, rotate the main command dial until the indicator is no longer displayed. Flexible program can also be ended by choosing another mode or turning the camera off.

S (Shutter-Priority Auto)

- In shutter-priority auto, you choose the shutter speed while the camera automatically adjusts aperture for optimal exposure. Choose fast shutter speeds to "freeze" motion, slow shutter speeds to suggest motion by blurring moving objects.
- Rotate the main command dial to set the shutter speed.
- Shutter speed can be set to values between 1/32000 s and 30 s.
- Shutter speed can be locked at the selected value (CD 665, 682).





II A (Aperture-Priority Auto)

- In aperture-priority auto, you choose the aperture while the camera automatically adjusts shutter speed for optimal exposure.
- Aperture can be adjusted by rotating the sub-command dial.
- The minimum and maximum values for aperture vary with the lens.
- Aperture can be locked at the selected value (22665, 682).



💵 M (Manual)

- You control both shutter speed and aperture. Choose this mode for long time-exposures of such subjects as fireworks or the night sky ("Bulb" or "Time" photography, 🕮 138).
- Shutter speed and aperture can be adjusted with reference to the exposure indicators by rotating the command dials.
- Rotate the main command dial to choose the shutter speed. Shutter speed can be set to values between 1/₃₂₀₀₀ s and 30 s or to **"Bulb"** or **"Time"**.



- Aperture can be adjusted by rotating the sub-command dial.
- The minimum and maximum values for aperture vary with the lens.
- Shutter speed and aperture can be locked at the selected values (\$\Pi665, 682)\$.



Exposure Indicators

The exposure indicators in the monitor, viewfinder, and control panel show whether the photograph would be under- or over-exposed at current settings. The exposure indicators can be read as follows (the display varies with the option selected for Custom Setting b2 [EV steps for exposure cntrl]):

	[1/3 step] selected for [EV steps for exposure cntrl]		
Display	Optimal exposure	Underexposed by ¹ / ₃ EV	Overexposed by over 3 ¹ / ₃ EV
Monitor	+ 	+	
Viewfinder/ control panel	+	+ il	⁰

The orientation of the exposure indicators can be reversed using Custom Setting f7 [**Reverse indicators**].

🔽 Exposure Warning

The displays will flash if the selected settings exceed the limits of the exposure metering system.

Extended Shutter Speeds

For shutter speeds as slow as 900 s (15 minutes), select [**ON**] for Custom Setting d5 [**Extended shutter speeds (M)**].

Long Exposures

At speeds slower than 1 s, the shutter speed displayed by the camera may differ from the actual exposure time. The actual exposure times at shutter speeds of 15 and 30 seconds, for example, are respectively 16 and 32 seconds. The exposure time will again match the selected shutter speed at speeds of 60 seconds and slower.

Auto ISO Sensitivity Control (Mode M)

If auto ISO sensitivity control (\Box 156) is enabled, ISO sensitivity will automatically be adjusted for optimal exposure at the selected shutter speed and aperture.

Long Time-Exposures (Mode M Only)

The camera offers two options for long time-exposures: "Bulb" and "Time". Long time-exposures can be used for pictures of fireworks, night scenery, the stars, or moving lights.




A 35-second exposure shot at a shutter speed of "Bulb" and an aperture of f/25

Shutter speed	Description	
Bulb	The shutter remains open while the shutter-release button is held down.	
Time	The exposure starts when the shutter-release button is pressed and ends when the button is pressed a second time.	

1 Keep the camera steady, for example by using a tripod.

2 Hold the MODE button and rotate the main command dial to select mode M.

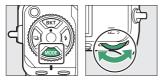



3 Rotate the main command dial to choose a shutter speed of Bulb ("Bulb") or Time ("Time").



Note that the exposure indicators are not displayed at a shutter speed of **Bulb** or **Time**.

4 Focus and start the exposure.

- "Bulb": Press the shutter-release button all the way down to start the exposure. Keep the shutter-release button pressed during the exposure.
- "Time": Press the shutter-release button all the way down to start the exposure.

5 End the exposure.

- "Bulb": Lift your finger from the shutter-release button.
- "Time": Press the shutter-release button all the way down a second time.

Long Time-Exposures

- Note that "noise" (bright spots, randomly-spaced bright pixels or fog) may be present in long exposures.
- Bright spots and fog can be reduced by choosing [**ON**] for [**Long exposure NR**] in the photo shooting menu.
- Nikon recommends using a fully-charged battery, the supplied charging AC adapter, or an optional AC adapter and power connector to prevent loss of power during long exposures.
- To prevent blur, use of a tripod or a device such as an optional remote cord or wireless remote controller is recommended.

Autoexposure Lock

Use autoexposure lock to recompose photographs after setting exposure for a specific area of the subject. Exposure lock comes in handy when the area used to set exposure is much brighter or darker than its surroundings.


1 With the subject positioned in the selected focus point and the shutter-release button pressed halfway, press the center of the sub-selector to lock exposure.

- While the center of the sub-selector is pressed, exposure will lock at the value metered in an area of the subject determined by the selected metering option.
- An **AE-L** icon will appear in the shooting display.
- If autofocus is enabled, focus will also lock.





2 Keeping the center of the sub-selector pressed, recompose the photograph and shoot.

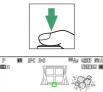

LT R

1/125 #5.8

Locking Exposure with the Shutter-Release Button

If [On (half press)] is selected for Custom Setting c1 [Shutter-release button AE-L], exposure will lock while the shutter-release button is pressed halfway.

🖉 Metered Area

- With [Spot metering], exposure will be locked at the value metered in a circle centered on the current focus point.
- With [Center-weighted metering], exposure will be locked at the value metered in a 12-mm circle in the center of the display.

Adjusting Shutter Speed and Aperture

The following settings can be adjusted while the center of the sub-selector is pressed:

Mode	Setting
Р	Shutter speed and aperture (flexible program; 🕮 133)
S	Shutter speed
Α	Aperture

 The new values can be confirmed in the shooting display and control panel.

Exposure Compensation

Exposure compensation is used to alter exposure from the value suggested by the camera. It can be used to make pictures brighter or darker.



-1 EV



No exposure compensation




+1 EV

Adjusting Exposure Compensation


Hold the 🖬 button and rotate a command dial.

- Choose from values between -5 EV (underexposure) and +5 EV (overexposure).
 Values between -3 EV and +3 EV are available in video mode.
- At default settings, changes to exposure compensation are made in increments of ¹/₃ EV. The size of the increments can be changed using Custom Setting b2 [EV steps for exposure cntrl].

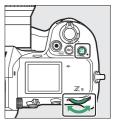

• Higher values make the subject brighter, lower values darker.

 I icons and exposure indicators appear in the shooting display and control panel. In modes other than M, the zero ("O") at the center of the exposure indicator flashes. The current value for exposure compensation can be confirmed by pressing the button.

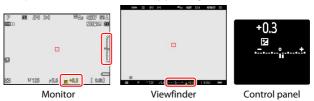

 \bullet Normal exposure can be restored by setting exposure compensation to $\pm 0.0.$ Exposure compensation is not reset when the camera is turned off.

🖉 Mode M

- In mode **M**, exposure compensation affects only the exposure indicator; shutter speed and aperture do not change.
- When auto ISO sensitivity control (
 ¹⁵⁶) is in effect, ISO sensitivity is automatically adjusted according to the value selected for exposure compensation.

🖉 Using a Flash

When an optional flash is used, exposure compensation affects both flash level and exposure, altering the brightness of both the main subject and the background; if desired, the effect can be restricted to the background using Custom Setting e3 [**Exposure comp. for flash**].

Release Mode

Choosing a Release Mode

To choose the operation performed when the shutter-release button is pressed all the way down, hold the release mode dial lock release and rotate the release mode dial.

• Stop when the pointer aligns with the desired setting.



Mode		Description		
S	Single frame	The camera takes one photograph each time the shutter-release button is pressed.		
믹니	Continuous low-speed	• Choose from rates of from 10 to 1 fps To choose		
Continuous		 The camera takes photographs at a selected rate while the shutter-release button is pressed. Use for active subjects. Choose from rates of from 20 to 10 fps. To choose the frame rate, hold the 및 button and rotate a command dial. 		

	Mode	Description		
Ś	Self-timer	Take pictures with the self-timer (\Box 152).		
Ð	Quick release- mode selection	 Hold the button and rotate the main command dial to select the release mode (148). Quick release-mode selection can be used to choose high-speed frame capture modes with frame rates of 30 or 120 fps (149). 		

🔽 Frame Advance Rate

- The frame rates for continuous low-speed and continuous high-speed modes can also be selected using Custom Setting d1 [Continuous shooting speed].
- The actual frame rate when a frame advance rate of 8 fps is selected in continuous low-speed mode is 7.5 fps.
- The values given above for frame advance rate assume a focus mode of **AF-C**, shooting mode **M**, a shutter speed of 1/250 s or faster, and default values for all other settings. Frame advance rates may slow:
 - during flash photography,
 - in silent mode,
 - when flicker is detected with [**ON**] selected for [**Photo flicker reduction**] in the photo shooting menu,
 - if aperture is stopped down to a very high f-number, or
 - at slow shutter speeds.
- When [ON] is selected for [Photo flicker reduction] in the photo shooting menu (
 ^{CD}518), the shooting display will briefly go dark during burst photography.

Cautions: Burst Photography

- Depending on shooting conditions and memory card performance, the memory card access lamp may light for anywhere from a few tens of seconds to around a minute. Do not remove the memory card while the memory card access lamp is lit. Not only could any unrecorded pictures be lost, but the camera or memory card could be damaged.
- At shutter speeds slower than $1/_{250}$ s, the shooting display does not update in real time during burst photography. To track your subject during shooting, choose shutter speeds faster than $1/_{250}$ s.
- If the camera is switched off while the memory card access lamp is lit, it will not power off until all pictures in the buffer have been recorded.
- If the battery is exhausted while pictures remain in the buffer, the shutter release will be disabled and the pictures transferred to the memory card.

🖉 The Memory Buffer

- While the shutter-release button is pressed halfway, the frame-count display will show the number of pictures that can be stored in the memory buffer.
- When the buffer is full, the display will show **r000** and the frame rate will drop.



 The number shown is approximate. The actual number of photos that can be stored in the memory buffer varies with camera settings and shooting conditions.

II Quick Release-Mode Selection

With the release mode dial rotated to , you can choose a release mode by holding the button and rotating the main command dial.



• Settings for the selected mode can be adjusted by holding the 🖵 button and rotating the sub-command dial.



• High-speed frame capture modes with frame advance rates of 30 or 120 fps are available only when the release mode dial is rotated to **(**(1) (149).

High-Speed Frame Capture (C30/C120)

For high-speed burst photography at frame rates of 30 or 120 fps, set the release mode dial to 🖵 and then hold the 🖵 button and rotate the main command dial to choose [**C30**] or [**C120**].





• The maximum length for bursts taken in these modes is approximately four seconds.

• Photos can be taken at the following settings:

Option	C30	C120	
Shutter speed	¹ / ₃₂₀₀₀ to ¹ / ₆₀ s	¹ / ₃₂₀₀₀ to ¹ / ₁₂₅ s	
[Image area]	[FX (36×24)] or [DX (24×16)]	[FX (36×24)] only	
[Image quality]	[JPEG not	r mal] only	
[Image size]	[Large] only	[Small] only	

- The upper limit for ISO sensitivity is ISO 25600, even when higher values (Hi 0.3 through Hi 2.0) are selected.
- Pictures are recorded in JPEG format.
- \bullet Exposure compensation is restricted to values between -3 and +3 EV, although settings between -5 and +5 EV can be selected.
- If a DX lens is attached when [C120] is selected, the release mode will change to [C30] and image area will be fixed at [DX (24×16)].
- The touch shutter can be used only to take one picture at a time. Use the shutter-release button for high-speed frame capture.

High-Speed Frame Capture: Restrictions

High-speed frame capture cannot be combined with some camera features, including:


- flexible program,
- photo flicker reduction,
- flash photography,
- bracketing,
- multiple exposures,
- HDR overlay,
- interval-timer photography,
- time-lapse video recording, and
- focus shift.

<u>Using the Self-Timer (ර්)</u>

In self-timer mode, pressing the shutter-release button all the way down starts a timer, and a photo is taken when the timer expires.

1 Rotate the release mode dial to ⊗ (self-timer mode).

Hold the release mode dial lock release and rotate the release mode dial to 🖄.

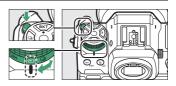

2 Frame the photograph and focus.

The timer will not start if the shutter cannot be released, as may be the case, for example, if the camera is unable to focus when **AF-S** is selected for focus mode.



3 Start the timer.

- Press the shutter-release button all the way down to start the timer; the selftimer lamp will begin to flash. The lamp stops flashing two seconds before the timer expires.
- To turn the self-timer off before a photograph is taken, rotate the release mode dial to another setting.
- The timer duration, the number of shots taken, and the interval between shots can be selected using Custom Setting c2 [Self-timer].





Setting the Timer

To choose the timer duration, press and hold the lip button and rotate a command dial.



ISO Sensitivity

About ISO Sensitivity

The camera's sensitivity to light (ISO sensitivity) can be adjusted according to the amount of light available. In general, choosing higher values allows faster shutter speeds at the same aperture. Choose from settings of from ISO 64 to 25600. Extended settings of from about 0.3 to 1 EV (ISO 32 equivalent) below ISO 64 and 0.3 to 2 EV (ISO 102400 equivalent) above ISO 25600 are also available.

Adjusting ISO Sensitivity

Hold the ISO (F) button and rotate the main command dial.

- Your selection is shown in the shooting display and control panel.
- At default settings, changes to ISO sensitivity are made in increments of 1/3 EV. The size of the increments can be changed using Custom Setting b1 [ISO sensitivity step value].



🔽 High ISO Sensitivities

The higher the ISO sensitivity, the less light needed to make an exposure, allowing pictures to be taken when lighting is poor and helping prevent blur when the subject is in motion. Note, however, that the higher the sensitivity, the more likely the picture is to be affected by "noise" in the form of randomly-spaced bright pixels, fog, or lines.

 "Noise" can be reduced by enabling high ISO noise reduction. High ISO noise reduction can be enabled using the [High ISO NR] items in the photo shooting and video recording menus.

The Photo Shooting Menu [ISO Sensitivity Settings] Option

ISO senstivity can also be adjusted using the [**ISO sensitivity settings**] item in the photo shooting menu.

۵	PHOTO SHOOTING MENU		
뼺	Role played by card in Slot 2	[]+[]	
1	Image area		
	Image quality	NORM	
	Image size		
	RAW recording	ON塑	
	ISO sensitivity settings		>
	White balance	AUTOo	

🖉 Hi 0.3–Hi 2.0

A setting of [**Hi 0.3**] corresponds to an ISO sensitivity approximately 0.3 EV higher than ISO 25600 (ISO 32000 equivalent) and [**Hi 2.0**] to an ISO sensitivity approximately 2 EV higher (ISO 102400 equivalent). Note that pictures taken at these settings are particularly prone to "noise" in the form of randomly-spaced bright pixels, fog, or lines.

🖉 Lo 0.3–Lo 1.0

[Lo 0.3] corresponds to an ISO sensitivity about 0.3 EV below ISO 64 (ISO 50 equivalent). [Lo 1.0] is roughly 1 EV below ISO 100 (ISO 32 equivalent). Use for larger apertures or slower shutter speeds when lighting is bright. Highlights may be overexposed. In most cases, ISO sensitivities of ISO [64] or above are recommended.

Auto ISO Sensitivity Control


Auto ISO sensitivity control automatically adjusts ISO sensitivity if optimal exposure cannot be achieved at the value selected by the user. You can select an upper limit for auto ISO sensitivity control (100–Hi 2.0) to prevent ISO sensitivity being raised too high.

Enabling Auto ISO Sensitivity Control

 Hold the ISO button and rotate the subcommand dial to select from ISO AUTO (auto ISO sensitivity control enabled) and ISO (auto ISO sensitivity control disabled).



• When auto ISO sensitivity control is enabled, the shooting display will show **ISO AUTO** and control panel **ISO-A**. When sensitivity is altered from the value selected by the user, the ISO sensitivity will be shown in the displays.

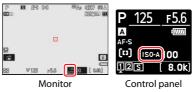

• Maximum sensitivity can be adjusted using the [ISO sensitivity settings] item in the photo shooting menu.

Cautions: Auto ISO Sensitivity Control

- If the value currently selected for [**ISO sensitivity**] is higher than that chosen for [**Maximum sensitivity**], the value chosen for [**ISO sensitivity**] will serve as the upper limit for auto ISO sensitivity control.
- During flash photography, shutter speed is limited to the range defined by the values selected for Custom Settings e1 [Flash sync speed] and e2 [Flash shutter speed]. If the value selected for [Minimum shutter speed] is not in this range, the value selected for Custom Setting e2 [Flash shutter speed] becomes the effective minimum shutter speed.
- Except in mode M, videos are recorded using auto ISO sensitivity control. Auto ISO sensitivity control can be enabled for video recording in mode M by selecting [ON] for [ISO sensitivity settings] > [Auto ISO control (mode M)] in the video recording menu.

White Balance

About White Balance

White balance ensures that colors appear natural regardless of the color of the light source. The default setting (${}^{IIII}A$) is suitable for use with most light sources, but if it fails to produce the desired results, other settings can be selected according to the weather or light source.

Adjusting White Balance

To choose a white balance option, hold the **WB** button and rotate the main command dial. The selected option is shown by an icon in the shooting display.





Options for the selected setting, if any, can be selected by holding the **WB** button and rotating the sub-command dial.

	Option	Color temperature *	Description		
⊞A [Auto]			The camera adjusts white balance for optimal results with most light sources. If an optional flash unit is used, white balance will be adjusted in accord with the conditions in effect when the flash fires.		
	[™] A₀ [Keep white (reduce warm colors)]	Approx. 3500– 8000 K	Eliminate the warm color cast produced by incandescent lighting.		
	^{IIB} A1 [Keep overall atmosphere]	Approx. 3500– 8000 K	Partially preserve the warm color cast produced by incandescent lighting.		
	^{IIB} A ₂ [Keep warm lighting colors]	Approx. 3500– 8000 K	Preserve the warm color cast produced by incandescent lighting.		
	A [Natural light Ito]	Approx. 4500– 8000 K	White balance is adjusted for non- artificial light sources, producing more life-like colors than does [Auto] when used under natural light.		
	E[Direct [] [] [] [] [] [] [] [] [] [] [] [] [] [Approx. 5200 K	Use with subjects lit by direct sunlight.		
đ	[Cloudy]	Approx. 6000K	Use in daylight under overcast skies.		
Å s	[Shade]	Approx. 8000K	Use in daylight with subjects in shade.		
Å	[Incandescent]	Approx. 3000K	Use under incandescent lighting.		

Option Color temperatur		Color temperature *	Description	
) //	[Fluorescent]			
	[Cool-white fluorescent]	Approx. 4200K	Use under fluorescent lighting; choose	
	[Day white fluorescent]	Approx. 5000K	bulb type according to light source.	
	[Daylight fluorescent]	Approx. 6500K		
W	🛿 🗲 [Flash]	Approx. 5400K	Use for flash photography.	
	Image: Choose color temperature]Approx. 2500- 10000K		 Direct color-temperature selection. To choose a color temperature, hold the WB button and rotate the sub- command dial. 	
PRE [Preset manual]		i]	 Measure white balance directly from a subject or light source or copy white balance from an existing photograph. To choose a white balance preset, hold the WB button and rotate the sub-command dial. To enter direct measurement mode, press and hold the WB button (CII 170). 	

* Values when fine-tuning is set to 0.

🔽 🗮 🗛 [Natural Light Auto]

***A** [Natural light auto] may not produce the desired results under artificial light. Choose **A** [Auto] or an option that matches the light source.

🔽 Studio Flash Lighting

■A [Auto] may not produce the desired results with large studio flash units. Use preset manual white balance or set white balance to ■ flash] and use fine-tuning to adjust white balance.

🖉 Auto

The photo info [Basic shooting data] page for pictures shot with □□A [Auto] or ※A [Natural light auto] selected for white balance lists the color temperature selected by the camera at the time the picture was taken (□235). You can use this as reference when choosing a value for [Ճ] [Choose color temperature].

WTR, SP EXP. NO	D, AP. De, ISO	:100 P,100	1/125	, F5. 6
I ENS	LENGTH E / AREA	:50mm :50 :AF-S /	/1.8 SINGLE-	POINT
WHITE	BALANCE	:AUTO_O	(5000K)	
COLOR	SPACE	SRGB		
		_0.	<	
IKON Z 9				×[f] 100-00

• To view the [Basic shooting data] page during playback, go to [Playback display options] in the playback menu and place checks (☑) next to [Shooting data] and [Basic shooting data].


The [White Balance] Options

White balance can also be adjusted from the photo shooting and video recording menus.

۵	PHOTO SHOOTING MENU	(8
-	Image quality	NORM	
	Image size		
	RAW recording	ON塑	>
	ISO sensitivity settings		
۲	White balance	AUTOo	>
	Set Picture Control	⊡A	>
	Manage Picture Control		

Color Temperature

The perceived color of a light source varies with the viewer; some may have a red cast while others appear blue. Color temperature is an objective measure of the color of a light source, expressed in Kelvins (K). The lower the color temperature, the redder the cast (D); the higher the temperature, the bluer the cast (D).

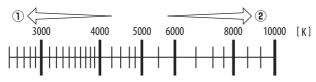

Choosing a Color Temperature

In general, choose lower values if your pictures have a red cast or to intentionally make pictures bluer, higher values if your pictures are tinged blue or to intentionally make pictures redder.

Fine-Tuning White Balance

For information on fine-tuning [**Preset manual**] white balance, see "Fine-Tuning Preset Manual White Balance" (© 176).



2 Fine-tune white balance.

 Use the multi selector to position the cursor on the grid. The cursor can be moved up to six steps from the center along either of the A (amber)–B (blue) and G (green)–M (magenta) axes. The selected value is displayed to the right of the grid.



- The A (amber)–B (blue) axis corresponds to color temperature and is ruled in increments of 0.5. A change of 1 is equivalent to approximately 5 mired.
- The G (green)–M (magenta) axis has effects similar to color compensation filters and is ruled in increments of 0.25. A change of 1 is equivalent to approximately 0.05 diffuse density units.

3 Save changes.

- Press ® to save changes and exit to the menus.
- If white balance has been fine-tuned, an asterisk ("★") will appear in the white balance icon.



🖉 The i Menu

Pressing \circledast when [White balance] is highlighted in the *i* menu displays a list of white balance options. If an option other than [3] [Choose color temperature] is highlighted, fine-tuning options can be displayed by pressing \circledast . Any changes to fine-tuning options can be previewed in the display.





G Increase green

- B Increase blue
- A Increase amber
- M Increase magenta
- Tap the arrows in the display or use the multi selector to fine-tune white balance.
- Press [®] to save changes and return to the *i* menu.
- If white balance has been fine-tuned, an asterisk ("#") will appear in the white balance icon.

P 1 10	e afs	()x()	ar ar an
	1/ 125	75. 8	(7777) (7777) (8.8%)

The Information Display

To choose a white balance setting using the command dials, press the **WB** button while shooting information is displayed. The selected setting can be fine-tuned using the multi selector while the **WB** button is pressed.



White Balance Fine-Tuning

The colors on the fine-tuning axes are relative, not absolute. Selecting more of a color on a given axis does not necessarily result in that color appearing in pictures. For example, moving the cursor to B (blue) when a "warm" setting such as \clubsuit [Incandescent] is selected will make pictures slightly "colder" but will not actually make them blue.

🖉 "Mired"

Values in mired are calculated by multiplying the inverse of the color temperature by 10^6 . Any given change in color temperature produces a greater difference in color at low color temperatures than it would at higher color temperatures. For example, a change of 1000 K produces a much greater change in color at 3000 K than at 6000 K. Mired is a measure of color temperature that takes such variation into account, and as such is the unit used in color-temperature compensation filters.

E.g.: Change in color temperature (in Kelvin) : Value in mired

- 4000 K-3000 K = 1000 K : 83 mired
- 7000 K-6000 K = 1000 K : 24 mired

Choosing a Color Temperature

Using the Menus

Choose a color temperature by entering values for the A (amber)–B (blue) and G (green)–M (magenta) axes.

Select [White balance] in the photo shooting menu, then highlight ☑ [Choose color temperature] and press ⊕.

2 Choose a color temperature.

- Press € or ⊕ to highlight digits on the amber (A)–blue (B) axis and press ⊕ or ⊕ to change.
- Press € or ⊕ to highlight the value for the green (G)–magenta (M) axis and press ⊕ or ⊕ to change.





3 Save changes.

- Press
 to save changes and exit to the menus.
- If a value other than 0 is selected for the green (G)-magenta (M) axis, an asterisk ("#") will appear in the white balance icon.



Using Buttons (Amber-Blue Only)

To adjust color temperature when [**Choose color temperature**] is selected for white balance, hold the **WB** button and use the multi selector or rotate the sub-command dial.





- Hold the **WB** button and rotate the sub-command dial to choose a color temperature in mireds.
- To highlight a digit, hold the **WB** button and press ④ or ④. Press ④ or ⊕ to edit the highlighted digit.
- Changes apply only to the A (amber)–B (blue) axis.
- The selected setting takes effect when the **WB** button is released.

Cautions: Color-Temperature Selection

- Do not use color-temperature selection with fluorescent light sources; instead, use the # [Fluorescent] option.
- When using color-temperature selection with other light sources, take a test shot to determine if the selected value is appropriate.

🖉 The i Menu

Pressing \circledast when [**White balance**] is highlighted in the *i* menu displays a list of white balance options. When **I** [**Choose color temperature**] is highlighted, color temperature options can be viewed by pressing C.



Value for Amber-Blue axis

- Value for Green– Magenta axis
- Press ④ or ④ to highlight digits on the A–B (amber–blue) axis. You can also highlight the G–M (green–magenta) axis.
- Press ⊕ or ⊕ to edit the selected item.
- Press ${}^{\scriptsize \ensuremath{ \otimes }}$ to save changes and return to the ${m i}$ menu.
- If a value other than 0 is selected for the green (G)-magenta (M) axis, an asterisk ("#") will appear in the white balance icon.

Preset Manual

White balance settings such as TA [Auto], * [Incandescent], and [Choose color temperature] may fail to produce the desired results under mixed lighting or lighting with a strong color cast. Should this occur, white balance can be set to a value measured under the light source used in the final photograph. Two methods are available for setting preset white balance:

Method	Description		
Direct measurement	Measure white balance in a selected area of the frame (\Box 171).		
Copying a value from existing photograph	Copy white balance from a photo on a memory card (\Box 174).		

🔽 White Balance Presets

Changes to white balance presets d-1 through d-6 apply to all shooting menu banks (A–D). For example, changes to presets made when shooting menu bank A is selected also apply to shooting menu banks B through D.

Direct Measurement

The camera can store up to six values for preset manual white balance.

1 Hold the WB button and rotate the main command dial to select PRE.





2 Select a preset.

Hold the **WB** button and rotate the sub-command dial until the desired white balance preset (d-1 to d-6) is displayed.







3 Select direct measurement mode.

- Release the **WB** button briefly and then press the **WB** button until the **PRE** icon in the monitor starts to flash.
- A white balance target (
) will appear in the center of the frame.



4 Position the white balance target (□) over a white or gray object and measure a value for preset manual white balance.

• Position the target (
) using the multi selector.



- To measure white balance, press the shutter-release button all the way down or press ®.
- You can also position the target (
) and measure white balance by tapping the display.
- Target selection will not be available if an optional flash unit is attached. Frame the shot so that the white or gray reference object is in the center of the display.
- If the camera is unable to measure white balance, a message will be displayed and the camera will return to direct measurement mode. Try measuring white balance again, for example with the target (
) positioned over a different area of the subject.

5 Press the *i* button to exit direct measurement mode.

🔽 The Preset Manual White Balance Menu

The preset manual white balance menu can be accessed by selecting [**White** balance] > PRE [**Preset manual**] in the photo shooting menu. The preset manual white balance menu offers options for copying values for preset manual white balance from an existing photograph or adding comments to or protecting white balance presets.

V Protected Presets

White balance presets indicated by On icons are protected and cannot be changed.

🔽 Preset Manual: Selecting a Preset

- White balance presets can be viewed by selecting [White balance] > PRE [Preset manual] in the photo shooting menu. To recall a stored value, highlight a preset using the multi selector and press ⁽³⁾.



🔽 Direct Measurement Mode

Direct measurement mode will end if no operations are performed in the time selected for Custom Setting c3 [**Power off delay**] > [**Standby timer**].

🔽 Measuring White Balance

Preset manual white balance cannot be measured during high-speed frame capture or multiple exposures.

Copying White Balance from a Photograph

Follow the steps below to copy a value for white balance from an existing photograph to a selected preset.

 Select [White balance] in the photo shooting menu, then highlight [Preset manual] and press ().



2 Select a destination.

- Using the multi selector, highlight the destination preset (d-1 to d-6).
- Press ♥ to view the preset manual white balance menu.

3 Choose [Select picture].

Highlight [**Select picture**] and press to view the pictures on the current memory card.



Select OKO

d-1

4 Highlight the source picture.

- Highlight the desired picture using the multi selector.
- To view the highlighted picture full frame, press and hold the ♥ button.



5 Copy white balance.

- Press ® to copy the white balance value for the highlighted photograph to the selected preset.
- If the highlighted photograph has a comment, the comment will be copied to the comment for the selected preset.

Fine-Tuning Preset Manual White Balance

The selected preset can be fine-tuned by selecting [**Fine-tune**] in the preset manual white balance menu.

"Edit Comment"

To enter a descriptive comment of up to 36 characters for the current white balance preset, select [**Edit comment**] in the preset manual white balance menu. Enter a comment as described in "Text Entry" (\square 64).

"Protect"

To protect the current white balance preset, select [**ON**] for [**Protect**] in the preset manual white balance menu. The preset cannot be modified as long as [**ON**] is selected for [**Protect**].





5

03Dor

Bracketing 177

Bracketing

Bracketing automatically varies exposure, flash level, Active D-Lighting (ADL), or white balance slightly with each shot, "bracketing" the current value. Bracketing can be used in situations in which getting the right settings is difficult and there is not time to check results and adjust settings with each shot, or to experiment with different settings for the same subject.

Auto Bracketing Set

Bracketing is adjusted using the [Auto bracketing] > [Auto bracketing set] item in the photo shooting menu, which contains the following options:

Option	Description
[AE & flash bracketing]	The camera varies exposure and flash level over a series of photographs.
[AE bracketing]	The camera varies exposure over a series of photographs.
[Flash bracketing]	The camera varies flash level over a series of photographs.
[WB bracketing]	The camera creates multiple copies of each photograph, each with a different white balance.
[ADL bracketing]	The camera varies Active D-Lighting (ADL) over a series of exposures.



Exposure and Flash Bracketing

Vary exposure and/or flash level over a series of photographs. To perform exposure and/or flash bracketing:







-1 EV



+1 EV


No exposure compensation

1 Choose the number of shots.


• Hold the **BKT** button and rotate the main command dial to choose the number of shots in the bracketing sequence.





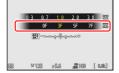

• At settings other than [**OF**], a bracketing icon and indicator will appear in the shooting display and control panel.

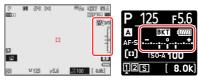

2 Select an exposure increment.

• Hold the **BKT** button and rotate the sub-command dial to choose the exposure increment.






- When [1/3 step] is selected for Custom Setting b2 [EV steps for exposure cntrl], the size of the increment can be chosen from 0.3 (1/₃), 0.7 (2/₃), 1.0, 2.0, and 3.0 EV. Bracketing programs with an increment of 2.0 or 3.0 EV offer a maximum of 5 shots. If a value of 7 or 9 was selected in Step 1, the number of shots will automatically be set to 5.
- The bracketing programs with an increment of 0.3 EV are listed below.


Control panel		Exposure and flash bracketing indicator	No. of shots	Bracketing order
0F	0.3	+	0	0
3F	0.3	+	3	0/-0.3/+0.3
5F	0.3	+	5	0/-0.7/-0.3/+0.3/+0.7
7F	0.3	+	7	0/-1.0/-0.7/-0.3/ +0.3/+0.7/+1.0
9F	0.3	+	9	0/-1.3/-1.0/-0.7/-0.3/ +0.3/+0.7/+1.0/+1.3

3 Take pictures.

- Take the number of pictures in the bracketing program.
- The modified values for shutter speed and aperture are shown in the display.
- While bracketing is in effect, the shooting display shows a bracketing icon, a bracketing progress indicator, and the number of shots remaining in the bracketing sequence. After each shot, a segment will disappear from the indicator and the number of shots remaining will be reduced by one.

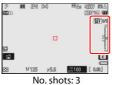

Increment: 0.7

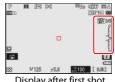

Display after first shot

• The control panel shows a **EXII** icon and a bracketing progress indicator. A segment disappears from the indicator after each shot.





Display after first shot

• Exposure changes due to bracketing are added to those made with exposure compensation.



Bracketing Options

When [**AE & flash bracketing**] is selected, the camera varies both exposure and flash level. Select [**AE bracketing**] to vary only exposure, [**Flash bracketing**] to vary only flash level. Note that flash bracketing is available in i-TTL and, where supported, auto aperture (**SA**) flash control modes only (**D**425, 816).

Exposure and Flash Bracketing

- [Number of shots] and [Increment] can also be selected via the [Auto bracketing] item in the photo shooting menu.
- In continuous release modes, shooting will pause after the number of shots specified in the bracketing program have been taken. Shooting will resume the next time the shutter-release button is pressed.
- If the camera is turned off before all shots in the sequence have been taken, bracketing will resume from the first shot in the sequence when the camera is turned on.

Exposure Bracketing

The settings (shutter speed and/or aperture) altered during exposure bracketing vary with the shooting mode.

Mode	Setting	
Р	Shutter speed and aperture ¹	
S	Aperture ¹	
Α	Shutter speed ¹	
м	Shutter speed ^{2, 3}	

- 1 If [ON] is selected for [ISO sensitivity settings] > [Auto ISO sensitivity control] in the photo shooting menu, the camera will automatically vary ISO sensitivity for optimum exposure when the limits of the camera exposure system are exceeded.
- 2 If [ON] is selected for [ISO sensitivity settings] > [Auto ISO sensitivity control] in the photo shooting menu, the camera will vary ISO sensitivity.
- 3 Use Custom Setting e6 [Auto bracketing (mode M)] to choose whether the camera varies both shutter speed and aperture or any one of shutter speed, aperture, and ISO sensitivity when [OFF] is selected for [ISO sensitivity settings] > [Auto ISO sensitivity control] in the photo shooting menu.

II Cancelling Bracketing


To cancel bracketing, press the **BKT** button and rotate the main command dial until the number of shots in the bracketing sequence is zero (**OF**). The program last in effect will be restored the next time bracketing is activated. Bracketing can also be cancelled by performing a two-button reset (\square 209), although in this case the bracketing program will not be restored the next time bracketing is activated.

White Balance Bracketing

The camera creates multiple copies of each photograph, each with a different white balance. To use white balance bracketing:


1 Choose the number of shots.

• Hold the **BKT** button and rotate the main command dial to choose the number of shots in the bracketing sequence.

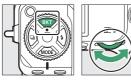




• At settings other than [**OF**], a bracketing icon and indicator will appear in the shooting display and control panel.

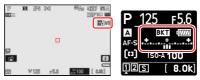

2 Select a white balance increment.

• Hold the **BKT** button and rotate the sub-command dial to choose the white balance increment.

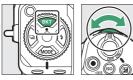



- The size of the increment can be chosen from 1 (1 step), 2 (2 steps), or 3 (3 steps).
- Each step is equivalent to 5 mired. Higher "A" values correspond to increased amounts of amber. Higher "B" values correspond to increased amounts of blue.
- The bracketing programs with an increment of 1 are listed below.

Control panel		White balance bracketing indicator	No. of shots	White balance increment	Bracketing order
0F	1	+	0	1	0
3F	1	+	3	1A, 1B	0/A1/B1
5F	1	+ • • • • • • • • • • • • • • • • • • •	5	1A, 1B	0/A2/A1/B1/B2
7F	1	+	7	1A, 1B	0/A3/A2/A1/ B1/B2/B3
9F	1	+	9	1A, 1B	0/A4/A3/A2/A1/ B1/B2/B3/B4

3 Take pictures.

• Each shot will be processed to create the number of copies specified in the bracketing program, and each copy will have a different white balance.



- Modifications to white balance are added to the white balance adjustment made with white balance fine-tuning.
- If the number of shots in the bracketing program is greater than the number of exposures remaining, the shutter release will be disabled. Shooting can begin when a new memory card is inserted.

🔽 White Balance Bracketing Restrictions

White balance bracketing is not available at image quality settings of NEF (RAW) or NEF (RAW) + JPEG.

🖉 White Balance Bracketing

- [Number of shots] and [Increment] can also be selected via the [Auto bracketing] item in the photo shooting menu.
- White balance bracketing affects only color temperature (the amber-blue axis in the white balance fine-tuning display). No adjustments are made on the green-magenta axis.
- If the camera is turned off while the memory card access lamp is lit, the camera will power off only after all photographs in the sequence have been recorded.
- In self-timer mode, the number of copies specified in the white balance bracketing program will be created each time the shutter is released, regardless of the option selected for Custom Setting c2 [Self-timer] > [Number of shots].

Cancelling Bracketing

To cancel bracketing, press the **BKT** button and rotate the main command dial until the number of shots in the bracketing sequence is zero (**OF**). The program last in effect will be restored the next time bracketing is activated. Bracketing can also be cancelled by performing a two-button reset (\square 209), although in this case the bracketing program will not be restored the next time bracketing is activated.

ADL Bracketing

The camera varies Active D-Lighting (ADL) over a series of exposures. To use ADL bracketing:

1 Choose the number of shots.


• Hold the **BKT** button and rotate the main command dial to choose the number of shots in the bracketing sequence.







• At settings other than [**OF**], a bracketing icon and indicator will appear in the shooting display and control panel.

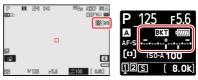


• The number of shots determines the bracketing sequence:

No. of shots		Bracketing sequence	
2 $[Off] \rightarrow$ Value selected in Step 2		[Off] → Value selected in Step 2	
3		[Off] → [Low] → [Normal]	
4 [Off] → [Low] → [Normal]		[Off] → [Low] → [Normal] → [High]	
	[H1]	$[Off] \rightarrow [Low] \rightarrow [Normal] \rightarrow [High] \rightarrow [Extra high 1]$	
5	[H2]	[Low] → [Normal] → [High] → [Extra high 1] → [Extra high 2]	

- If you selected 5 shots, you can choose from bracketing sequences
 [H1] and [H2] by holding the BKT button and rotating the subcommand dial.
- If you chose more than two shots, proceed to Step 3.

2 Choose the Active D-Lighting amount.

• Hold the **BKT** button and rotate the sub-command dial to choose the Active D-Lighting setting for the second shot when the number of shots in the bracketing sequence is 2.

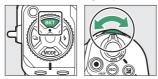

• The bracketing sequence varies with the Active D-Lighting amount as follows:

Amount	Bracketing sequence
[L]	[Off] → [Low]
[N]	[Off] → [Normal]
[H]	[Off] → [High]
[H1]	[Off] → [Extra high 1]
[H2]	[Off] → [Extra high 2]
[AUTO]	[Off] → [Auto]

3 Take pictures.

• Take the number of pictures in the bracketing program.



- While bracketing is in effect, the shooting display shows an ADL bracketing icon and the number of shots remaining in the bracketing sequence. After each shot, the number of shots remaining will be reduced by one.
- The control panel shows a EXE icon and a bracketing progress indicator. A segment disappears from the indicator after each shot.



No. shots: 3



Display after first shot

Mathematical ADL Bracketing

- [Number of shots] and [Amount] can also be selected via the [Auto bracketing] item in the photo shooting menu.
- In continuous release modes, shooting will pause after the number of shots specified in the bracketing program have been taken. Shooting will resume the next time the shutter-release button is pressed.
- If the camera is turned off before all shots in the sequence have been taken, bracketing will resume from the first shot in the sequence when the camera is turned on.

Cancelling Bracketing

To cancel bracketing, press the **BKT** button and rotate the main command dial until the number of shots in the bracketing sequence is zero (**0F**). The program last in effect will be restored the next time bracketing is activated. Bracketing can also be cancelled by performing a two-button reset (\square 209), although in this case the bracketing program will not be restored the next time bracketing is activated.


Picture Controls

About Picture Controls

Choose image processing ("Picture Control") options for new photos according to the scene or your creative intent.

Choosing a Picture Control

At default settings, Picture Controls can be selected by holding the **O**n (**Fn4**) button and rotating the main command dial. The selected option is shown by an icon in the shooting display.

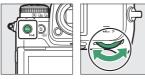



- When a Creative Picture Control is selected, the effect level can be chosen by holding the **O-n** (**Fn4**) button and rotating the sub-command dial.
- The Picture Control for videos can be selected by pressing the **O-n** (**Fn4**) button in video mode.

Option		Description
œ۸	[Auto]	The camera automatically adjusts hues and tones based on the [Standard] (photo mode) or [Neutral] (video mode) Picture Control.
⊠SD	[Standard]	Standard processing for balanced results. Recommended for most situations.
ßNL	[Neutral]	Minimal processing for natural results. Choose for photographs that will later be processed or retouched.
EVI	[Vivid]	Pictures are enhanced for a vivid, photoprint effect. Choose for photographs that emphasize primary colors.
⊠MC	[Monochrome]	Take monochrome photographs.
©PT	[Portrait]	Smooth complexions for natural-looking portraits.
۳LS	[Landscape]	Shoot vibrant landscapes and cityscapes.
ßFL	[Flat]	Details are preserved over a wide tone range, from highlights to shadows. Choose for photographs that will later be extensively processed or retouched.
⊠01– ເ⊋20	Creative Picture Control	Creative Picture Controls offer unique combinations of hue, tone, saturation, and other settings tuned for particular effects. Choose from a total of 20 options, including [Dream] and [Morning].

"Set Picture Control"

- Picture Controls can also be selected using the [Set Picture Control] items in the photo shooting and video recording menus.
- The [Set Picture Control] item in the video recording menu also offers a [Same as photo settings] option that sets the Picture Control for videos to the same as that used for photographs.

Modifying Picture Controls

Picture Controls can be adapted to suit the scene or the photographer's creative intent.

Select a Picture Control.

Select [**Set Picture Control**] in the photo shooting or video recording menu and then highlight the desired Picture Control and press ③.

2 Adjust settings.

- Press (1) or (2) to highlight settings. Press
 (2) or (3) to choose a value in increments of 1, or rotate the sub-command dial to choose a value in increments of 0.25.
- The options available vary with the Picture Control selected.



CAdjust 030

et Picture Control

Standard

Monochrome

Neutra

Portrait

- To quickly adjust levels for balanced [Sharpening], [Mid-range sharpening], and [Clarity], highlight [Quick sharp] and press ① or ③.

3 Save changes and exit.

Press ® to save changes. Picture Controls that have been modified from default settings are indicated by an asterisk ("*****").



Picture Control Settings

Option	Description
[Effect level]	Mute or heighten the effect of Creative Picture Controls.
[Quick sharp]	Use [Quick sharp] to quickly adjust levels for balanced [Sharpening], [Mid-range sharpening], and [Clarity]. These parameters can also be adjusted individually.
[Sharpening]	Control the sharpness of details and outlines.
[Mid-range sharpening]	Adjust the sharpness of patterns and lines in the range between [Sharpening] and [Clarity].
[Clarity]	Adjust overall sharpness and the sharpness of thicker outlines without affecting brightness or dynamic range.
[Contrast]	Adjust contrast.
[Brightness]	Raise or lower brightness without loss of detail in highlights or shadows.
[Saturation]	Control the vividness of colors.
[Hue]	Adjust hue.
[Filter effects]	Simulate the effect of color filters on monochrome pictures.
[Toning]	Choose the tint used in monochrome pictures. Pressing when an option other than [B&W] (black-and-white) is selected displays saturation options.
[Toning] (Creative Picture Controls)	Choose the shade of color used for Creative Picture Controls.

🔽 The 🛆 Indicator

The Δ indicator under the value display in the Picture Control setting menu indicates the previous value for the setting.



🔽 [A] (Auto)

- Selecting the A (auto) option available for some settings lets the camera adjust the setting automatically.
- Results vary with exposure and the position of the subject in the frame.

[Filter Effects]

Choose from the following [Filter effects]:

Option	Description
[Y] (yellow) *	These options enhance contrast and can be used to tone
[O] (orange) *	down the brightness of the sky in landscape photographs. Orange [0] produces more contrast than
[R] (red) *	 photographs. Orange [U] produces more contrast than yellow [Y], red [R] more contrast than orange.
[G] (green) *	Green softens skin tones. Use for portraits and the like.

* The term in parentheses is the name of the corresponding third-party color filter for black-and-white photography.

🔽 The "Auto" Picture Control

Settings can be adjusted in the range **[A–2]** to **[A+2]**.



🖉 The i Menu

Highlighting [Set Picture Control] in the

i menu and pressing [®] displays a Picture Control list. Highlight a Picture Control and press [®] to edit settings while previewing the effect in the display.

• Press (*) or (*) to highlight settings. Press (*) or (*) to choose a value in increments of 1, or

rotate the sub-command dial to choose a value in increments of 0.25.

- The options available vary with the Picture Control selected.
- To abandon any changes and start over from default settings, press the fin (res) button.
- Picture Controls that have been modified from default settings are indicated by an asterisk ("*").

		846		KORLas ma
(2) (1)				i
Ø	V 125	9 5. 6	150 a(70) 100	47773 [8.8k]

100 miles 100 miles



Custom Picture Controls

Save modified Picture Controls as custom Picture Controls.

Option	Description	
Save/edit Create a new custom Picture Control based on an existin [Save/edit] preset or custom Picture Control, or edit existing custom Picture Controls. Picture Controls.		
[Rename]	Rename custom Picture Controls.	
[Delete]	Delete custom Picture Controls.	
[Load/save]	Copy custom Picture Controls to and from a memory card.	


II Creating Custom Picture Controls

1	Highlight [Manage Picture Control] in the photo shooting or video recording
	menu and press 🚱.

۵	PHOTO SHOOTING MENU	(0
-	Image size		>
Ĵ.	RAW recording	ON塑	>
"	ISO sensitivity settings		>
	White balance	AUTOo	>
	Set Picture Control		>
	Manage Picture Control		>
	Color space	sRGB	>

2 Select [Save/edit].

Highlight [Save/edit] and press () to view [Choose Picture Control] options.

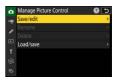

3 Select a Picture Control.

- Highlight an existing Picture Control and press () to display edit options.
- To save a copy of the highlighted Picture Control without further modification, press .
 [Save as] options will be displayed; proceed to Step 5.

4 Adjust settings.

- The options and procedure are the same as for [Set Picture Control].
- Press
 (b) to display [Save as] options when settings are complete.
- To abandon any changes and start over from default settings, press the 面 () button.

5 Select a destination.

Choose a destination for the custom Picture Control (C-1 through C-9).





Vivid		Ð
Quick sharp	+1	^ +
Sharpening	+5. 00	
Mid-range sharpening	+3. 50	
Clarity	+2.00	
Contrast	0.00	\$ 7.9.1
Brightness		+
 Q:A		et 030K

6 Name the Picture Control.


- Pressing ③ when a destination is highlighted in the previous step displays the [**Rename**] text-entry dialog.
- The default name, created by adding a two-digit number to the name of the existing Picture Control, appears in the text display area. The two-digit number is generated automatically by the camera.



- Custom Picture Control names can be up to nineteen characters long.
- For information on text entry, see "Text Entry" (264).

7 Press the e button.

• Text entry will end.

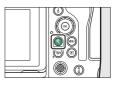

• The new Picture Control will be added to the Picture Control list.



The Original Picture Control Icon

The original preset Picture Control on which the custom Picture Control is based is indicated by an icon in the edit display.



Custom Picture Control Options

The options available with custom Picture Controls are the same as those on which the custom Picture Control was based.

Sharing Custom Picture Controls

The [Load/save] item in the [Manage Picture Control] menu can be used to copy custom Picture Controls from the camera to a memory card. You can also delete custom Picture Controls or copy them from a memory card to the camera (the memory card must be inserted in Slot 1, as memory cards inserted in Slot 2 will not be detected).

۵	Manage Picture Control	C (9
-	Save/edit	>
	Rename	>
	Delete	>
	Load/save	>

- [Copy to camera]: Copy (import) custom Picture Controls from the memory card to the camera. The Picture Controls are copied to custom Picture Controls C-1 through C-9 on the camera and can be named as desired.
- [Delete from card]: Delete selected custom Picture Controls from the memory card.
- [Copy to card]: Copy (export) a custom Picture Control from the camera to a memory card. Highlight a destination (1 through 99) for the selected Picture Control and press ⁽²⁾ to export it to the memory card.

Location Data

The built-in location data unit records the camera's current latitude, longitude, and altitude, together with the current time (Coordinated Universal Time, or UTC). Location data embedded in pictures can be viewed in the location data page of the playback photo info display (C228).

Location Data Options

To enable or disable the location data function or adjust location data settings, highlight [**Location data (built-in)**] in the setup menu and press **()**.


Option	Description		
[Record location data]	Select [ON] to enable the location data function.		
[Standby timer]	If [ON] is selected when [Record location data] is set to [ON] , the standby timer will expire if no operations are performed for the period chosen using Custom Setting c3 [Power off delay] > [Standby timer] . Choose this option to reduce the drain on the battery.		
[Set clock from satellite]	Select [ON] to synchronize the camera clock with the time reported by the location data function.		
[Create log]	 Record a track log. [Log location data]: The camera will log location data at the interval chosen using [Log interval] for the time selected for [Log length]. To end, pause, or resume the log, highlight [Create log] and press ⁽³⁾. [Log interval]: Choose how often the camera logs its current location. [Log length]: Choose how long logging will continue. 		

Option	Description
[Log list]	 List track logs by date. Where multiple logs were recorded on the same day, an identifier appears after the date. The camera can store up to 100 track logs. To delete a log, highlight it and press fin (***).
[Position]	View the latitude, longitude, altitude, and Coordinated Universal Time (UTC) currently reported by the built-in location data unit. UTC data are provided by the built-in location data unit independently of the camera clock.

II The Satellite Signal Indicator

Signal strength is shown by a 🐐 icon in the shooting display.

• **Solution**: The camera records the current latitude, longitude, and altitude.

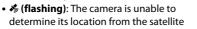



signal; location data are not recorded. Wait for the 🐔 icon to stop flashing.

ala titr al NORME E

🔽 Cautions: Location Data

- Turning the camera off does not disable the location data function. The location data function can be disabled by selecting [OFF] for [Location data (built-in)] > [Record location data] in the setup menu.
- The location data recorded with videos are those reported at the start of recording.
- The camera may in certain cases need additional time to acquire location data, for example immediately after the battery is inserted, when the location data function is enabled for the first time, or after an extended period of disuse.
- The positions of navigation satellites change constantly. This may slow or prevent the acquisition of location data in some locations or at certain hours of the day.
- Satellite signals may be blocked or reflected in the locations listed below, rendering the data acquired less accurate or preventing its acquisition altogether.
 - In buildings or under ground
 - Between tall buildings
 - Under bridges
 - In tunnels
 - Near power lines or similar structures
 - In dense forest
 - In metal briefcases or other containers
- The presence of cellular telephones or other devices that produce strong electromagnetic fields or transmit on frequencies close to those of navigation satellites may interfere with the acquisition of location data.
- Where the error in the signal from the satellite is very large, the location reported by the camera may differ from its actual location by up to several hundred meters.
- Due to variability in the precision of the location data acquired, differences between geodetic systems, and other factors, the location data embedded in pictures may differ from the location in which they were actually recorded.

Cautions: Track Logs

- Track logs will not be recorded if the camera clock is not set or if no memory card is inserted.
- To prevent logs being interrupted, be sure the camera battery is fully charged.
- Tracking ends if:
 - the camera battery runs low,
 - the battery is removed, or
 - [OFF] is selected for [Location data (built-in)] > [Record location data].
- Location data will not be logged while the camera is unable to acquire a satellite signal.

V Track Logs

- The time remaining appears in the [Location data (built-in)] display while logging is in progress.
- Logs are not interrupted when the camera is turned off or the standby timer expires. Be sure to monitor the battery level while logging is in progress.
- Logs are stored in the "NIKON" > "GNSS" folder on the memory card and have names of the form "Nyymmddx.log". Here "yy" is the last two digits of the current year, "mm" the month, "dd" the day, "x" a single-character identifier from 0 (zero) to Z assigned in ascending order by the camera, and ".log" the extension (thus the first log recorded on October 15, 2021, will be named "N2110150.log").
- Logs are in NMEA format. There is however no guarantee that they will display correctly in all software or on all devices.

🖉 SnapBridge

- You can also use the SnapBridge app to download location data to the camera from a smartphone or tablet (smart device) via a wireless link even when location data cannot be acquired using the camera's built-in location data unit. See SnapBridge online help for details.
- Location data downloaded from the smart device will be recorded with pictures even if [OFF] is selected for [Location data (built-in)] > [Record location data]. Location data recording can be ended by disabling the location data feature in the SnapBridge app.

Two-Button Reset

The camera settings listed below can be restored to default values by pressing the two buttons marked with green \bullet dots (**BKT** and **2**) at the same time and holding them for over two seconds (the shooting display and control panel turn off briefly while settings are reset).

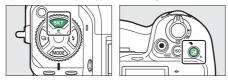


Photo Shooting Menu

With the exceptions of multiple exposure, interval timer, time-lapse video, and focus shift, only settings in the current shooting menu bank are affected.

Option	Default	
ISO sensitivity settings		
ISO sensitivity	100	
Auto ISO sensitivity control	ON	
Maximum sensitivity	25600	
Maximum sensitivity with \$	Same as without flash	
Minimum shutter speed	Auto	
White balance	AUTO > Keep white (reduce warm colors)	
Fine-tune	A-B: 0, G-M: 0	

Option	Default
Set Picture Control	Auto
Active D-Lighting	Off
Photo flicker reduction	OFF
Metering	Matrix metering
Focus mode	Single AF
AF-area mode	Single-point AF
Auto bracketing	Off 1
Multiple exposure	Off ²
HDR overlay Off ³	

- 1 The number of shots is reset to zero. The bracketing increment for exposure, flash, and white balance bracketing is reset to 1. The amount for the second shot in two-shot ADL bracketing programs is reset to [Auto].
- 2 If a multiple exposure is currently in progress, shooting will end and a multiple exposure will be created from exposures recorded to that point. If [On (series)] or [On (single photo)] is selected, the multiple exposure mode will be reset to [Off]. [Number of shots], [Overlay mode], [Save individual pictures (RAW)] and [Overlay shooting] are not reset.
- 3 [On (series)] and [On (single photo)] are reset to [Off]. [HDR strength] and [Save individual pictures (RAW)] are not reset.

Video Recording Menu

Option	Default
ISO sensitivity settings	
Maximum sensitivity	25600
Auto ISO control (mode M)	ON
ISO sensitivity (mode M)	100
White balance	Same as photo settings
Set Picture Control	Same as photo settings
HLG quality	1
Quick sharp	0
Contrast	0
Saturation	0
Hue	0
Active D-Lighting	Off
Focus mode	Full-time AF
AF-area mode	Single-point AF
Electronic VR	OFF

Custom Settings Menu

Option	Default	
a9 [Focus mode restrictions]	No restrictions	
d8 [View mode (photo Lv)]	Show effects of settings	
d9 [Starlight view (photo Lv)]	OFF	
d10 [Warm display colors]	i] OFF	
e2 [Flash shutter speed]	1/60 s	
f4 [Control lock]	1	
[Shutter speed lock]	OFF	
[Aperture lock]	OFF	
[Focus-point lock] OFF		
g3 [Control lock]	1	
[Shutter speed lock]	OFF	
[Aperture lock] OFF		
[Focus-point lock] OFF		
g5 [Focus mode restrictions] No restrictions		

Other Settings

Option	Default
Focus point	Center
Preset focus point	Center
Shooting mode	Р
Flexible program	Off
Exposure compensation	Off (0.0)
AE lock (hold)	Off
Flash mode	Fill flash
Flash compensation	Off (0.0)
FV lock	Off

Video Recording

Video File Types

Use [**Video file type**] in the video recording menu to choose the video file type.

• You have a choice of MOV and MP4 formats.

Option	Description	YCbCr
[ProRes 422 HQ 10-bit (MOV)]	 Choose for footage destined for editing post-production. You have a choice of two tone modes: [SDR] and [N-Log]. Footage is recorded using All-I inter-frame compression. Audio is recorded in Linear PCM format. 	4:2:2
[H.265 10-bit (MOV)]	 This format assumes the footage will be processed on a powerful computer. You have a choice of three tone modes: [SDR], [HLG], and [N-Log]. Footage is recorded using long GOP interframe compression. Audio is recorded in Linear PCM format. 	
[H.265 8-bit This format offers superior compression [MOV)] • Footage is recorded using long GOP in frame compression. • Audio is recorded in Linear PCM formation		4:2:0
[H.264 8-bit (MP4)]	 A widely-supported file type. Footage is recorded using long GOP interframe compression. Audio is recorded in AAC format. 	

Tone Mode

To choose the tone mode, highlight [**ProRes 422 HQ 10-bit (MOV**)] or [**H.265 10-bit (MOV**)] and press **()**.

• Videos shot using [H.265 8-bit (MOV)] and [H.264 8-bit (MP4)] use [SDR]; tone-mode selection is not available.

Option	Description
[SDR]	This mode supports a normal range of brightnesses (dynamic range).
[HLG]	 This mode supports HDR (high dynamic range; 223). It has a wider dynamic range than SDR. It is available only when [H.265 10-bit (MOV)] is selected for [Video file type].
[N-Log]	This mode uses Nikon's unique log curve. Choose for pictures with a wide dynamic range. 3D LUTs for use with N-Log curves can be applied post-production for pictures that display beautifully on monitors that support Rec. 709 (\$\$\Prod_225\$).

Video Frame Size and Rate Options

Video frame size (in pixels) and frame rate can be selected using [Frame size/frame rate] in the video recording menu. The options available for frame size vary with the settings chosen for [Video file type] in the video recording menu.

	Video file type		
Option ¹	ProRes 422 HQ 10-bit	H.265 10-bit/ 8-bit	H.264 8-bit
[7680×4320; 30p] ^{2, 3}	—	~	_
[7680×4320; 25p] ^{2, 3}	_	~	_
[7680×4320; 24p] ^{2, 3}	—	~	_
[3840×2160; 120p] ^{2, 4}	—	~	_
[3840×2160; 100p] ^{2, 4}	—	~	_
[3840×2160; 60p] ⁴	~	~	_
[3840×2160; 50p] ⁴	~	~	_
[3840×2160; 30p] ⁴	~	~	_
[3840×2160; 25p] ⁴	~	~	_
[3840×2160; 24p] ⁴	~	~	_
[1920×1080; 120p] ²	~	~	_
[1920×1080; 100p] ²	~	~	_
[1920×1080; 60p]	~	~	~
[1920×1080; 50p]	~	~	~
[1920×1080; 30p]	—	~	~
[1920×1080; 25p]	—	~	~
[1920×1080; 24p]	-	~	~

- 1 The frame rates for 120p, 100p, 60p, 50p, 30p, 25p, and 24p are respectively 119.88 fps, 100 fps, 59.94 fps, 50 fps, 29.97 fps, 25 fps, and 23.976 fps.
- 2 Fixes [Electronic VR] in the video recording menu at [OFF].
- 3 Videos are recorded in 8K UHD. Not available with DX lenses.
- 4 Videos are recorded in 4K UHD.

Average Bit Rate


The average bit rate for each [Frame size/frame rate] option is shown below.

 ProRes 422 HQ data specifications are available from the Apple website.

Option	Video file type		
option	H.265 10-bit	H.265 8-bit	H.264 8-bit
[7680×4320; 30p]	-	A	_
[7680×4320; 25p]			
[7680×4320; 24p]	Approx. 400 Mbps	Approx. 370 Mbps	
[3840×2160; 120p]		570 11.555	
[3840×2160; 100p]			
[3840×2160; 60p]	Approx. 340 Mbps	Approx.	—
[3840×2160; 50p]		300 Mbps	
[3840×2160; 30p]		Approx. 150 Mbps	
[3840×2160; 25p]	Ammany		
[3840×2160; 24p]	Approx. 190 Mbps		
[1920×1080; 120p]			
[1920×1080; 100p]			
[1920×1080; 60p]	Approx. 100 Mbps	Approx.	Approx.
[1920×1080; 50p]		80 Mbps	50 Mbps
[1920×1080; 30p]	Amman		America
[1920×1080; 25p]	Approx. 50 Mbps		Approx. 30 Mbps
[1920×1080; 24p]	55.mpp		22.1005

Video Image Area Options

The image area for videos can be selected using [**Image area**] > [**Choose image area**] in the video recording menu. The crop used for filming video varies with the option selected. Regardless of the option selected, the aspect ratio is 16:9.

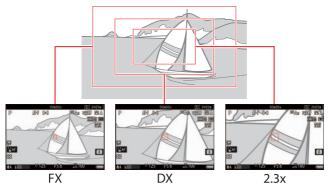

- Select [FX] to shoot videos in what is referred to as "FX-based video format", [DX] to shoot in "DX-based video format".
- Selecting [DX] for [Choose image area] or mounting a DX lens on the camera with [3840×2160; 120p], [3840×2160; 100p], [1920×1080; 120p], or [1920×1080; 100p] chosen for [Frame size/frame rate] increases the apparent focal length by approximately 2.3× when compared to FX format.

• The option currently selected is shown by an icon in the display. If [**ON**] is chosen for [**Image area**] > [**DX crop alert**] in the video recording menu, an image-area icon will flash in the shooting display when the DX or 2.3× crop is selected.



• The sizes of the different crops are shown below.

Format	Size
FX-based video format	Approx. 35.9 × 20.2 mm
DX-based video format	Approx. 23.5 × 13.2 mm
2.3×	Approx. 16.7 × 9.4 mm

- DX-based video format is selected automatically when a DX lens is attached.
- When 7680 \times 4320 is selected for frame size, image area is fixed at [**FX**]. The frame size changes to 3840 \times 2160 when a DX lens is attached.
- Selecting [**ON**] for [**Electronic VR**] in the video recording menu reduces the size of the crop.

Points to Note When Filming Videos

Note the following points when recording videos:

- Each video can be up to 125 minutes in length.
- Each video recorded to a card with a capacity of 32 GB or less will be saved across a maximum of 8 files. Each of these files will be a maximum of 4 GB in size. The number of files and the length of each file vary with the options selected for [**Frame size/frame rate**].
- If [**ProRes 422 HQ 10-bit (MOV**)] is selected for [**Video file type**] in the video recording menu and the memory card has a capacity of 32 GB or less, recording will automatically end when the file reaches 4 GB in size. Videos are not recorded across multiple files.
- Depending on memory card write speed, shooting may end before the maximum length is reached.
- A 🔯 icon (1294) indicates that videos cannot be recorded.
- [Spot metering] is not available during video recording.
- Flash lighting (¹¹423) cannot be used.

Video Recording: Shooting Mode

The exposure settings that can be adjusted during filming vary with the shooting mode:

Mode	Aperture	Shutter speed	ISO sensitivity ²
P , S ¹	-	—	3
Α	~	—	3
М	~	~	✓ 4

1 Exposure control in mode **S** is the same as in mode **P**.

- 2 The maximum ISO sensitivity for videos recorded with [**ON**] selected for [**Electronic VR**] in the video recording menu is ISO 25600.
- 3 The upper limit for ISO sensitivity can be selected using the [ISO sensitivity settings] > [Maximum sensitivity] item in the video recording menu.
- 4 If [ON] is selected for [ISO sensitivity settings] > [Auto ISO control (mode M)] in the video recording menu, the upper limit for ISO sensitivity can be selected using [Maximum sensitivity].

Adjusting White Balance During Video Recording

White balance can be adjusted during video recording by holding the **WB** button and rotating a command dial.

Using a Fixed Shutter Speed

In mode $\bm{M},$ shutter speed can be set to values between $^{1}/_{25}\,s$ and $^{1}/_{3200}\,s$ (the slowest available shutter speed varies with the frame rate).

Wireless Remote Controllers and Remote Cords

If [Record videos] is selected for Custom Setting g2 [Custom controls] > [Shutter-release button], the shutter-release buttons on optional wireless remote controllers and remote cords can be pressed halfway to focus or pressed all the way down to start and end video recording.

Using an External Microphone

Third-party microphones with 3.5 mm mini-jack plugs can be used to record audio for videos.

 Use [Mic jack plug-in power] in the video recording menu to choose whether the power for the external microphone is supplied by the camera (CD 590).

Recording HLG Video

Video recorded in Hybrid Log Gamma (HLG) format can be used for HDR broadcasting and the like. To record HLG video, select [**H.265 10-bit** (**MOV**)] for [**Video file type**] in the video recording menu and choose the [**HLG**] tone mode.

- HLG will appear in the shooting display.
- For optimal color reproduction when viewing HLG footage, use computers, operating systems, applications, monitors, and other equipment compatible with HDR.

🔽 Cautions: HLG Video

- The lowest value available for the [ISO sensitivity settings] > [Maximum sensitivity] item in the video recording menu is ISO 800.
- The lowest value available for the [ISO sensitivity settings] > [ISO sensitivity (mode M)] item in the video recording menu is ISO 400.
- ISO sensitivities of Hi 0.3 through Hi 2.0 are not available.
- Picture Control settings cannot be adjusted using the [Set Picture Control] item in the video recording menu. You can control the appearance of HLG videos using [HLG quality] in the video recording menu.
- The [Active D-Lighting] item in the video recording menu is set to [Off] and cannot be changed.
- The display in the monitor may flicker or appear grainy.
- The camera may have trouble focusing using autofocus but this does not indicate a malfunction.

MDR (HLG) Output

Optimal color reproduction in HDR (HLG) footage output via HDMI can only be achieved if your storage device, monitor, and other equipment support HDR (HLG). If a signal is received from the connected device indicating that it supports HDR (HLG), the camera will respond with a "gamma: HLG" identifier.

View Assist

You may find that the preview in the shooting display during HLG recording lacks contrast. Selecting [**ON**] for Custom Setting g8 [**View assist**] simplifies colors for enhanced contrast.

- ASSIST will appear in the shooting display.
- Colors in the actual recorded footage are unaffected.
- Contrast is also enhanced when HLG footage is viewed on the camera.

Recording N-Log Video

Log recording uses light levels digitized via a log function. To enable log recording using Nikon's unique "N-Log" log function, select [**ProRes 422 HQ 10-bit (MOV**]] or [**H.265 10-bit (MOV**]] for [**Video file type**] in the video recording menu and choose [**N-Log**] as the tone mode. Choose N-Log to preserve details in highlights and shadows and avoid over-saturated colors when recording videos.

- NLOG will appear in the shooting display.
- N-Log recording is intended for footage that will be processed using color grading post-production. Color grading can be used to achieve multiple effects from a single sequence by processing it in different ways.
- Compatible third-party software is required for color grading.
- Applying N-Log 3D LUTs during color grading produces video that displays beautifully on monitors compatible with Rec. 709.
 - N-Log 3D LUTs are available from the Nikon Download Center. https://downloadcenter.nikonimglib.com/

🔽 Cautions: N-Log Video

- The lowest value available for the [ISO sensitivity settings] > [Maximum sensitivity] item in the video recording menu is ISO 1600.
- The lowest value available for the [ISO sensitivity settings] > [ISO sensitivity (mode M)] item in the video recording menu is ISO 800.
- ISO sensitivities of Hi 0.3 through Hi 2.0 are not available.
- [Set Picture Control] and [High ISO NR] are not available in the video recording menu.
- The [Active D-Lighting] item in the video recording menu is set to [Off] and cannot be changed.
- The display in the monitor may flicker or appear grainy.
- The camera may have trouble focusing using autofocus but this does not indicate a malfunction.

View Assist

You may find that the preview in the shooting display during N-Log recording lacks contrast. Selecting [**ON**] for Custom Setting g8 [**View assist**] simplifies colors for enhanced contrast.


- ASSET will appear in the shooting display.
- Colors in the actual recorded footage are unaffected.
- Contrast is also enhanced when N-Log footage is viewed on the camera.

Viewing and Retouching Pictures

Viewing Pictures

Full-Frame Playback


Press the **D** button to view the most recent picture full frame in the display.

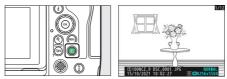


- Press ④ to return to the previous frame, ④ to skip to the next frame.
- Press ⊕, ⊕, or the **DISP** button to view more information on the current picture (□230).

Thumbnail Playback

To view multiple pictures, press the \mathbb{R} (?) button when a picture is displayed full frame.

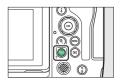

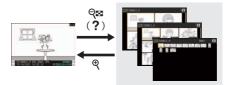

- The number of pictures displayed increases from 4 to 9 to 72 each time the ♀ (?) button is pressed, and decreases with each press of the ♥ button.
- Highlight pictures using ⊕, ⊕, ⊕, or ⊕.

Touch Controls

Touch controls can be used when pictures are displayed in the monitor (D 54).

🔽 Rotate Tall

To display "tall" (portrait-orientation) photographs in tall orientation, select [**ON**] for [**Rotate tall**] in the playback menu.




V Picture Review

When [**On**] is selected for [**Picture review**] in the playback menu, photographs are automatically displayed after shooting; there is no need for you to press the **>** button.

- If [On (monitor only)] is selected, photos will not be displayed in the viewfinder.
- In continuous release modes, display begins when shooting ends, with the first photograph in the current series displayed.
- Pictures are not rotated automatically during picture review even when [**ON**] is selected for [**Rotate tall**] in the playback menu.


Photo Information

Photo information is superimposed on pictures displayed in full-frame playback. Press , , , or the **DISP** button to cycle through photo information as shown below.

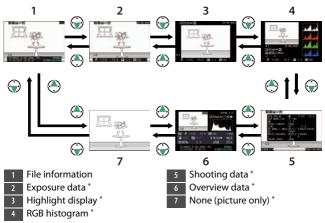


* Displayed only if the corresponding option is selected for [**Playback display options**] in the playback menu.

File Information

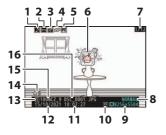

- 1 Voice memo indicator (295)
- 2 Protect status (¹¹249)
- 3 Retouch indicator (C264)
- 4 Upload marking (C253)
- 5 IPTC preset indicator (CD 726)
- 6 Focus point * (🕮 123)
- 7 Frame number/total number of frames
- 8 Image quality (🕮 105)
- 9 Image size (🕮 108)
- 10 Image area (1102)
- 11 Time of recording (^[1]709)
- 12 Date of recording (CD 709)
- 13 Current card slot
- 14 Rating (251)
- 15 Folder name (11497)
- 16 File name (11502)
- * Displayed only if [Focus point] is selected for [Playback display options] in the playback menu.

Exposure Data

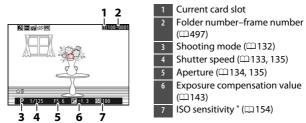


* Displayed in red if the picture was taken with auto ISO sensitivity control enabled.

Highlight Display



1 Highlights (areas that may be overexposed) flash in the display.


RGB Histogram

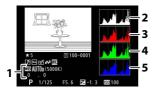

- 1 White balance (🕮 158) Color temperature (🕮 167) Preset manual (🕮 170) White balance fine-tuning (🕮 163)
- 2 Histogram (RGB channel)
- 3 Histogram (red channel)
- 4 Histogram (green channel)
 - Histogram (blue channel)

🔽 Playback Zoom


To zoom in on the picture in the histogram display, press \mathfrak{P} . The histogram will be updated to show only the data for the portion of the picture visible in the display. Use the multi selector to scroll to areas of the frame not visible in the monitor. Press \mathfrak{P} (?) to zoom out.

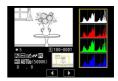

Mistograms

Histograms show tone distribution. Pixel brightness (tone) is plotted on the horizontal axis and the number of pixels on the vertical axis.

- If the picture contains objects with a wide range of brightnesses, the distribution of tones will be relatively even.
- If the picture is dark, the distribution will be shifted to the left.
- If the picture is bright, the distribution will be shifted to the right.

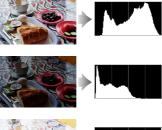



Increasing exposure compensation shifts the distribution of tones to the right, while decreasing exposure compensation shifts the distribution to the left. Histograms can provide a rough idea of overall exposure when bright ambient lighting makes it difficult to see pictures in the monitor.


🔽 The Histogram Display

- RGB histograms show tone distribution.
- Camera histograms may differ from those displayed in imaging applications. Use them as a guide to actual tone distribution.

Shooting Data

View the settings in effect at the time the picture was taken. The shooting data list has multiple pages, which can be viewed by pressing \textcircled or \textcircled . The information displayed can be selected using [**Playback display options**] > [**Detailed shooting data**] in the playback menu.

Basic Shooting Data

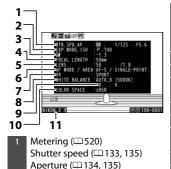

2 Shooting mode (CII 132) ISO sensitivity ¹ (CII 154) 3 Exposure compensation value (1143)

Optimal exposure tuning ²

- (🎞 615)
- 4 Focal length
- 5 Lens data
- Focus mode (□110)
 AF-area mode (□113)
- 7 Vibration reduction (CD 526)
- 8 White balance ³ (CD 158)
- 9 White balance fine-tuning (© 163)
- 10 Color space (22511)
- 11 Camera name
- 1 Displayed in red if the picture was taken with auto ISO sensitivity control enabled.
- 2 Displayed if Custom Setting b6 [**Fine-tune optimal exposure**] has been set to a value other than zero.
- 3 Also includes the color temperature for pictures taken using ^{IIII}A [Auto] or **₩A** [Natural light auto].

💵 Flash Data

Flash data are displayed only for pictures taken with optional flash units (□422, 437).



- Flash type
- Remote flash control
- 3 Flash mode (01429)
- 4 Flash control mode (^[1]426)
 - Flash compensation (¹¹432)


II Picture Control/HLG Data

The items displayed vary with the Picture Control in effect when the picture was taken. The display for HLG videos shows the options selected for [**HLG quality**] in the video recording menu.



Picture Control (🕮 192) HLG quality (🕮 582)

Other Shooting Data

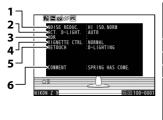

- High ISO NR (\$\overline\$515)
 Long-exposure noise reduction
 (\$\overline\$514)
- 2 Active D-Lighting (CD 512)
- 3 HDR strength (🕮 537)
- 4 Vignette control (🕮 516)
- 5 History of retouches made using [**Retouch**] option in playback *i* menu (¹²264). Changes are listed in the order applied.
- 6 Image comment (CP724)

II Copyright Information


Copyright information is only displayed if recorded using the [**Copyright information**] item in the setup menu at the time the picture was taken.




- Photographer (C 725)
- Copyright holder (C2725)

Location Data


Location data are displayed only if embedded in the picture at the time it was taken.

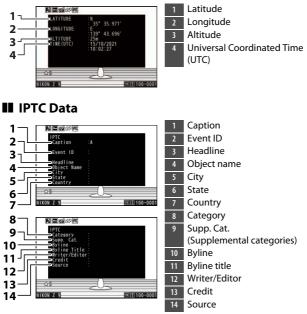

Overview

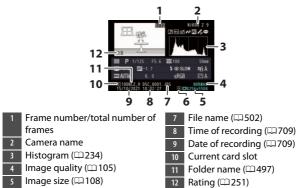

6 Image area (🕮 102)

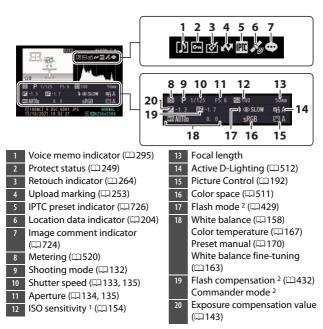

- 1 Displayed in red if the picture was taken with auto ISO sensitivity control enabled.
- 2 Displayed only if photo was taken with optional flash unit (2422, 437).

The *i* Button (Playback Mode)

Pressing the i button during playback zoom or full-frame or thumbnail playback displays the i menu for playback mode. Highlight items and press \circledast or \oplus to select.



Press the *i* button again to return to playback.

Photos

Option	Description	
[Quick crop] ¹	Save a copy of the current picture cropped to the area visible in the display. This option is not available when RGB histograms are displayed ($\square 233$).	
[Rating]	Rate the current picture (印251).	
[Select for upload to smart device]	Select the current picture for upload (\$253). The option displayed varies with the destination currently selected for upload.	
[Select for upload to computer]		
[Select for upload (FTP)]		

Option	Description	
[Select all for computer upload]	Mark for upload all pictures meeting the current filter criteria (D255). • These options are displayed only if the camera is	
[Select all for upload (FTP)]	connected to a computer or FTP server.Videos over 4 GB in size cannot be selected for upload.	
[Filtered playback]	View only pictures that match selected criteria (CII 255).	
[Filtered playback criteria]	Choose filter criteria.	
[Record voice memo]	Add a voice memo to the current picture (^[] 295).	
[Play voice memo]	Play the voice memo for the current picture (\Box 298).	
[Retouch]	Create a retouched copy of the current picture (C264).	
[Jump to copy on other card]	If the current picture is one of a pair created with [Backup], [RAW Slot 1 - JPEG Slot 2], or [JPEG Slot 1 - JPEG Slot 2] selected for [Role played by card in Slot 2], choosing this option displays the copy on the card in the other slot.	
[Choose slot and folder]	Choose a slot and folder for playback. Highlight a slot and press $$ to display a list of the folders on the memory card in the selected slot. You can then highlight a folder and press $$ to view the pictures it contains.	

Option	Description	
[Protect]	Add protection to or remove protection from the current picture (\Box 249).	
[Unprotect all] ²	Remove protection from all pictures in the folder currently selected for [Playback folder] in the playback menu.	
[IPTC]	Embed a selected IPTC preset in the current photo (C1726).	
[Side-by-side comparison] ³	Compare retouched copies to the originals.	
[Slide show]	View a slide show; the current picture and all following pictures are displayed one at a time in the order recorded (D257).	

1 Available only during playback zoom.


2 Not available during playback zoom.

3 Available only when a retouched copy (indicated by a ĭ icon) or the source picture for a retouched copy is selected.

[Side-by-Side Comparison]

Choose [**Side-by-side comparison**] to compare retouched copies with the unretouched originals.



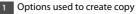

- 2 Source picture
- 3 Retouched copy
- The source picture is displayed on the left, the retouched copy on the right.
- The options used to create the copy listed at the top of the display.
- \bullet Press O or O to switch between the source picture and the retouched copy.
- If the copy is an overlay created from multiple source pictures, press B or O to view the other pictures.
- If the source has been copied multiple times, press (*) or (*) to view the other copies.
- To view the highlighted picture full screen, press and hold the ♥ button.
- \bullet Press \circledast to return to playback with the highlighted picture displayed full-frame.
- To exit to playback, press the 🕨 button.
- The source picture will not be displayed if the copy was created from a photograph that is now protected.
- The source picture will not be displayed if the copy was created from a photograph that has since been deleted.

<u>Videos</u>

Option	Description	
[Rating]	Rate the current picture (🕮 251).	
[Select for upload to computer] [Select for upload	Select the current picture for upload (^{CD} 253). These options are displayed only if the camera is connected to a computer or FTP server.	
(FTP)] [Select all for computer upload]	Mark for upload all pictures meeting the current filter criteria (\$\pm255)\$. • These options are displayed only if the camera is	
[Select all for upload (FTP)]	 connected to a computer or FTP server. Videos over 4 GB in size cannot be selected for upload. 	
[Filtered playback]	View only pictures that match selected criteria (C255).	
[Filtered playback criteria]	Choose filter criteria.	
[Volume control]	Adjust playback volume.	
[Trim video]	Trim footage from the current video and save the edited copy in a new file (\Box 290).	
[Choose slot and folder]	Choose a slot and folder for playback. Highlight a slot and press \mathfrak{B} to display a list of the folders on the memory card in the selected slot. You can then highlight a folder and press \mathfrak{B} to view the pictures it contains.	


Option	Description
[Protect]	Add protection to or remove protection from the current picture (\square 249).
[Unprotect all]	Remove protection from all pictures in the folder currently selected for [Playback folder] in the playback menu.
[Slide show]	View a slide show; the current picture and all following pictures are displayed one at a time in the order recorded (C257).

Videos (Playback Paused)

	Option	Description	
Ľ.	[Trim video]	Trim unwanted footage (🕮 290).	
	[Save current frame]	Save a selected frame as a JPEG still (^[] 294).	
[Vo	ume control]	Adjust playback volume.	

Playback Zoom

To zoom in on a photo displayed in full-frame playback, press ♥ or ֎ or give the display two quick taps. [FX (36×24)]-format photos can be zoomed in to a maximum of approximately 32× (Large pictures), 24× (Medium), or 16× (Small). Faces detected during zoom are indicated by white borders; rotate the subcommand dial to view other faces.

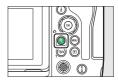

Using Playback Zoom

То	Description	
Zoom in/ zoom out	 Press the ^Q button or use stretch gestures to zoom in. To zoom out, press Q≅ (?) or use pinch gestures. 	A navigation window is displayed during the zoom ratio is altered, with the area currently visible indicated by a yellow border. A bar below the navigation window shows the zoom ratio, turning green at 1 : 1 (100%). The navigation window clears from the display after a few seconds.

То	Description		
View other areas of picture	Use the multi selector or glide gestures to view areas of the picture not visible in the monitor. Keep the multi selector pressed to scroll rapidly to other areas of frame.		
Crop picture	To crop the picture to the area currently visible in the monitor, press <i>i</i> and select [Quick crop].		
Select faces	Faces detected during zoom are indicated by white borders in the navigation window. Rotate the sub- command dial or tap the on- screen guide to view other faces.		
View other pictures	Rotate the main command dial to view the same location in other photos without changing the zoom ratio (selecting a video cancels zoom). You can also view other photos by tapping the ◀ or ▶ icon at the bottom of the display.		
Protect pictures	Press the O-n (Fn4) button to toggle protection for the current picture on or off (D249).		
Exit to shooting mode	Press the shutter-release button halfway or press the > button to exit.		
View menus	Press the MENU button to view the menus.		

Protecting Pictures from Deletion

Pictures can be protected to prevent their being deleted accidentally. Protected pictures will however be deleted when the memory card is formatted (\Box 708).

1 Select a picture.

- Display the picture in full-frame playback or playback zoom.
- Alternatively, you can highlight the picture in the thumbnail list using the multi selector.

2 Press the O-n (Fn4) button.

- Protected pictures are marked with a Emicon.
- To remove protection, display the picture or highlight it in the thumbnail list and press On (Fn4) again.



Voice Memos

Protecting photos also protects any voice memos recorded with the pictures. Voice memos cannot be protected separately.

Caution: Uploading Protected Pictures via FTP

The copies on the FTP server will not be protected even if the originals are. Markings can be added using ratings.

Removing Protection from All Pictures

To remove protection from all pictures in the folder or folders currently selected for [**Playback folder**] in the playback menu, press the **O**-n (**Fn4**) and **(m)** buttons for about two seconds during playback.

Rating Pictures

Rate pictures.

1 Select the desired picture with the multi selector and press the *i* button.



2 Highlight [Rating] and press ().



3 Choose a rating.

Rotate the main command dial to highlight the desired rating and press ® to select. Choose from ratings of from zero to five stars, or select **5** to mark the picture as a candidate for later deletion.



🖉 Ratings

Ratings can also be viewed in NX Studio.

Rating Pictures Using Camera Controls

If [Rating] has been assigned to a control using Custom Setting f3 [Custom controls (playback)], pictures can be rated by holding the control and rotating the main command dial.

Selecting Pictures for Upload

Follow the steps below to select the current picture for upload to a smart device, computer, or ftp server.

- The *i* menu items used to select pictures for upload vary with the type of device connected:
 - [Select for upload to smart device]: Displayed when the camera is connected to a smart device using [Connect to smart device] in the network menu (2757).
 - [Select for upload to computer]: Displayed when the camera is connected to a computer using [Connect to computer] in the network menu (\square 760).
 - [Select for upload (FTP)]: Displayed when the camera is connected to an FTP server using [Connect to FTP server] in the network menu (2765).
- Videos cannot be selected for upload when the camera is connected to a smart device via the SnapBridge app.
- The maximum file size for videos uploaded by other means is 4 GB.

1 Select the desired picture and press the i button.

2 Highlight [Select for upload to smart device], [Select for upload to computer], or [Select for upload (FTP)] and press ®.



Pictures destined for a smart device are marked with a row icon, while those destined for a computer or ftp server are marked with **C**.



🔽 Removing Upload Marking

To remove upload marking, repeat Steps 1 and 2.

Filtered Playback

Select [**Filtered playback**] in the *i* menu to view only pictures that meet the criteria chosen for [**Filtered playback criteria**] in the playback menu or playback *i* menu.

[Filtered Playback Criteria]

Highlight options and press B to select (\boxdot) or deselect (\boxdot) . During filtered playback, only pictures that meet all criteria marked with a check (\boxdot) will be displayed.



Option	Description		
[Protect]	☑: Include protected pictures.		
[Picture type]	☑: Include pictures of the selected types.		
[Rating]	$\mathbf{\Sigma}$: Include pictures with selected ratings.		
[Select for upload to computer]	 Select (☑) [Uploaded pictures] to include pictures previously uploaded to a computer or ftp server. Select (☑) [Pictures not uploaded] to include pictures 		
[Select for upload (FTP)]	 that have yet to be uploaded. Select (☑) both options to include both pictures that have and pictures that have yet to be uploaded. 		
[Voice memo]	☑: Include pictures with voice memos.		
[Retouched pictures]	☑: Include retouched pictures.		


- During filtered playback, a white border appears around the display.
- To end filtered playback, select [Filtered playback] again.



Viewing Slide Shows

To view a slide show in which pictures are played back one at a time in the order recorded, select [**Slide show**] in the i menu. You can also choose how long any photos in the show are displayed.

1 Select the starting picture using the multi selector and press the *i* button. The slide show starts with the selected picture and continues through all the pictures recorded after it.

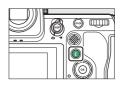

2 Highlight [Slide show] and press (). To choose how long photos are displayed, highlight [Frame interval] and press ().



3 Highlight [Start] and press **.**

- The slide show will start.
- In the case of videos, the option selected for [**Frame interval**] is ignored; instead, the starting frame will be displayed for short time before video playback begins.
- When the show ends, a message will be displayed before normal playback resumes.

During the Show

The following operations can be performed while the show is in progress:

То	Description
Skip back/skip ahead	Press \textcircled{O} to return to the previous frame, \textcircled{O} to skip to the next frame.
View additional photo info	Press (a), (c), or DISP to choose the photo info displayed. To hide photo info, select [None (picture only]].
Adjust volume	Press ♥ to increase volume, ♥⊠ (?) to decrease.
Exit to playback mode	Press 🗈 to end the slide show and return to the playback display.

Deleting Pictures

Follow the steps below to delete pictures from memory cards. Note that pictures cannot be recovered once deleted. Pictures that are protected, however, cannot be deleted.

Using the Delete Button

Press the $\widehat{\textbf{\textbf{m}}}$ (****) button to delete the current picture.

1 Select the desired picture with the multi selector and press the **(mess)** button.

- A confirmation dialog will be displayed.
- To exit without deleting the picture, press ►.

2 Press the 🗑 () button again.

The picture will be deleted.

Deleting Copies

If the picture selected in the playback display when the *i*(*m*) button is pressed was recorded with two memory cards inserted and an option other than [**Overflow**] selected for [**Role played by card in Slot 2**], you will be prompted to choose whether to delete both copies or only the copy on the card in the current slot (\Box 503).







Deleting Multiple Pictures

Use [**Delete**] in the playback menu to delete multiple pictures at once. Note that depending on the number of pictures, some time may be required for deletion.

Option		Description	
	[Selected pictures]	Delete selected pictures.	
õ	iCandidates for Delete pictures rated ឪ (candidate for deletion).		
DATE	[Pictures shot on selected dates]	Delete all pictures taken on selected dates (C2 262).	
ALL	[All pictures]	 Delete all pictures in the folder currently selected for [Playback folder] in the playback menu. If two memory cards are inserted, you can select the card from which pictures will be deleted. 	

Deleting Selected Pictures

1 Select pictures.

Highlight pictures and press the Q≅ (?) button to select; selected pictures are marked with a check (◇). To remove the check (◇) and deselect the current picture, press the Q≊ (?) button again.



- Repeat until all the desired pictures are selected.
- \bullet To view the highlighted picture full screen, press and hold the \P button.

2 Delete the pictures.

- Press [®]; a confirmation dialog will be displayed.
- Highlight [**Yes**] and press ® to delete the selected pictures.



Candidates for Deletion

1 Select pictures.

- The camera will list all pictures rated for (candidate for deletion).
 Pictures you do not currently wish to delete can be deselected by highlighting them using the multi selector and pressing q∞ (?).
- To view the highlighted picture full screen, press and hold the ${}^{\textcircled{}}$ button.

2 Delete the pictures.

- Press [™]; a confirmation dialog will be displayed.
- Highlight [Yes] and press ® to delete the selected pictures.

Pictures Shot on Selected Dates

1 Select dates.

- Highlight dates using the multi selector and press
 ⊕ to select; selected dates are marked with
 ☐ icons. Selected dates can be deselected by pressing
 ⊕ again.
- Repeat until you have selected all the desired dates.

2 Delete the pictures.

- Press
 [®]; a confirmation dialog will be displayed.
- Highlight [Yes] and press [®] to delete all the pictures taken on the selected dates.





Deleting All Pictures

1 Choose a memory card.

Press (*) or (*) to highlight the slot containing the memory card from which the pictures will be deleted and press (*).

2 Delete the pictures.

 A confirmation dialog will be displayed showing the name of the folder containing the photos to be deleted.
 Highlight [Yes] and press [®] to delete all pictures from the folder. The folder is that previously selected via [Playback folder] in the playback menu.





• Note that depending on the number of pictures, some time may be required for deletion.

Creating Retouched Copies

Retouched copies can be created from existing pictures. Retouched copies are saved to new files, separate from the original pictures.




Option	Description
[RAW processing (current picture)]	Save a copy of the current NEF (RAW) picture in another format such as JPEG (\square 267).
[RAW processing (multiple pictures)]	Select multiple existing NEF (RAW) pictures for conversion to JPEG or other formats (© 269).
[Trim]	Create a cropped copy of the current photograph (^[III] 273).
[Resize (current picture)]	Create a small copy of the current photograph (^[] 274).
[Resize (multiple pictures)]	Create small copies from one or more existing photos (C276).
[D-Lighting]	Brighten shadows (🕮 280).
[Straighten]	Straighten pictures (🕮 281).
[Distortion control]	Reduce barrel distortion in pictures taken with wide-angle lenses or pin-cushion distortion in pictures taken with telephoto lenses (\$\box\$282).
[Perspective control]	Reduce the effects of perspective (\Box 283).
[Monochrome]	Create a monochrome copy of the current photograph (🗆 284).

Option	Description
[Overlay (add)]	Overlay two pictures to create a new picture in JPEG format ($\square 285$).
[Lighten]	Compare the pixels at each point in multiple pictures and select the brightest to create a new picture in JPEG format (CD 287).
[Darken]	Compare the pixels at each point in multiple pictures and select the darkest to create a new picture in JPEG format (CD 287).

1 Select the desired picture with the multi selector and press the *i* button.

You will not need to select a picture if you are using [**RAW processing (multiple pictures**)] or [**Resize (multiple pictures**)], as you will be prompted to choose the pictures later.

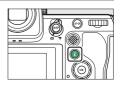

2 Highlight [Retouch] and press ().

3 Highlight the desired option and press \mathfrak{B} .

4 Select retouch options.

- For more information, see the section for the selected item.
- To exit without creating a retouched copy, press 🗈. This will return you to the playback display.

5 Create a retouched copy.

- For more information, see the section for the selected item.
- Retouched copies are indicated by a 🖬 icon.

Cautions: Retouch

- The camera may not be able to display or retouch images that were taken or retouched using other cameras or that have been retouched on a computer.
- If no actions are performed for a brief period, the display will turn off and any unsaved changes will be lost. To increase the time the display remains on, choose a longer menu display time using Custom Setting c3 [Power off delay] > [Menus].

Cautions: Retouching Copies

- Most items can be applied to copies created using other retouch options, although multiple edits may result in reduced image quality or unnatural colors.
- The effect produced may vary with the order in which edits are performed.
- Some items may be unavailable depending on the items used to create the copy.
- [**Retouch**] items in the *i* menu that cannot be applied to the current picture are grayed out and unavailable.

🔽 Image Quality

- Copies created from NEF (RAW) pictures are saved at an [Image quality] of [JPEG fine ★].
- Copies created from JPEG pictures are the same quality as the original.
- In the case of dual-format pictures recorded to the same memory card at image-quality settings of RAW + JPEG, only the NEF (RAW) copy will be retouched.

🔽 Image Size

Except in the case of copies created with [RAW processing (current picture)], [RAW processing (multiple pictures)], [Trim], [Resize (current picture)], and [Resize (multiple pictures)], copies are the same size as the original.

RAW Processing

RAW processing is used to save NEF (RAW) pictures in other formats, such as JPEG. Use [**RAW processing (current picture**)] to process the current picture, or [**RAW processing (multiple pictures**)] to process multiple pictures.

Caution: RAW Processing

RAW processing is available only with NEF (RAW) images created with this camera. Pictures in other formats and NEF (RAW) photos taken with other cameras or Camera Control Pro 2 cannot be selected.

II Processing the Current Picture

1 Select [Retouch] in the *i* menu, then highlight [RAW processing (current picture)] and press ().




2 Choose a destination.

- Press
 In the highlight a card slot and press I and p
- You will not be prompted to select the slot if only one memory card is inserted.



3 Choose settings for the JPEG copy.


- The settings in effect when the photograph was taken appear below a preview.
- To use the setting in effect when the photograph was taken, if applicable, select [**Original**].

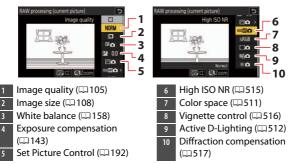

- The effects can be previewed in the edit display. To view the unedited picture, press and hold the **DISP** button.
- [Exposure compensation] can only be set to values between -2 and +2 EV.

4 Copy the photograph.

Highlight [**EXE**] and press ⁽¹⁾ to create a JPEG copy of the selected photographs.

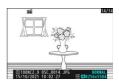

Processing Multiple Pictures

1 Select [Retouch] in the *i* menu, then highlight [RAW processing (multiple pictures)] and press **(b)**.



2 Choose how pictures are selected.

Option	Description
[Select picture(s)]	Create JPEG copies of selected NEF (RAW) pictures. Multiple NEF (RAW) pictures can be selected.
[Select date]	Create JPEG copies of all NEF (RAW) pictures taken on selected dates.
[Select folder]	Create JPEG copies of all NEF (RAW) pictures in a selected folder.



If you chose [Select picture(s)], proceed to Step 4.

3 Select the source slot.

- Highlight the slot with the card containing the NEF (RAW) images and press ③.
- You will not be prompted to select the slot if only one memory card is inserted.



4 Select photographs. If you chose [Select picture(s)]:

- Highlight pictures using the multi selector.
- To view the highlighted picture full screen, press and hold the ♥ button.
- To select the highlighted picture, press the २∞ (?) button. Selected pictures are marked with a check (...). To remove the check (...) and deselect the current picture, press the २∞ (?) button again. All pictures will be processed using the same settings.

If you chose [Select date]:

- All images taken on dates marked with a check (☑) will be processed using the same settings.
- Press ⊛ to proceed once selection is complete.

If you chose [Select folder]:


Highlight a folder and press B to select; all images in the selected folder will be processed using the same settings.





5 Choose settings for the JPEG copies.

• To use the settings in effect when the photographs were taken, if applicable, select [**Original**].

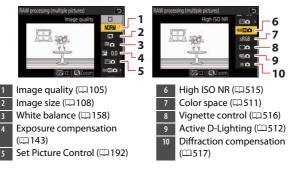

- The effects can be previewed in the edit display. To view the unedited picture, press and hold the **DISP** button.
- [Exposure compensation] can only be set to values between -2 and +2 EV.

6 Copy the photographs.

Highlight [EXE] and press
 ® to display a confirmation dialog and then highlight
 [Yes] and press
 ® to create JPEG copies
 of the selected photos.



• To cancel the operation before all copies have been created, press the MENU button; when a confirmation dialog is displayed, highlight [**Yes**] and press **(**).

<u>Trim</u>

Create a cropped copy of the current photograph. The photograph is displayed with the selected crop shown in yellow; create a cropped copy as described below.

То	Description
Size the crop	Press 🏽 or 🖓 a (?) to choose the crop size.
Change the crop aspect ratio	Rotate the main command dial to choose the crop aspect ratio.
Position the crop	Use the multi selector to position the crop.
Save the crop	Press ® to save the current crop as a separate file.

Cautions: Cropped Pictures

- Depending on the size of the cropped copy, playback zoom may not be available when cropped copies are displayed.
- The crop size appears at upper left in the crop display. The size of the copy varies with crop size and aspect ratio.



<u>Resize</u>

Create small copies of selected photographs. Use [**Resize (current picture**)] to resize the current picture, or [**Resize (multiple pictures**)] to resize multiple pictures.

🔽 Caution: Resize

Depending on the copy size, playback zoom may not be available when resized copies are displayed.

Resizing Cropped Pictures

Pictures cropped to aspect ratios of 4:3 or 3:4 cannot be resized.

Resizing the Current Picture

Select [Retouch] in the *i* menu, then highlight [Resize (current picture)] and press **()**.



2 Choose a destination.

- You will not be prompted to select the slot if only one memory card is inserted.



3 Highlight the desired size and press \circledast .

A copy will be saved at the selected size.



Resizing Multiple Pictures

1 Select [Retouch] in the *i* menu, then highlight [Resize (multiple pictures)] and press ⊕.



2 Choose a size.

- Highlight [**Choose size**] and press ().
- Highlight the desired size (length in pixels) using ⊕ and ⊕ and press ⊛.





3 Choose how pictures are selected.

Choose now pictures are selected.			ize (multiple pictures) 📀
Option	Description		ect picture(s) ect date	>
[Select picture(s)]	Resize selected pictures. Multiple pictures can be selected.	Cho	ect folder bose destination bose size	> > ©:D @Cancel
[Select date]	Resize all pictures taken on selected dates.			
[Select folder]	Resize all pictures in a selected folder.	_		

If you chose [Select picture(s)], proceed to Step 5.

4 Select the source slot.

- Highlight the slot with the card containing the desired pictures and press \mathfrak{P} .
- You will not be prompted to select the slot if only one memory card is inserted.



5 Choose pictures. If you chose [Select picture(s)]:

- Highlight pictures using the multi selector.
- To view the highlighted picture full screen, press and hold the € button.
- To select the highlighted picture, press the \mathfrak{P} (?) button. Selected pictures are marked with a check (\checkmark). To remove the check (\bigcirc) and deselect the current picture, press the \Im (?) button again. The selected pictures will all be copied at the size selected in Step 2.
- Press ® to proceed once selection is complete.

If you chose [Select date]:

- Highlight dates using the multi selector and press () to select () or deselect $(\Box).$
- All pictures taken on dates marked with a check () will be copied at the size selected in Step 2.
- Press ® to proceed once selection is complete.

If you chose [Select folder]:

Highlight a folder and press ® to select; all pictures in the selected folder will be copied at the size selected in Step 2.



ect picture(s)



6 Save the resized copies.

- A confirmation dialog will be displayed; highlight [**Yes**] and press (1) to save the resized copies.
- To cancel the operation before all copies have been created, press the **MENU**

Select picture(s) (1) particular is Creater resized copy? 3 pictures Yes No 2005stet: Ct Zoom, CCO

button; when a confirmation dialog is displayed, highlight [Yes] and press B.

D-Lighting

D-Lighting brightens shadows. It is ideal for dark or backlit photographs.







The effect is shown in the display. To view the unedited picture, press and hold the $\ensuremath{\text{DISP}}$ button.

- Press
 to save the retouched copy.



<u>Straighten</u>

Rotate pictures by up to $\pm 5^{\circ}$ in increments of approximately 0.25°.

- The effect can be previewed in the edit display. To view the unedited picture, press and hold the **DISP** button.
- The greater the rotation, the more will be trimmed from the edges.



- Press O or O to choose the amount of straightening performed.
- Press
 to save the retouched copy.

Distortion Control

Create copies with reduced peripheral distortion, reducing barrel distortion in pictures taken with wide-angle lenses or pincushion distortion in pictures taken with telephoto lenses.

 If the camera detects distortion, it will offer a choice of [Auto] and [Manual]. Select



- [Auto] to let the camera correct distortion automatically.
- If the camera is unable to detect distortion, the only option available will be [Manual]. Select [Manual] to reduce distortion manually.
- Note that [Manual] must be used with copies created using the [Auto] option and with photos taken using the [Auto distortion control] option in the photo shooting menu.
- When [Manual] is selected, the effect can be previewed in the display. To view the unedited picture, press and hold the **DISP** button.
- Press (*) to reduce pin-cushion distortion, (*) to reduce barrel distortion. Press ® to save changes and return to the previous display.
- Press
 to save the retouched copy.

Caution: Distortion Control

Note that greater amounts of distortion control result in more of the edges being cropped out.

Perspective Control

Create copies that reduce the horizontal and vertical effects of perspective in photos taken looking up from the base of a tall object.

- The effect can be previewed in the edit display. To view the unedited picture, press and hold the **DISP** button.
- Note that greater amounts of perspective control result in more of the edges being cropped out.
- For vertical correction, highlight El and press ③. Press ④ to stretch the top edge, ⊕ to stretch the bottom. Press ⊗ to save changes and return to the previous display.
- Press
 to save the retouched copy.



Before



After



Monochrome

Copy photographs in a selected monochrome tint.

Option	Description	
[Black-and-white]	Copy photographs in black-and-white.	
[Sepia]	Copy photographs in sepia.	
[Cyanotype]	Copy photographs in blue-and-white monochrome.	

- The effect can be previewed in the edit display. To view the unedited picture, press and hold the **DISP** button.
- Highlighting [Sepia] or [Cyanotype] and pressing ③ displays saturation options for the selected monochrome tint; choose from [High], [Normal], and [Low]. Press ⑧ to save changes and return to the tint menu.



• Press
to save the retouched copy.

Overlay (Add)

Combine two existing photographs to create a single picture that is saved separately from the originals.




1 Select [Retouch] in the *i* menu, then highlight [Overlay (add)] and press ⊕.



ect picture(s)

2 Select the pictures.

- Highlight pictures using the multi selector.
- To view the highlighted picture full screen, press and hold the @ button.

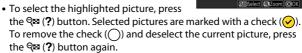

- Pictures with different image areas cannot be selected.
- Press
 [®] to proceed once the second picture is selected.

3 Adjust balance.

The overlay can be previewed in the display. Press (*) or (*) to adjust the balance between the two pictures. Press (*) to make the first picture more visible and the second less, (*) for the opposite effect.

4 Save the overlay.

Press [™] to save the overlay.





🔽 Cautions: [Overlay (Add)]

- Colors and brightness in the preview may differ from the final picture.
- Only pictures created with this camera can be selected. Pictures created with other models cannot be selected.
- The overlay will be the same size as the smallest of the two component pictures.
- The overlay has the same photo info (including date of recording, metering, shutter speed, aperture, shooting mode, exposure compensation, focal length, and picture orientation) and values for white balance and Picture Control as the first of the two pictures selected. Copyright information, however, is not copied to the new picture. The comment is similarly not copied; instead, the comment currently active on the camera, if any, is appended.

"Lighten" and "Darken"

The camera compares multiple selected pictures and selects only the brightest or darkest pixels at each point in the picture to create a single new JPEG copy.

1 Select [Retouch] in the *i* menu, then highlight [Lighten] or [Darken] and press ⊕.

• [Lighten]: The camera compares the pixels in each picture and uses only the brightest.







• [Darken]: The camera compares the pixels in each picture and uses only the darkest.



2 Choose how pictures are selected.

Option	Description
[Select individual pictures]	Select pictures for the overlay one-by-one.
[Select consecutive pictures]	Select two pictures; the overlay will include the two pictures and all the pictures between them.
[Select folder]	The overlay will include all pictures in the selected folder.

3 Select the source slot.

- Highlight the slot with the card containing the desired pictures and press ^(b).
- You will not be prompted to select the slot if only one memory card is inserted.

4 Select the pictures.

If you chose [Select individual pictures]:

- Highlight pictures using the multi selector.
- \bullet To view the highlighted picture full screen, press and hold the $\ensuremath{\mathfrak{P}}$ button.
- To select the highlighted picture, press the ♀ ?) button. Selected pictures are marked with a check (). To remove the check () and deselect the current picture, press the ♀ ?) button again. The selected pictures will be combined using the option selected in Step 1.
- Press
 [®] to proceed once selection is complete.

If you chose [Select consecutive pictures]:

- All pictures in a range chosen using the multi selector will be combined using the option selected in Step 1.
 - Use the $\exp\left(?\right)$ button to select the first and last pictures in the desired range.
 - The first and last pictures are indicated by \bigcirc icons and the pictures between them by \bigcirc icons.
 - You can alter your selection by using the multi selector to highlight different pictures to serve as the first or last frame. Press the center of the sub-selector to choose the current picture as the new start or end point.
- \bullet To view the highlighted picture full screen, press and hold the $\ensuremath{\mathfrak{P}}$ button.

If you chose [Select folder]:

Highlight the desired folder and press \circledast to overlay all pictures in the folder using the option selected in Step 1.

5 Save the overlay.

- To interrupt the process and display a confirmation dialog before the operation is complete, press the MENU button; to save the current overlay "as is" without adding the remaining pictures, highlight [Save and exit] and press ⁽¹⁾. To exit without creating an overlay, highlight [Discard and exit] and press ⁽²⁾.

Cautions: [Lighten]/[Darken]

- Only pictures created with this camera can be selected. Pictures created with other models cannot be selected.
- The overlay will include only pictures created with the same options selected for [Image area] > [Choose image area] in the photo shooting menu.
- The image quality setting for the completed overlay is that of the highest quality picture it contains.
- Overlays that include NEF (RAW) pictures will be saved at an image quality of [JPEG fine +].
- All JPEG pictures in the overlay must be the same size.

Editing Videos

Videos can be edited using the following options:

Option		Description	
Ľ.	[Trim video]	Trim unwanted footage.	
	[Save current frame]	Save a selected frame as a JPEG still.	

 These options are not available with videos recorded with [ProRes 422 HQ 10-bit (MOV)] or [H.265 10-bit (MOV)] selected for [Video file type] in the video recording menu.

Trimming Videos




- **1** Display a video full frame.
- **2** Pause the video on the new opening frame.
 - Press ® to start playback. Press 🕀 to pause.
 - Your approximate position in the video can be ascertained from the video progress bar.




- Press or or rotate the command dials to locate the desired frame.

3 Select [Trim video]. Press the *i* button, highlight [Trim video], and press ⁽¹⁾. 4 Choose the start point. To create a copy that begins from the current frame, highlight [Start point] and press ⁽²⁾.

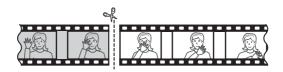

5 Confirm the new start point.


- If the desired frame is not currently displayed, press ① or ③ to advance or rewind a frame at a time.
- Rotate the main command dial one stop to skip ahead or back 10 frames.
- Rotate the sub-command dial one stop to skip ahead or back 10 s.

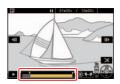

6 Choose the end point.

Press the center of the sub-selector to switch to the end-point selection tool (\overline{P}) and then select the closing frame (\overline{P}) as described in Step 5.



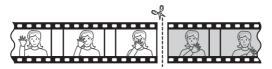

7 Press (*) to create the copy.

8 Preview the copy.

- To abandon the current copy and return to Step 5, highlight [**Cancel**] and press ®.

Overwrite existing file Cancel Preview	Cancel		
Preview	Preview	Cancel	
		Preview	

9 Choose a save option.

Choose [**Save as new file**] to save the edited copy as a new file. To replace the original video with the edited copy, choose [**Overwrite existing file**].



10 Save the copy.

Press ® to save the copy.

Cautions: Trimming Videos

- The copy will not be saved if there is insufficient space available on the memory card.
- Videos less than two seconds long cannot be edited using [Trim video].
- Copies have the same time and date of creation as the original.

Removing Opening or Closing Footage

- To remove only the closing footage from a video, highlight [**End point**] and press (a) in Step 4, select the closing frame, and proceed to Step 7 without pressing the center of sub-selector in Step 6.
- To remove only the opening footage, proceed to Step 7 without pressing the center of sub-selector in Step 6.

🜌 The i Menu [Trim Video] Option

Videos can also be edited using the [Trim video] item in the *i* menu.

Saving Selected Frames as JPEG Stills

1 Pause the video on the desired frame.

- Press 🐨 to pause playback.
- Your approximate position in the video can be ascertained from the video progress bar.
- Press ④ or ④ or rotate the command dials to locate the desired frame.

2 Choose [Save current frame].

Press the *i* button, then highlight [**Save current frame**] and press [®] to create a JPEG copy of the current frame.





[Save Current Frame]

- Stills are saved at the dimensions selected for [Frame size/frame rate] in the video recording menu when the video was recorded.
- They cannot be retouched.
- Some categories of photo information are not displayed during playback.

Voice Memos

Recording Voice Memos

Voice memos up to 60 seconds long can be added to photographs.

1 Select the photograph.

Only one voice memo can be recorded per picture; additional voice memos cannot be recorded for pictures already marked with a [1] icon. The existing voice memo must be deleted before another can be recorded (C299).

17.12

2 Hold the ∳ button.

- Audio is recorded while the button is pressed.



3 Release the 9 button.

- Recording will end.
- Pictures with voice memos are indicated by [1] icons.



🔽 Recording Not Available

Voice memos cannot be added to videos or Image Dust Off reference data.

Recording Restrictions

Voice memos cannot be recorded if:

- the photo/video selector is rotated to 🐙 or
- a multiple exposure is in progress.

Caution: Recording Voice Memos

Touch controls are disabled and other pictures cannot be displayed while recording is in progress.

Interrupting Recording

Pressing the shutter-release button or operating other camera controls may end recording. During interval-timer photography, recording ends about two seconds before the next shot is taken; recording also ends when the camera is turned off.

Storage Location

Voice memors for pictures taken with two memory cards inserted and [Backup], [RAW Slot 1 - JPEG Slot 2], or [JPEG Slot 1 - JPEG Slot 2] selected for [Role played by card in Slot 2] in the photo shooting menu are recorded with the copies on both cards.

🔽 Voice Memo File Names

Voice memo file names have the form "DSC_nnnn.WAV". The voice memo has the same file number ("nnnn") as the picture with which it is associated. For example, the voice memo for the picture "DSC_0002.JPG" would have the file name "DSC_0002.WAV". Voice memo file names can be viewed on a computer.

- Voice memos for photos recorded with [Adobe RGB] selected for [Color space] in the photo shooting menu have names of the form
 "_DSCnnnn.WAV".
- Voice memos for photos recorded with a prefix other than "DSC" selected for [**File naming**] in the photo shooting menu will be recorded with the selected prefix in place of "DSC".

🖉 The i Menu

Recording can also be initiated by highlighting [**Record voice memo**] in the playback i menu and pressing \circledast . To end recording, press \circledast a second time.

Playing Voice Memos

To play voice memos, press the **♦** button when viewing photographs marked with [♪] icons.



Interrupting Playback

Pressing the shutter-release button or operating other camera controls may end playback. Playback ends automatically when another picture is selected or the camera is turned off.

🖉 The i Menu

Voice memos can also be played by highlighting [**Play voice memo**] in the playback i menu and pressing @.

Deleting Voice Memos

To delete the voice memo from the current photo, press the í () button; a confirmation dialog will be displayed as shown.

 To delete both the photo and the voice memo, highlight [Picture and voice memo] and press in (***).




- To delete only the voice memo, highlight [Voice memo only] and press **(mem)**.
- To exit without deleting either the photo or the voice memo, press 🕨.
- With dual-format pictures, you may opt to delete the voice memo only from the picture on the card in the current slot by choosing [Selected picture] in the confirmation dialog and then selecting [Voice memo only].

Connecting to HDMI TVs and Recorders

Connecting to HDMI Devices

The camera can be connected to TVs, recorders, and other devices featuring HDMI connectors. Use a third-party type A HDMI cable. The cable must be purchased separately. Always turn the camera off before connecting or disconnecting a cable.

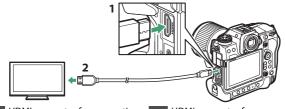

- 1 HDMI connector for connection to camera
- 2 HDMI connector for connection to external device *
- * Choose a cable with a connector that matches the connector on the HDMI device.

TVs

- After tuning the TV to the HDMI input channel, turn the camera on and press the 🗈 button to view pictures on the television screen.
- Audio playback volume can be adjusted using the controls on the TV. Camera controls cannot be used.
- If the camera is paired with a smart device running the SnapBridge app, the device can be used to control playback remotely while the camera is connected to a TV. See SnapBridge online help for details.
- Use an HDMI input connector compliant with HDMI 2.1 to connect to televisions that support 8K input.

Recorders

In video mode, the camera can record directly to connected HDMI recorders.

 If a memory card is inserted in the camera when it is connected to a recorder, video will be recorded both to the recorder and the memory card. If no memory card is inserted, the footage will be recorded only to the external device.

Adjusting Settings

Use the [**HDMI**] item in the setup menu to adjust settings for HDMI output.

Option	Description
[Output resolution]	The format for output to HDMI devices can be selected from [Auto], [4320p (progressive)], [2160p (progressive)], [1080p (progressive)], and [720p (progressive)].
[Output range]	 The RGB video signal input range varies with the HDMI device. [Auto], which matches the output range to the HDMI device, is recommended in most situations. If the camera is unable to determine the correct RGB video signal output range for the HDMI device, you can choose from the following options: [Limited range]: For devices with an RGB video signal input range of 16 to 235. Choose this option if you notice a loss of detail in shadows. [Full range]: For devices with an RGB video signal input range of 0 to 255. Choose this option if you notice that shadows are "washed out" or too bright.

Option	Description	
[Output shooting info]	Choose whether shooting information is displayed on the HDMI device. If [ON] is selected, icons and other information in the shooting display will be recorded with the footage saved to external recorders.	
[Mirror camera info display]	 Choose whether the display in the camera monitor remains on while an HDMI device is connected. If [OFF] is selected, the display will remain off, reducing the drain on the camera battery. [Mirror camera info display] will be fixed at [ON] while [OFF] is selected for [Output shooting info]. 	

"Output Resolution"

 When [Auto] is selected for [HDMI] > [Output resolution] in the setup menu, the camera automatically detects whether the external recorder supports the frame size and rate selected on the camera. If it does not, the camera will search for a supported resolution and frame rate in the order listed below. If no supported resolution and frame rate is found, output will be suspended.

Frame size/frame rate	Output resolution/frame rate search order
[7680×4320; 30p]	4320/30p → 2160/30p → 1080/30p
[7680×4320; 25p]	4320/25p → 2160/25p → 1080/25p
[7680×4320; 24p]	4320/24p → 2160/24p → 1080/24p
[3840×2160; 120p]	2160/120p → 1080/120p → 2160/60p → 1080/60p → 2160/30p → 1080/30p
[3840×2160; 100p]	2160/100p → 1080/100p → 2160/50p → 1080/50p → 2160/25p → 1080/25p
[3840×2160; 60p]	2160/60p → 1080/60p → 2160/30p → 1080/30p
[3840×2160; 50p]	2160/50p → 1080/50p → 2160/25p → 1080/25p
[3840×2160; 30p]	2160/30p → 1080/30p
[3840×2160; 25p]	2160/25p → 1080/25p
[3840×2160; 24p]	2160/24p → 1080/24p

- No memory card inserted in camera:

Frame size/frame rate	Output resolution/frame rate search order
[1920×1080; 120p]	1080/120p → 1080/60p → 1080/30p
[1920×1080; 100p]	1080/100p → 1080/50p → 1080/25p
[1920×1080; 60p]	1080/60p → 1080/30p
[1920×1080; 50p]	1080/50p → 1080/25p
[1920×1080; 30p]	1080/30p
[1920×1080; 25p]	1080/25p
[1920×1080; 24p]	1080/24p

- Memory card inserted in camera:

Frame size/frame rate	Output resolution/frame rate search order
[7680×4320; 30p]	1080/30p
[7680×4320; 25p]	1080/25p
[7680×4320; 24p]	1080/24p
[3840×2160; 120p]	1080/60p → 1080/30p
[3840×2160; 100p]	1080/50p → 1080/25p
[3840×2160; 60p]– [1920×1080; 24p]	Same as when no memory card is inserted in the camera.

- When an option other than [Auto] is selected for [Output resolution], the signal will be output at the selected resolution. HDMI output will be suspended if:
 - output resolution is higher than the current frame size or
 - the recorder does not support the selected output resolution.

V Frame Rates for [Output Resolution] Options Other Than [Auto]

Video recording rates of 120p, 100p, 60p, or 50p will be adjusted as follows if not compatible with the frame rate chosen for the external recorder.

- 120p: The frame rate will first drop to 60p. If 60p is also not supported, it will drop to 30p.
- 100p: The frame rate will first drop to 50p. If 50p is also not supported, it will drop to 25p.
- 60p: The frame rate will drop to 30p.
- 50p: The frame rate will drop to 25p.

Frame Rates for an [Output Resolution] of [720p (progressive)]

Footage filmed at a frame rate of 120p, 60p, 30p, or 24p is output at 60p. Footage filmed at 100p, 50p, or 25p is output at 50p.

🔽 Caution: Filming with Memory Cards

Footage filmed at a frame size of 7680 × 4320 or at a frame size and rate of 3840 × 2160; 120p or 3840 × 2160; 100p will not be output via HDMI if **[4320p (progressive)]** or **[2160p (progressive)]** is selected for **[HDMI]** > **[Output resolution]** in the setup menu. Remove the memory cards from the camera and record the footage to the external recorder.

🔽 Zoom

- The camera display can be zoomed in by pressing the \mathfrak{P} button during recording, but this has no effect on the footage output to the recorder.
- If no footage is currently being recorded, changes to zoom using the button will be reflected both in the camera display and in the output to the recorder. The output resolution however switches to [1080p (progressive)], even if the option last selected for [HDMI] > [Output resolution] in the setup menu was [4320p (progressive)] or [2160p (progressive)].

YCbCr and Bit Depth

The YCbCr value and bit depth for footage output to external HDMI devices when [H.265 10-bit (MOV)] or [H.265 8-bit (MOV)] is selected for [Video file type] in the video recording menu varies with the frame size and rate.

Frame size/frame rate	Video file type		
Frame Size/Irdine rate	H.265 10-bit	H.265 8-bit	
[7680×4320; 30p]			
[7680×4320; 25p]			
[7680×4320; 24p]	4:2:0 10-bit	4:2:0 8-bit	
[3840×2160; 120p]			
[3840×2160; 100p]			
[3840×2160; 60p]			
[3840×2160; 50p]			
[3840×2160; 30p]			
[3840×2160; 25p]			
[3840×2160; 24p]			
[1920×1080; 120p]	4:2:2 10-bit	4:2:2 8-bit	
[1920×1080; 100p]	4.2.2 TO-Dit	4.2.2 0 510	
[1920×1080; 60p]			
[1920×1080; 50p]			
[1920×1080; 30p]			
[1920×1080; 25p]			
[1920×1080; 24p]			

- [ProRes 422 HQ 10-bit (MOV)] footage is output at a YCbCr value of 4:2:2 and a bit depth of 10 bits, regardless of the option selected for [Frame size/frame rate].
- [H.264 8-bit (MP4)] footage is output at a YCbCr value of 4:2:2 and a bit depth of 8 bits, regardless of the option selected for [Frame size/ frame rate].

Recording to External Recorders That Support a Bit Depth of 10 Bits

The HDMI signal will be output at a bit depth of 10 bits only to HDMI recorders that support this option.

External Recording Control

Choosing **[ON]** for **[External rec. cntrl (HDMI)**] in the video recording menu allows camera controls to be used to start and stop recording on the external recorder.

- For information on whether your recorder supports external recording control, consult the manufacturer.
- The camera display will turn off automatically when the time selected for Custom Setting c3 [Power off delay] > [Standby timer] expires, ending HDMI output. When recording videos to an external device, select [Standby timer] and choose [No limit] or a time longer than the anticipated recording time.
- An icon will be displayed in the camera monitor when **[ON]** is selected: **Characterization** is displayed if no footage is currently being recorded, **Characterization** while videos are being recorded. During recording, check the recorder and recorder display to ensure that footage is being saved to the device.
- Note that selecting [**ON**] may disrupt the footage output to the device.

Connecting to Smart Devices

The SnapBridge App

Use the SnapBridge app for wireless connections between the camera and your smartphone or tablet ("smart device").



 SnapBridge apps can be downloaded from the Apple App Store^{*} or on Google Play[™].





- Visit the Nikon website for the latest SnapBridge news.
- Carefully read any license agreements or the like displayed when SnapBridge is launched and only proceed if you are willing to accept them.

What SnapBridge Can Do for You

The tasks that can be performed using the SnapBridge app are outlined below. For details, see the SnapBridge app online help: https://nikonimglib.com/snbr/onlinehelp/en/index.html

Downloading Pictures from the Camera

Download existing pictures to your smart device. They can also be downloaded automatically as they are taken.

Remote Photography

Control the camera and take pictures from the smart device.

Can't Connect?

If you have trouble establishing a connection with the smart device, try:

- turning the camera and smart device off and then on again, or
- checking wireless settings on the smart device.

Wireless Connections

Use the SnapBridge app for wireless connections between the camera and your smart device. You can connect via either Bluetooth (\square 313) or Wi-Fi (\square 317). Connecting using Bluetooth allows pictures to be uploaded automatically as they are taken.

Connecting via Bluetooth (Pairing)

Before connecting via Bluetooth for the first time, you will need to pair the camera and smart device.


🔽 Before Pairing

- Enable Bluetooth on the smart device. For details, see the documentation provided with the device.
- Ensure that the batteries in the camera and smart device are fully charged to prevent the devices turning off unexpectedly.
- Check that there is space available on the camera memory card.

Pairing

Pair the camera and smart device as described below.

• Some operations are performed using the camera, others on the smart device.

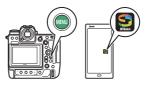

- Additional instructions are available via SnapBridge online help.
 - 1 Camera: Select [Connect to smart device] > [Pairing (Bluetooth)] in the network menu, then highlight [Start pairing] and press ⊛.

The camera name will be displayed in the monitor.

n	Pairing (Bluetooth)	C
	Start pairing	
* •	Bluetooth connection	
4		
₽		
Pair	ing (Bluetooth)	
	Operate the smart device followi	ng



2 Smart device: Launch the SnapBridge app and tap [Connect to camera] in the • tab.

If this is the first time you have launched the app, you should instead tap [**Connect to camera**] in the welcome display.

3 Smart device: Follow the on-screen instructions.

- When prompted, tap the category for your camera and then tap the "pairing" option when prompted to choose the connection type.
- Tap the camera name when prompted.
- 4 Camera/smart device: After confirming that the camera and smart device display the same authentication code, follow the on-screen instructions on both devices to complete pairing.
 - Tap the pairing button on the smart device and press the ® button on the camera.
 - The camera and smart device will each display a message when pairing is complete. The camera will then automatically exit to the menus.

ng (Bluetooth) Confirm that the smart device Jisplays the same authentica-	
Pairing complete.	

The camera and smart device are now paired. For information on using the SnapBridge app, see online help.

V Pairing Error

If you wait too long between pressing the button on the camera and tapping the button on the smart device in Step 4, the device will display an error message and pairing will fail.

- If you are using an Android device, tap [OK] and return to Step 1.
- If you are using an iOS device, dismiss the SnapBridge app and check that it is not running in the background, then request iOS to "forget" the camera before returning to Step 1. The request to "forget" the camera is made via the iOS "Settings" app.

	Settin	gs
C	Airplane Mode	
φ	Wi-Fi	Not Connected >
*	Bluetooth	On >
1	Cellular	2
9	Notifications	5
۵	Sounds & Haptics	2
C	Do Not Disturb	5

🔽 Disabling Bluetooth

To disable Bluetooth, select [OFF] for [Connect to smart device] > [Pairing (Bluetooth)] > [Bluetooth connection] in the camera network menu.

Connecting to a Previously-Paired Smart Device

Once the smart device has been paired with the camera, you will be able to connect simply by enabling Bluetooth on both the smart device and camera and launching the SnapBridge app.

Connecting via Wi-Fi (Wi-Fi Mode)

In Wi-Fi mode, the camera connects directly to the smart device via Wi-Fi, no Bluetooth pairing required.

Mode) Sefore Connecting (Wi-Fi Mode)

- Enable Wi-Fi on the smart device. For details, see the documentation provided with the device.
- Ensure that the batteries in the camera and smart device are fully charged to prevent the devices turning off unexpectedly.
- Check that there is space available on the camera memory card.

Connecting

Follow the steps below to establish a connection between the camera and smart device in Wi-Fi mode.

• Some operations are performed using the camera, others on the smart device.



- Additional instructions are available via SnapBridge online help.
- Smart device: Launch the SnapBridge app, open the 💽 tab, tap 🐼, and select [Wi-Fi mode].

If this is the first time you have launched the app, you should instead tap [**Connect to camera**] in the welcome display. When prompted, tap the category for your camera and then tap the "Wi-Fi" option when prompted to choose the connection type.

2 Camera/smart device: Turn the camera on when prompted. Do not use any of the controls in the app at this point.



4 Smart device: Follow the on-screen instructions to establish a Wi-Fi connection.

 On iOS devices, the "Settings" app will launch. Tap [< Settings] to open [Settings], then scroll up and tap [Wi-Fi] (which you'll find near the top of the settings list) to display Wi-Fi settings.

Settings SnapBrid	ge		Settings
LOW SNAPBRIDGE TO ACCESS		E Airplane Mo	de 📀
Photos	All Photos >	🛜 Wi-Fi	Not Connected
Bluetooth		8 Bluetooth	On
Local Network		Cellular	
Siri & Search	2	Notification	
		Sounds & H	

• In the Wi-Fi settings display, select the camera SSID and enter the password displayed by the camera in Step 3.

5 Smart device: After adjusting device settings as described in Step 4, return to the SnapBridge app.

- After establishing a Wi-Fi connection to the camera, the smart device will display Wi-Fi mode options.
- The camera will display a message stating that the connection is complete.



The camera and smart device are now connected via Wi-Fi. For information on using the SnapBridge app, see online help.

🔽 Terminating Wi-Fi Mode

To end the Wi-Fi connection, tap \bigcirc in the SnapBridge \bigcirc tab. When the icon changes to \bigcirc , tap \bigotimes and select [**Exit Wi-Fi mode**.].

Connecting to Computers or FTP Servers

Making the Connection

The camera can be connected to a computer or FTP server using any of the methods below.

Computers: Connecting via USB

Connect the camera and computer via USB and use NX Studio to upload pictures to the computer (C2323).

• The camera can be controlled remotely from the computer using optional Camera Control Pro 2 software.




Computers: Connecting via Ethernet or Wireless LAN

Connect to a computer via Ethernet or using the camera's built-in wireless LAN. You can upload pictures to the computer or control the camera remotely via a network using optional Camera Control Pro 2 software (□327).



FTP Servers: Connecting via Ethernet or Wireless LAN

Upload pictures to an FTP server via Ethernet or using the camera's built-in wireless LAN (^[]] 366).

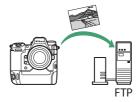

Can't Connect?

If you have trouble establishing a connection with a computer or FTP server, try:


- turning the camera off and then on again,
- checking wireless settings on the computer or FTP server, or
- restarting the computer or FTP server.

Wireless LAN and Ethernet Errors

For information on wireless- or Ethernet-related errors, see "Troubleshooting Wireless LAN and Ethernet Connections" (© 397).

Computers: Connecting via USB

Connect the camera using the supplied USB cable. You can then use NX Studio software to copy pictures to the computer for viewing and editing.

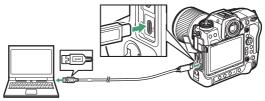

Installing NX Studio

You will need an Internet connection when installing NX Studio. Visit the Nikon website for the latest information, including system requirements.


- Download the latest NX Studio installer from the website below and follow the on-screen instructions to complete installation. https://downloadcenter.nikonimglib.com/
- Note that you may be unable to download pictures from the camera using earlier versions of NX Studio.

Copying Pictures to a Computer Using NX Studio

See online help for detailed instructions.

1 Connect the camera to the computer.

After turning the camera off and ensuring that a memory card is inserted, connect the supplied USB cable as shown.

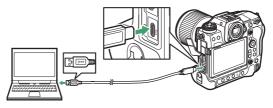

🖉 Using a Card Reader


Pictures can also be copied from a memory card inserted in a third-party card reader. You should however check that the card is compatible with the card reader.

2 Turn the camera on.

- The Nikon Transfer 2 component of NX Studio will start. Nikon Transfer 2 image transfer software is installed as part of NX Studio.
- If a message is displayed prompting you to choose a program, select Nikon Transfer 2.
- If Nikon Transfer 2 does not start automatically, launch NX Studio and click the "Import" icon.

3 Click [Start Transfer].

Pictures on the memory card will be copied to the computer.

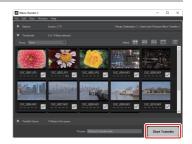

4 Turn the camera off.

Disconnect the USB cable when transfer is complete.

Windows 10 and Windows 8.1

Windows 10 and Windows 8.1 may display an AutoPlay prompt when the camera is connected.

Click the dialog and then click [Nikon Transfer 2] to select Nikon Transfer 2.





🔽 macOS

If Nikon Transfer 2 does not start automatically, confirm that the camera is connected and then launch Image Capture (an application that comes with macOS) and select Nikon Transfer 2 as the application that opens when the camera is detected.

Caution: Transferring Videos

Do not attempt to transfer videos from the memory card while it is inserted in a camera of a different make or model. Doing so could result in the videos being deleted without being transferred.

Cautions: Connecting to Computers

- Do not turn the camera off or disconnect the USB cable while transfer is in progress.
- Do not use force or attempt to insert the connectors at an angle. Be sure also to keep the connectors straight when disconnecting the cable.
- Always turn the camera off before connecting or disconnecting a cable.
- To ensure that data transfer is not interrupted, be sure the camera battery is fully charged.

🔽 USB Hubs

Connect the camera directly to the computer; do not connect the cable via a USB hub or keyboard. Connect the camera to a pre-installed USB port.

Computers: Connecting via Ethernet or Wireless LAN

The camera can connect to computers either directly or via existing networks using Wi-Fi (built-in wireless LAN) or a third-party Ethernet cable inserted in the camera's Ethernet connector.

What Ethernet and Wireless LAN Can Do for You

Ethernet and wireless LAN connections can be used for the following tasks:

Uploading Pictures

Existing pictures can be uploaded to the computer. They can also be uploaded automatically as they are taken.



Controlling Cameras Remotely

Installing Camera Control Pro 2 (available separately) on a networked computer gives you control over the details of exposure and other camera settings while taking pictures remotely (\square 361).



The Wireless Transmitter Utility

Before you will be able to connect to a wireless or Ethernet LAN, you will need to pair the camera with the computer using Nikon's Wireless Transmitter Utility software.

- Once the devices are paired, you will be able to connect to the computer from the camera.
- The Wireless Transmitter Utility is available for download from the Nikon Download Center. Check the version and system requirements and be sure to download the latest version. <u>https://downloadcenter.nikonimglib.com/</u>

Wireless LAN

The camera can connect to computers either by direct wireless link (access-point mode) or via a wireless router on an existing network, including home networks (infrastructure mode).

Direct Wireless Connection (Access-Point Mode)

The camera and computer connect via direct wireless link. The camera acts as a wireless LAN access point, letting you connect when working outdoors and in other situations in



which the computer is not already connected to a wireless network and eliminating the need for complicated adjustments to settings. The computer cannot connect to the Internet while connected to the camera.

- Before proceeding, check that the Wireless Transmitter Utility (\square 328) is installed on the computer.
- Confirm that [OFF] is selected for [Wired LAN] in the network menu.

Select [Connect to computer] in the network menu, then highlight [Network settings] and press ().



2 Highlight [Create profile] and press \circledast .



3 Name the new profile.

- To proceed to the next step without changing the default name, press ♥.
- Whatever name you choose will appear in the network menu [Connect to computer] > [Network settings] list.



• To rename the profile, press ⊛. For information on text entry, see "Text Entry" (□064). Press ♥ to proceed after entering a name.

4 Highlight [Direct connection to computer] and press ⊛.

The camera SSID and encryption key will be displayed.





5 Establish a connection to the camera. Windows:

- Click the wireless LAN icon in the taskbar.
- Select the SSID displayed by the camera in Step 4.
- When prompted to enter the network security key, enter the encryption key displayed by the camera in Step 4. The computer will initiate a connection to the camera.

macOS:

- Click the wireless LAN icon in the menu bar.
- Select the SSID displayed by the camera in Step 4.
- When prompted to enter the network security key, enter the encryption key displayed by the camera in Step 4. The computer will initiate a connection to the camera.



6 Start pairing.

When prompted, launch the Wireless Transmitter Utility on the computer.



7 Select the camera in the Wireless Transmitter Utility. Select the name displayed by the camera in Step 6 and click [Next].




8 In the Wireless Transmitter Utility, enter the authentication code displayed by the camera.

• The camera will display an authentication code.



• Enter the authentication code in the dialog displayed by the Wireless Transmitter Utility and click [**Next**].



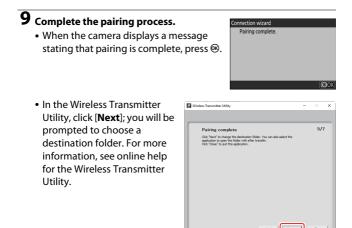

• A wireless connection will be established between the camera and computer when pairing is complete.

10 Check the connection.

When a connection is established, the profile name will be displayed in green in the camera [**Connect to computer**] menu.



• If the profile name is not displayed in

green, connect to the camera via the wireless network list on your computer.

A wireless connection has now been established between the camera and the computer.

Pictures taken with the camera can be uploaded to the computer as described in "Uploading Pictures" (2354).

For information on controlling the camera from a computer using Camera Control Pro 2, see "Camera Control" ($\square 361$).

II Connecting in Infrastructure Mode

The camera connects to a computer on an existing network (including home networks) via a wireless router. The computer can still connect to the Internet while connected to the camera.



- Before proceeding, check that the Wireless Transmitter Utility (C 328) is installed on the computer.
- Confirm that [OFF] is selected for [Wired LAN] in the network menu.

🔽 Infrastructure Mode

Connection to computers beyond the local area network is not supported. You can connect only to computers on the same network.

Select [Connect to computer] in the network menu, then highlight [Network settings] and press .



2 Highlight [Create profile] and press .

3 Name the new profile.

- To proceed to the next step without changing the default name, press ♥.
- Whatever name you choose will appear in the network menu [Connect to computer] > [Network settings] list.



• To rename the profile, press ⊛. For information on text entry, see "Text Entry" (□□64). Press ♥ to proceed after entering a name.

4 Highlight [Search for Wi-Fi network] and press [®] .	Connection wizard Choose a method for connecting to the wireless network.
The camera will search for networks	Search for Wi-Fi network
currently active in the vicinity and list	Direct connection to computer
them by name (SSID).	@Easy Connect]@3Next]

[Easy Connect]

 To connect without entering an SSID or encryption key, press ♥ in Step 4. Next, press ℗ and choose from the following options:



Option	Description	
[Push-button WPS] For routers that support push-button WPS. Pres WPS button on the router and then press the ca		
[PIN-entry WPS]	The camera will display a PIN. Using a computer, enter the PIN on the router. For more information, see the documentation provided with the router.	

• After connecting, proceed to Step 7.

encrypted ($\mathbf{\hat{h}}$), you will be prompted to enter the encryption key. If the network is not encrypted, proceed to Step 7.

If the desired network is not displayed, press € to search again.

Midden SSIDs

Networks with hidden SSIDs are indicated by blank entries in the network list.

- To connect to a network with a hidden SSID, highlight a blank entry and press ®. Next, press [®]; the camera will prompt you to provide an SSID.
- Enter the network name and press ♥. Press Regionary the camera will now prompt you to enter the encryption key.

5 Choose a network.

- Highlight a network SSID and press ®.
- The band on which each SSID operates is indicated by an icon.
- Encrypted networks are indicated by a icon. If the selected network is

Choose a wireless network 2a 59 20 5 2a 56 2a 56 Retry OBNex



6 Enter the encryption key.

- Press ® and enter the encryption key for the wireless router.
- For more information, see the documentation for the wireless router.
- Press when entry is complete.
- Press [®] again to initiate the connection. A message will be displayed for a few seconds when the connection is established.



Connection wizard			
Connected.			
SSID:	EDD/F/MLC		



7 Obtain or select an IP address.

• Highlight one of the following options and press ®.

Connection wizard	2
Choose how the IP address is obtained.	
Obtain automatically	
Enter manually	
03	Next

Option	Description
[Obtain automatically]	Select this option if the network is configured to supply the IP address automatically. A "configuration complete" message will be displayed once an IP address has been assigned.
[Enter manually]	 Enter the IP address and sub-net mask manually. Press [®]; you will be prompted to enter the IP address. Rotate the main command dial to highlight segments. Press [®] or [®] to change the highlighted segment and press [®] to save changes. Next, press [®]; a "configuration complete" message will be displayed. Press [®] again to display the sub-net mask. Press [®] or [®] to edit the sub-net mask and press [®]; a "configuration complete" message will be displayed.

• Press ® to proceed when the "configuration complete" message is displayed.

8 Start pairing.

When prompted, launch the Wireless Transmitter Utility on the computer.



9 Select the camera in the Wireless Transmitter Utility. Select the name displayed by

the camera in Step 8 and click [**Next**].

Wireless Transmitter Utility	-		×
Select the camera with which to pair	_	1/7	
		ר	
	_		
<back next=""></back>	J -	Cancel	


10 In the Wireless Transmitter Utility, enter the authentication code displayed by the camera.

• The camera will display an authentication code.



• Enter the authentication code in the dialog displayed by the Wireless Transmitter Utility and click [**Next**].



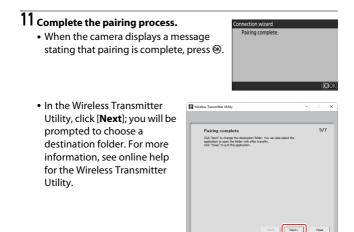

• A wireless connection will be established between the camera and computer when pairing is complete.

12 Check the connection.

When a connection is established, the profile name will be displayed in green in the camera [**Connect to computer**] menu.

•	Connect to computer	1)
-	Network settings		•
2	Connection type		
	Options		
1	WLAN1		
۲			
₽	₩00000 ©00:00′ 00°	2.4GHz 👖	1

A wireless connection has now been established between the camera and the computer.

Pictures taken with the camera can be uploaded to the computer as described in "Uploading Pictures" (C 354).


For information on controlling the camera from a computer using Camera Control Pro 2, see "Camera Control" ($\square 361$).

Ethernet Connections

The camera can connect to computers either directly or via existing networks using a third-party Ethernet cable inserted in the camera's Ethernet connector.

II Connecting an Ethernet Cable

Connect an Ethernet cable to the camera's Ethernet connector. Do not use force or attempt to insert the connectors at an angle. Connect the other end of the cable to a computer or router.

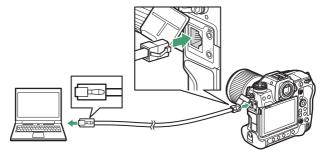

II Ethernet Network Profiles

Before proceeding, check that an Ethernet cable is connected to the camera and the Wireless Transmitter Utility (\square 328) is installed on the computer.

1 Select [ON] for [Wired LAN] in the	0	NETWORK MENU	
network menu.	-	Airplane mode	(IOFF)
network menu.	Ĵ,	Wired LAN	ON
	_	Connect to smart device	
		Connect to computer	0FF >
	Y	Connect to FTP server	
	۲	Connect to other cameras	OFF >
	.⇒∕	USB	MTP/PTP >
network menu, then highlight [Network settings] and press ③.	* * * *	Connection type Options Choose a profile.	~ ₽С > >
	⇒		



4 Name the new profile.

- To proceed to the next step without changing the default name, press ♥.
- Whatever name you choose will appear in the network menu [Connect to computer] > [Network settings] list.



• To rename the profile, press ⊛. For information on text entry, see "Text Entry" (□064). Press ♥ to proceed after entering a name.

5 Obtain or select an IP address.

• Highlight one of the following options and press ®.

Connection wizard	2
Choose how the IP address is obtained.	
Obtain automatically	
Enter manually	
03	Next

Option	Description
[Obtain automatically]	Select this option if the network is configured to supply the IP address automatically. A "configuration complete" message will be displayed once an IP address has been assigned.
[Enter manually]	 Enter the IP address and sub-net mask manually. Press [®]; you will be prompted to enter the IP address. Rotate the main command dial to highlight segments. Press [®] or [®] to change the highlighted segment and press [®] to save changes. Next, press [®]; a "configuration complete" message will be displayed. Press [®] again to display the sub-net mask. Press [®] or [®] to edit the sub-net mask and press [®]; a "configuration complete" message will be displayed.

• Press ® to proceed when the "configuration complete" message is displayed.

6 Start pairing.

When prompted, launch the Wireless Transmitter Utility on the computer.



7 Select the camera in the Wireless Transmitter Utility. Select the name displayed by the camera in Step 6 and click [Next].




8 In the Wireless Transmitter Utility, enter the authentication code displayed by the camera.

• The camera will display an authentication code.



• Enter the authentication code in the dialog displayed by the Wireless Transmitter Utility and click [**Next**].



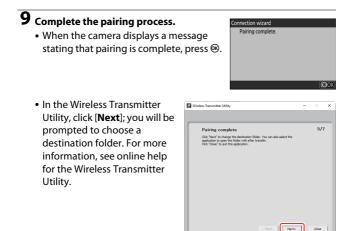

• A connection will be established between the camera and computer when pairing is complete.

10 Check the connection.

When a connection is established, the profile name will be displayed in green in the camera [**Connect to computer**] menu.

0	Connect to computer	5
-	Network settings	>
	Connection type ~~P	
	Options	
۲	LAN1	
۲		
li}	₿00000 ©00:00′ 00″	묾

A connection has now been established between the camera and the computer.

Pictures taken with the camera can be uploaded to the computer as described in "Uploading Pictures" (C 354).

For information on controlling the camera from a computer using Camera Control Pro 2, see "Camera Control" ($\square 361$).

Uploading Pictures

Pictures can be selected for upload during playback. They can also be uploaded automatically as they are taken.

- Before uploading pictures, connect the camera and computer via Ethernet or a wireless network. Connect using a host profile selected via the network menu [Connect to computer] > [Network settings] list.
- When a connection is established, the profile name will be displayed in green in the camera [Connect to computer] menu.





Destination Folders

By default, pictures are uploaded to the following folders:

- Windows: \Users\(user name)\Pictures\Wireless Transmitter Utility
- macOS: /Users/(user name)/Pictures/Wireless Transmitter Utility

The destination folder can be selected using the Wireless Transmitter Utility. For more information, see online help for the Wireless Transmitter Utility.

Caution: Access Point Mode

Select a host profile and enable camera Wi-Fi before connecting.

Firewall Settings

TCP port 15740 and UDP port 5353 are used for connections to computers. File transfer may be blocked if the server firewall is not configured to allow access to these ports.

Selecting Pictures for Upload

 Select [Picture transfer] for [Connect to computer] > [Connection type] in the network menu.



2 Press the **▶** button on the camera and select full-frame or thumbnail playback.

3 Select a picture and press the i button.



4 Highlight [Select for upload to computer] and press ⊗.

 A white "priority upload" icon will appear on the picture. If the camera is currently connected to a network, upload will begin immediately and the icon will turn green.



- Otherwise, upload will begin when a connection is established.
- Repeat Steps 3-4 to upload additional pictures.

🔽 Removing Upload Marking

- Repeat Steps 3-4 to remove upload marking from selected pictures.
- To remove upload marking from all pictures, select [Connect to computer] > [Options] > [Deselect all?] in the network menu.

Filtering Pictures for Upload

The [Filtered playback] item in the playback i menu can be used to display only pictures that meet chosen criteria (\Box 255). The pictures can then all be selected for upload by highlighting [Select all for computer upload] in the i menu and pressing \circledast .

Uploading Photos as They Are Taken

To upload new photos as they are taken, select [**ON**] for [**Connect to computer**] > [**Options**] > [**Auto upload**] in the network menu.

- Upload begins only after the photo has been recorded to the memory card. Be sure a memory card is inserted in the camera.
- Videos are not uploaded automatically. They must instead be uploaded manually from the playback display.

The Upload Icon

Upload status is indicated by the upload icon.

\star (white): Priority upload

The picture has been manually selected for upload. Pictures marked with this icon will be uploaded before pictures marked

🖍 (white): Upload

The picture has been selected for upload but upload has not yet begun.

🔊 (green): Uploading

Upload in progress.

Upload complete.

0	Options	C (9
-	Auto upload	ON
Ĵ,	Delete after upload	OFF
"	Upload RAW + JPEG as	RAW+J >
	JPEG+JPEG slot selection	
	Upload folder	
	Deselect all?	



II The [Connect to Computer] Upload Status Display

The [Connect to computer] display shows the following:

• • • • • •		5
Connect to computer	1	Status: The status of the connection to the host. The profile name is displayed in green when a connection is established. While files are being transferred, the status display shows "Now uploading" preceded by the name of the file being sent. Errors are also displayed here.
	2	Signal strength: Ethernet connections are shown by ፟፟፟ When the camera is connected to a wireless network, the icon instead shows the wireless signal strength.
	3	Band : The band used by the wireless network to which the camera is connected in infrastructure mode.
	4	Pictures/time remaining : The number of pictures remaining and the time needed to send them. The time remaining is an estimate only.

Loss of Signal

Wireless transmission may be interrupted if the signal is lost. Upload of pictures with upload marking can be resumed by turning the camera off and then on again once the signal has been re-established.

🔽 Caution: During Upload

Do not remove the memory card or disconnect the Ethernet cable during upload.

Voice Memos

Voice memos will be included when the associated pictures are transmitted. They cannot, however, be uploaded separately.

🔽 Turning the Camera Off

The camera saves transfer marking when turned off and resumes upload when next turned on.

Connection Status

Connection status is shown by the camera network indicator.



Network indicator	Status	
• (off)	No connection.	
🔾 (green)	Waiting to connect.	
ి: (flashes green)	Connected.	
🔅 (flashes amber)	Error.	

Camera Control

The camera can be controlled from a computer running Camera Control Pro 2. Photos can be saved directly to the computer instead of to the memory card and can consequently be taken even when no memory card is inserted in the camera.

- You will still need to insert a memory card when filming videos.
- Note that the camera standby timer does not expire in camera control mode.
- Before using Camera Control Pro 2, connect the camera and computer via Ethernet or a wireless network. Connect using a host profile selected via the network menu [Connect to computer] > [Network settings] list.
- When a connection is established, the profile name will be displayed in green in the camera [Connect to computer] menu.





 Select [Camera control] for [Connect to computer] > [Connection type] in the network menu.




2 Launch the copy of Camera Control Pro 2 installed on the host computer.

3 Control the camera using Camera Control Pro 2.

For information on taking pictures using Camera Control Pro 2, see the online help or other documentation for Camera Control Pro 2.

The [Connect to Computer] Camera Control Display

The [Connect to computer] display shows the following:

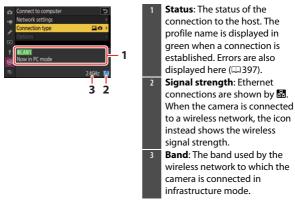

Loss of Signal

Loss of signal while the camera is connected to a wireless network may disrupt the connection to Camera Control Pro 2. If the camera network indicator flashes amber, select [End current connection] for [Connect to computer] > [Network settings] in the network menu before connecting to the network again. When the signal is re-established, the camera will reconnect to Camera Control Pro 2 and resume upload of any pictures that have yet to be transferred. Note that upload cannot be resumed if you turn the camera off before transfer is complete.

Caution: Ethernet Networks

Do not disconnect the Ethernet cable during upload or while the camera is on.

Caution: Wireless Networks

Response may slow on wireless networks.

V Firewall Settings

TCP port 15740 and UDP port 5353 are used for connections to computers. File transfer may be blocked if the server firewall is not configured to allow access to these ports.

Connection Status

Connection status is shown by the camera network indicator.



Network indicator	Status
• (off)	No connection.
\bigcirc (green)	Waiting to connect.
🔅 (flashes green)	Connected.
🔅 (flashes amber)	Error.

Ending the Connection to the Computer

You can end the connection by:


- turning the camera off,
- selecting [End current connection] for [Connect to computer] > [Network settings] in the network menu, or
- connecting to a smart device via Wi-Fi or Bluetooth.

Access-Point Mode

An error will occur if the computer's wireless connection is disabled before the camera's. Disable camera's connection first.

FTP Servers: Connecting via Ethernet or Wireless LAN

The camera can connect to FTP servers and upload pictures via existing networks using Wi-Fi (builtin wireless LAN) or a third-party Ethernet cable inserted in the camera's Ethernet connector. The camera can also be connected to FTP servers directly.

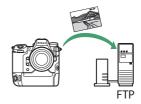

FTP Servers

- Servers can be configured using standard FTP services—including IIS (Internet Information Services)—available with Windows 10 (Enterprise/ Pro/Home).
- Internet FTP connections and connection to FTP servers running thirdparty software are not supported.

Wireless LAN

The camera can connect to FTP servers either by direct wireless link (access-point mode) or via a wireless router on an existing network, including home networks (infrastructure mode).

Direct Wireless Connection (Access-Point Mode)

The camera and FTP server connect via direct wireless link. The camera acts as a wireless LAN access point, letting you connect when working outdoors and in other situations in which the computer is not already



connected to a wireless network and eliminating the need for complicated adjustments to settings.

- Create a host profile using the camera connection wizard.
- Confirm that [OFF] is selected for [Wired LAN] in the network menu.
- 1 Select [Connect to FTP server] in the network menu, then highlight [Network settings] and press ().



2 Highlight [Create profile] and press ⊛.



3 Highlight [Connection wizard] and press ().

The connection wizard will launch.



Manual Configuration

Choose [**Configure manually**] to configure settings manually.



4 Name the new profile.

- To proceed to the next step without changing the default name, press ♥.
- Whatever name you choose will appear in the network menu [Connect to FTP server] > [Network settings] list.



• To rename the profile, press ⊛. For information on text entry, see "Text Entry" (□□64). Press ♥ to proceed after entering a name.

5 Highlight [Direct connection to computer] and press ®.

Connection wizard
Choose an enhold for connecting to the
wireless network.
Search for Wi-Fi network
Direct connection to computer
Connection wizard
Connect to the following access
point.
SSID:
SSID

The camera SSID and encryption key will be displayed.

6 Establish a connection to the camera. Windows:

- Click the wireless LAN icon in the taskbar.
- Select the SSID displayed by the camera in Step 5.
- When prompted to enter the network security key, enter the encryption key displayed by the camera in Step 5. The computer will initiate a connection to the camera.

macOS:

- Click the wireless LAN icon in the menu bar.
- Select the SSID displayed by the camera in Step 5.
- When prompted to enter the network security key, enter the encryption key displayed by the camera in Step 5. The computer will initiate a connection to the camera.



7	Choose the server type. Highlight [FTP] or [SFTP] (secure FTP) and press [®] to display a dialog where you can choose a login method.	Connection wizard Choose the FIP server type. "FIP" is recommended in most situations. FIP SFIP CONvext
8	Log in. Highlight one of the following options	Connection wizard Choose a login method for the FTP server.

8 L

ŀ and press .

Anonymous login Enter user ID **O** Next

Option	Description	
[Anonymous login]	Select this option if the server does not require a user ID or password. This option can only be used with servers that are configured for anonymous login. If login is successful, the camera will prompt you to choose a destination.	
[Enter user ID]	Enter a user ID and password. Press 🛞 to log in when entry is complete. If login is successful, the camera will prompt you to choose a destination.	

V Firewall Settings

TCP ports 21 and 32768 through 61000 are used for [FTP], TCP ports 22 and 32768 through 61000 for [SFTP]. File transfer may be blocked if the server firewall is not configured to allow access to these ports.

9 Choose a destination folder.

Highlight one of the following options and press \circledast .

Connection wizard	5
Choose a destination folder.	
Home folder	
Enter folder name	
	O RNext

Option	Description	
[Home folder]	Select this option to select the server's home folder as the destination for pictures uploaded from the camera. A "setup complete" dialog will be displayed if the operation is successful.	
[Enter folder name]	Enter the destination folder name manually. The folder must already exist on the server. Enter the folder name and path when prompted and press ® to display the "setup complete" dialog.	

10 Check the connection.

When a connection is established, the profile name will be displayed in green in the camera [**Connect to FTP server**] menu.

۵	Connect to FTP server		5
*	Network settings		>
	Options		
۲	WEAN1		
	₿00000 ©00:00′ 00″	2.4GHz	Tal

• If the profile name is not displayed in

green, connect to the camera via the wireless network list on the FTP server.

A wireless connection has now been established between the camera and the FTP server.

Pictures taken with the camera can be uploaded to the FTP server as described in "Uploading Pictures" (\Box 389).

II Connecting in Infrastructure Mode


The camera connects to an FTP server on an existing network (including home networks) via a wireless router.



- Create a host profile using the camera connection wizard.
- Before connecting to a wireless network, confirm that [OFF] is selected for [Wired LAN] in the network menu.

🖉 Infrastructure Mode

Infrastructure mode supports connection to FTP servers on different networks.

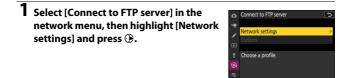

2 Highlight [Create profile] and press ®.



3 Highlight [Connection wizard] and press ().


The connection wizard will launch.

Manual Configuration

Choose [**Configure manually**] to configure settings manually.

4 Name the new profile.

- To proceed to the next step without changing the default name, press ♥.
- Whatever name you choose will appear in the network menu [Connect to FTP server] > [Network settings] list.
- To rename the profile, press [®]. For information on text entry, see "Text Entry" (^[]64). Press [®] to proceed after entering a name.

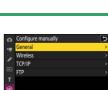



Conne	tion wizard	C
En	ter a name for the network profile.	
	WI AN1	
	II CAN I	
	OK Input	Q OK

Highlight [Search for Wi-Fi network] and press ®.	Connection wizard Choose a method for connecting to the wireless network.
The camera will search for networks currently active in the vicinity and list them by name (SSID).	Search for Wi-Fi network Direct connection to computer @Easy Connect]@3Next]

[Easy Connect]



Option	Description	
[Push-button WPS]	For routers that support push-button WPS. Press the WPS button on the router and then press the camera button to connect.	
[PIN-entry WPS]	The camera will display a PIN. Using a computer, enter the PIN on the router. For more information, see the documentation provided with the router.	

• After connecting, proceed to Step 8.

6 Choose a network.

- Highlight a network SSID and press [∞].
- The band on which each SSID operates is indicated by an icon.
- Encrypted networks are indicated by a fair icon. If the selected network is

encrypted ($\widehat{\mathbf{h}}$), you will be prompted to enter the encryption key. If the network is not encrypted, proceed to Step 8.

• If the desired network is not displayed, press ♥ to search again.

🔽 Hidden SSIDs

Networks with hidden SSIDs are indicated by blank entries in the network list.

- To connect to a network with a hidden SSID, highlight a blank entry and press [®]. Next, press [®]; the camera will prompt you to provide an SSID.


الملك المحالية المحالي محالية المحالية المحا محالية المحالية المحالي





7 Enter the encryption key.

- Press ® and enter the encryption key for the wireless router.
- For more information, see the documentation for the wireless router.
- Press when entry is complete.
- Press [®] again to initiate the connection. A message will be displayed for a few seconds when the connection is established.

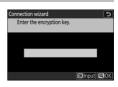



Connection wizard		
Connected.		
SSID:	KRAFFALL	

8 Obtain or select an IP address.

• Highlight one of the following options and press ®.

Choose how the IP addre	ss is obtained.
Obtain automatically	
Enter manually	
	(CTA)

Option	Description
[Obtain automatically]	Select this option if the network is configured to supply the IP address automatically. A "configuration complete" message will be displayed once an IP address has been assigned.
[Enter manually]	 Enter the IP address and sub-net mask manually. Press [®]; you will be prompted to enter the IP address. Rotate the main command dial to highlight segments. Press [®] or [®] to change the highlighted segment and press [®] to save changes. Next, press [®]; a "configuration complete" message will be displayed. Press [®] again to display the sub-net mask. Press [®] or [®] to edit the sub-net mask and press [®]; a "configuration complete" message will be displayed.

• Press ® to proceed when the "configuration complete" message is displayed.

9 Choose the server type.

Highlight [**FTP**] or [**SFTP**] (secure FTP) and press ⁽³⁾ to display a dialog where you can enter the server address.

10 Enter the server address.

- Press ® to enter the server URL or IP address.
- Press 4 when entry is complete.

 Press e again to connect to the FTP server. You will be prompted to choose a login method. Connection wizard
Choose the FIP server type.
'FIP' is recommended in most
situations.
FIP
SETP
(XINext)







11 Log in.

Highlight one of the following options and press \circledast .

Connection wizard Choose a login method for the F	TD
server.	
Anonymous login	
Enter user ID	
	Movt

Option	Description
[Anonymous login]	Select this option if the server does not require a user ID or password. This option can only be used with servers that are configured for anonymous login. If login is successful, the camera will prompt you to choose a destination.
[Enter user ID]	Enter a user ID and password. Press 🛞 to log in when entry is complete. If login is successful, the camera will prompt you to choose a destination.

V Firewall Settings

TCP ports 21 and 32768 through 61000 are used for [**FTP**], TCP ports 22 and 32768 through 61000 for [**SFTP**]. File transfer may be blocked if the server firewall is not configured to allow access to these ports.

12 Choose a destination folder. Highlight one of the following options and press @. Home folder Enter folder name © Choose a destination folder.

Option	Description
[Home folder]	Select this option to select the server's home folder as the destination for pictures uploaded from the camera. A "setup complete" dialog will be displayed if the operation is successful.
[Enter folder name]	Enter the destination folder name manually. The folder must already exist on the server. Enter the folder name and path when prompted and press ® to display the "setup complete" dialog.

13 Check the connection.

When a connection is established, the profile name will be displayed in green in the camera [**Connect to FTP server**] menu.

۵	Connect to FTP server		5
*	Network settings		>
	Options		
۲	WEAN1		
	₿00000 ©00:00′ 00″	2.4GHz	ы

A wireless connection has now been established between the camera and the FTP server.


Pictures taken with the camera can be uploaded to the FTP server as described in "Uploading Pictures" (□ 389).

<u>Ethernet</u>

The camera can connect to FTP servers either directly or via existing networks using a third-party Ethernet cable inserted in the camera's Ethernet connector.

II Connecting an Ethernet Cable

Connect an Ethernet cable to the camera's Ethernet connector. Do not use force or attempt to insert the connectors at an angle. Connect the other end of the cable to the FTP server or a router.

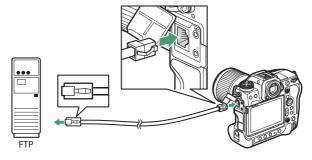

1	Select [ON] for [Wired LAN] in the	۵	NETV
	network menu.	-	Airplane mode
	network menu.		Wired LAN
			Connect to smar
			Connect to come

۵	NETWORK MENU		
-	Airplane mode	(I OFF)	
	Wired LAN	OON	
"	Connect to smart device	0FF	>
	Connect to computer	0FF	
	Connect to FTP server	0FF	
۲	Connect to other cameras	0FF	
₽	USB	MTP/PTP	
	··· · · · · · · · · · · · · · · · · ·	(Committee)	

2 Select [Connect to FTP server] in the network menu, then highlight [Network settings] and press ().



 $\textbf{3} \textbf{ Highlight [Create profile] and press } \circledast.$



4 Highlight [Connection wizard] and press ().

The connection wizard will launch.

Manual Configuration

Choose [**Configure manually**] to configure settings manually.

5 Name the new profile.

- To proceed to the next step without changing the default name, press ♥.
- Whatever name you choose will appear in the network menu [Connect to FTP server] > [Network settings] list.
- To rename the profile, press . For information on text entry, see "Text Entry" (1164). Press ? to proceed after entering a name.







6 Obtain or select an IP address.

• Highlight one of the following options and press ®.

Connection wizard	2
Choose how the IP address is obtained.	
Obtain automatically	
Enter manually	
03	Next

Option	Description
[Obtain automatically]	Select this option if the network is configured to supply the IP address automatically. A "configuration complete" message will be displayed once an IP address has been assigned.
[Enter manually]	 Enter the IP address and sub-net mask manually. Press [®]; you will be prompted to enter the IP address. Rotate the main command dial to highlight segments. Press [®] or [®] to change the highlighted segment and press [®] to save changes. Next, press [®]; a "configuration complete" message will be displayed. Press [®] again to display the sub-net mask. Press [®] or [®] to edit the sub-net mask and press [®]; a "configuration complete" message will be displayed.

• Press ® to proceed when the "configuration complete" message is displayed.

7 Choose the server type.

Highlight [**FTP**] or [**SFTP**] (secure FTP) and press ⁽¹⁾ to display a dialog where you can enter the server address.

8 Enter the server address.

• Press ® to enter the server URL or IP address.

• Press when entry is complete.

 Press [®] again to connect to the FTP server. You will be prompted to choose a login method.









9 Log in. Highlight one of the following options and press ⊛.

Choose a login method for t	he FTP
server.	
Anonymous login	
Anonymous login Enter user ID	

Option	Description
[Anonymous login]	Select this option if the server does not require a user ID or password. This option can only be used with servers that are configured for anonymous login. If login is successful, the camera will prompt you to choose a destination.
[Enter user ID]	Enter a user ID and password. Press 🛞 to log in when entry is complete. If login is successful, the camera will prompt you to choose a destination.

V Firewall Settings

TCP ports 21 and 32768 through 61000 are used for [**FTP**], TCP ports 22 and 32768 through 61000 for [**SFTP**]. File transfer may be blocked if the server firewall is not configured to allow access to these ports.

10 Choose a destination folder.

Highlight one of the following options and press \circledast .

Connection wizard	5
Choose a destination folder.	
Home folder	
Enter folder name	
	O R Next

Option	Description
[Home folder]	Select this option to select the server's home folder as the destination for pictures uploaded from the camera. A "setup complete" dialog will be displayed if the operation is successful.
[Enter folder name]	Enter the destination folder name manually. The folder must already exist on the server. Enter the folder name and path when prompted and press ® to display the "setup complete" dialog.

11 Check the connection.

When a connection is established, the profile name will be displayed in green in the camera [**Connect to FTP server**] menu.

۵	Connect to FTP server	5
•	Network settings	>
/	Options	>
۲	LANI	
۲		
⇒	₩00000 (D00:00' 00"	**

A connection has now been established between the camera and the FTP server.

Uploading Pictures

Pictures can be selected for upload during playback. They can also be uploaded automatically as they are taken.

- Before uploading pictures, connect the camera and FTP server via Ethernet or a wireless network. Connect using a host profile selected via the [Connect to FTP server] > [Network settings] list.
- When a connection is established, the profile name will be displayed in green in the camera [Connect to FTP server] menu.





Caution: Access Point Mode

Select a host profile and enable camera Wi-Fi before connecting.

Selecting Pictures for Upload


1 Press the **▶** button on the camera and select full-frame or thumbnail playback.





3 Highlight [Select for upload (FTP)] and press [®].

 A white "priority upload" icon will appear on the picture. If the camera is currently connected to a network, upload will begin immediately and the icon will turn green.

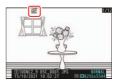

- Otherwise, upload will begin when a connection is established.
- Repeat Steps 2-3 to upload additional pictures.

🔽 Removing Upload Marking

- Repeat Steps 2–3 to remove upload marking from selected pictures.
- To remove upload marking from all pictures, select [Connect to FTP server] > [Options] > [Deselect all?] in the network menu.

Filtering Pictures for Upload

The [**Filtered playback**] item in the playback i menu can be used to display only pictures that meet chosen criteria (\Box 255). The pictures can then all be selected for upload by highlighting [**Select all for upload (FTP)**] in the i menu and pressing \circledast .

Uploading Photos as They Are Taken

To upload new photos as they are taken, select [**ON**] for [**Connect to FTP server**] > [**Options**] > [**Auto upload**] in the network menu.

- Upload begins only after the photo has been recorded to the memory card. Be sure a memory card is inserted in the camera.
- Videos are not uploaded automatically. They must instead be uploaded manually from the playback display.

The Upload Icon

Upload status is indicated by the upload icon.

\star (white): Priority upload

The picture has been manually selected for upload. Pictures marked with this icon will be uploaded before pictures marked

🖍 (white): Upload


The picture has been selected for upload but upload has not yet begun.

🔊 (green): Uploading

Upload in progress.


Upload complete.

۵	Options	C (9
-	Auto upload	OON
	Delete after upload	OFF
"	Upload RAW + JPEG as	RAW+J >
	JPEG+JPEG slot selection	[i] →
	Overwrite if same name	() OFF)
	Protect if marked for upload	OFF
	Upload marking	OFF

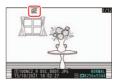

The [Connect to FTP Server] Upload Status Display

The [Connect to FTP server] display shows the following:

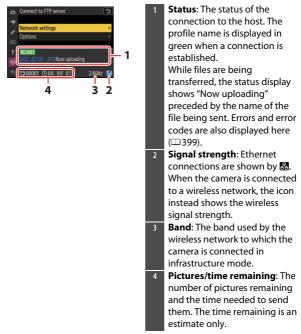

Loss of Signal

Wireless transmission may be interrupted if the signal is lost. Upload of pictures with upload marking can be resumed by turning the camera off and then on again once the signal has been re-established.

🔽 Caution: During Upload

Do not remove the memory card or disconnect the Ethernet cable during upload.

Caution: Uploading Protected Pictures via FTP

The copies on the FTP server will not be protected even if the originals are. Markings can be added using ratings ($\square 251$).

🔽 Voice Memos

Voice memos will be included when the associated pictures are transmitted. They cannot, however, be uploaded separately.

🔽 Turning the Camera Off

The camera saves transfer marking when turned off and resumes upload when next turned on.

Connection Status

Connection status is shown by the camera network indicator.



Network indicator	Status
• (off)	No connection.
○ (green)	Waiting to connect.
ి: (flashes green)	Connected.
్లి: (flashes amber)	Error.

Ending the Connection to the FTP Server

You can end the connection by:

- turning the camera off,
- selecting [End current connection] for [Connect to FTP server] > [Network settings] in the network menu, or
- connecting to a smart device via Wi-Fi or Bluetooth.

Access-Point Mode

An error will occur if the FTP server's wireless connection is disabled before the camera's. Disable camera's connection first.

Troubleshooting Wireless LAN and Ethernet Connections

Refer to this section for information on errors involving wireless LAN and Ethernet connections.

 For information on the Wireless Transmitter Utility, see the utility's online help.

Problems and Solutions

Solutions to some common issues are listed below.

Problem	Solution
 The camera displays a wireless error. The camera displays a TCP/IP error. The camera displays an FTP error. 	Connection settings require adjustment. Check settings for the wireless router, FTP server, or host computer and adjust camera settings appropriately (¹²³ 29, 367).
	Check the error code, if any. For more information, see "Error Codes" (@399).
"Connecting to computer" does not clear from the camera display.	Check firewall settings (印355, 371).
The camera displays the message, "Ethernet cable is not connected".	Connect an Ethernet cable or select [OFF] for [Wired LAN] (口346, 382, 756).

Problem	Solution
The camera displays a "no memory card" error.	The memory card is inserted incorrectly or not at all. Check that card is inserted correctly (印81).
Upload is interrupted and fails to resume.	Upload will resume if the camera is turned off and then on again (印359).
The connection is unreliable.	If the camera is connected in infrastructure mode, check that the router is set to a channel between 1 and 8 (^{CD} 760, 765).

Error Codes

The following messages and error codes may be displayed if an error occurs while the camera is connected to an FTP server via Ethernet or wireless LAN.

• [Wireless Error.]

Error code	Solution			
Err. 11	Confirm that the device to which you are attempting to connect is on.			
	Check the SSID (^[1] 765).			
Err. 12	Confirm that you are using the correct password for the selected SSID.			
	Confirm that you are using the correct authentication method (^{CD} 765).			
Err. 13	Confirm that the device to which you are attempting to connect is on.			
	Turn the camera off and then on again.			
Err. 1F	Turn the camera off and then on again.			

• [TCP/IP Error.]

Error code	Solution			
Err. 21	Check that the TCP/IP address and sub-net mask are correct (\$\Phi 765).			
Err. 22	Duplicate TCP/IP address. Choose a different address (CP 765).			

• [PTP/IP Error.]

Error code	Solution
Err. 41	Turn the camera off and then on again.

• [FTP Error.]

Error code	Solution
Err. 31	Check that the FTP server address is correct (^[] 765).
Err. 32	Check that the login name and password are correct (\$\mu765).
Err. 34	Check that the destination folder name is correct (\$\Pi765).
Err. 35	Confirm that the destination folder is not write- protected.
Err. 36	Check the DNS (印765).
Err. 37	Check firewall settings (¹¹ 371).
LI1. 57	Check PASV mode settings (¹¹⁷⁶⁵).
Err. 3F	Turn the camera off and then on again.

Connecting to Other Cameras

What Inter-camera Connections Can Do for You


Camera-Based Remote Photography (Synchronized Release)

A master camera can be used to release the shutters on up to ten remote cameras in the same group (\Box 402).



Clock Synchronization (Synchronize Date and Time)

Synchronize the clocks on multiple cameras via a network (\Box 421).

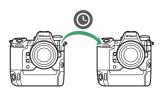


Synchronized Release

Configuring and Using Synchronized Release

Follow the steps below to create host profiles for synchronized release. Each camera saves the pictures it takes to its own memory card. Repeat the process to create identical profiles for each camera.

Wireless LAN

To create host profiles when connecting via wireless LAN:

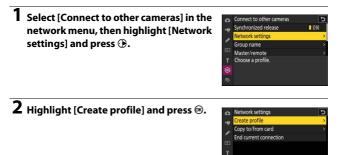

3 Name the new profile.

- To proceed to the next step without changing the default name, press \mathfrak{P} .
- Whatever name you choose will appear in the network menu [Connect to other cameras] > [Network settings] list.



• To rename the profile, press [®]. For information on text entry, see "Text Entry" (□□64). Press [®] to proceed after entering a name.

Highlight [Search for Wi-Fi network]	Connection wizard
and press 🖲.	Choose a method for connecting to the wireless network.
The camera will search for networks	
currently active in the vicinity and list	Search for Wi-Fi network
them by name (SSID).	
	Casy Connect OKN

[Easy Connect]

Δ



Option	Description			
[Push-button WPS]	For routers that support push-button WPS. Press the WPS button on the router and then press the camera button to connect.			
[PIN-entry WPS]	The camera will display a PIN. Using a computer, enter the PIN on the router. For more information, see the documentation provided with the router.			

• After connecting, proceed to Step 7.

5 Choose a network.

- Highlight a network SSID and press \circledast .
- The band on which each SSID operates is indicated by an icon.
- Encrypted networks are indicated by a **a** icon. If the selected network is

encrypted ($\mathbf{\hat{h}}$), you will be prompted to enter the encryption key. If the network is not encrypted, proceed to Step 7.

• If the desired network is not displayed, press ♥ to search again.

🔽 Hidden SSIDs

Networks with hidden SSIDs are indicated by blank entries in the network list.

- To connect to a network with a hidden SSID, highlight a blank entry and press ®. Next, press ®; the camera will prompt you to provide an SSID.





6 Enter the encryption key.

- Press ® and enter the encryption key for the wireless router.
- For more information on the wireless router encryption key, see the documentation for the wireless router.
- Press when entry is complete.
- Press [®] again to initiate the connection. A message will be displayed for a few seconds when the connection is established.



Connection wiza	ard
Connected.	
SSID:	KRWERLE



7 Obtain or select an IP address.

• Highlight one of the following options and press [®].

Connection wizard Choose how the IP address is	obtained.
Obtain automatically	
Enter manually	

Option	Description
[Obtain automatically]	 Select this option if the network is configured to supply the IP address automatically. A "configuration complete" message will be displayed once an IP address has been assigned. It is recommended that you note the remote camera IP address, as you will need it in subsequent steps.
[Enter manually]	 Enter the IP address and sub-net mask manually. Press [®]; you will be prompted to enter the IP address. Rotate the main command dial to highlight segments. Press [®] or [®] to change the highlighted segment and press [®] to save changes. Next, press [®]; a "configuration complete" message will be displayed. Press [®] again to display the sub-net mask. Press [®] or [®] to edit the sub-net mask and press [®]; a "configuration complete" message will be displayed.

- Press ® to proceed when the "configuration complete" message is displayed.
- The profile name is displayed when a connection is established.

8 Highlight [Group name], press (), and enter a group name.

Enter a group name for the synchronized cameras. Group names can be up to eight characters long.

• All master and remote cameras on the network must be in the same group.

$\textbf{9} \textbf{ Highlight [Master/remote] and press } \textcircled{\textbf{B}}.$

Choose a role for each camera from "master" and "remote".

• [Master camera]: Pressing the shutterrelease button on the master camera releases the shutters on the remote

cameras. Each group can have only one master. If the group has multiple master cameras, only the first to connect to the network will actually serve in that capacity.

• [Remote camera]: The shutters on the remote cameras are synchronized with the shutter on the master camera.

10 Repeat Steps 1 through 9 for the remaining cameras.

When configuring remote cameras, be sure to select [Remote camera] in Step 9.





11 On the master camera, highlight [Remote camera list] and press ().


Cameras assigned the remote camera role in Step 9 are added to the master camera's remote camera list. The master camera can store information for up to 10 remote cameras in slots [01] through [10].

12 Highlight the desired slot and press 🕃.

Remote camera options will be displayed.

13 Highlight [Address] and press 🕑.

You will be prompted to enter an IP address.

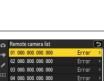

000. 000. 000. 000

07 000 000 000 000

Erro

Error

Error






14 Enter the remote camera IP address.

Enter the remote camera IP address you noted in Step 7.

- Rotate the main command dial to highlight segments.
- Press ④ or ④ to change the highlighted segment and press ⊛ to proceed.

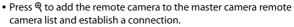

Viewing Remote Camera IP Addresses

To view a remote camera's IP address, select [Connect to other cameras] > [Network settings] in the camera's network menu, highlight a synchronized release host profile, press (), and select [TCP/IP].

Edit		C
TCP/IP		
Obtain a	utomatically	ON
Address		



15 Add the remaining remote cameras.

- When connecting to wireless networks, the cameras will display the band used by the selected SSID.
- The master camera shows the number of cameras in the group currently connected or not connected.



16 Take pictures.

• Pressing the shutter-release button on the master camera releases the shutters on the remote cameras.



• Note that the standby timers will not expire automatically when the cameras are in synchronized release mode.

Ethernet

Follow the steps below to create host profiles for Ethernet connections. Before proceeding, connect an Ethernet cable to the camera's Ethernet connector. Do not use force or attempt to insert the connectors at an angle. Connect the other end of the cable to a router.

Select [ON] for [Wired LAN] in the	٥	NETWORK MENU	
network menu.		Airplane mode	OFF
network menu.		Wired LAN	OON
	1	Connect to smart device	0FF ≻
	Þ	Connect to computer	0FF >
	Y	Connect to FTP server	0FF >
	۲	Connect to other cameras	0FF >
	=	USB	MTP/PTP >
2 Select [Connect to other cameras] in the		Connect to other comerce	5
2 Select [Connect to other cameras] in the network menu, then highlight [Network		Connect to other cameras Synchronized release Network settings	CON
network menu, then highlight [Network		Synchronized release	
		Synchronized release Network settings	
network menu, then highlight [Network	·*	Synchronized release Network settings Group name	
network menu, then highlight [Network	·*	Synchronized release Network settings Group name Master/remote	

3 Highlight [Create profile] and press \circledast .



4 Name the new profile.

- To display IP address options without changing the default name, press ♥.
- Whatever name you choose will appear in the network menu [Connect to other cameras] > [Network settings] list.



• To rename the profile, press [®]. For information on text entry, see "Text Entry" (□□64). Press [®] to proceed after entering a name.

5 Obtain or select an IP address.

• Highlight one of the following options and press ®.

Connection wizard	5
Choose how the IP address is obtained.	
Obtain automatically	
Enter manually	
OK	Next

Option	Description
[Obtain automatically]	 Select this option if the network is configured to supply the IP address automatically. A "configuration complete" message will be displayed once an IP address has been assigned. It is recommended that you note the remote camera IP address, as you will need it in subsequent steps.
[Enter manually]	 Enter the IP address and sub-net mask manually. Press [®]; you will be prompted to enter the IP address. Rotate the main command dial to highlight segments. Press [®] or [®] to change the highlighted segment and press [®] to save changes. Next, press [®]; a "configuration complete" message will be displayed. Press [®] again to display the sub-net mask. Press [®] or [®] to edit the sub-net mask and press [®]; a "configuration complete" message will be displayed.

- Press ® to proceed when the "configuration complete" message is displayed.
- The profile name is displayed when a connection is established.

6 Highlight [Group name], press (), and enter a group name.

Enter a group name for the synchronized cameras. Group names can be up to eight characters long.

• All master and remote cameras on the network must all be in the same group.

7 Highlight [Master/remote] and press (). Choose a role for each camera from "master" and "remote".

• [Master camera]: Pressing the shutterrelease button on the master camera releases the shutters on the remote

cameras. Each group can have only one master. If the group has multiple master cameras, only the first to connect to the network will actually serve in that capacity.

• [Remote camera]: The shutters on the remote cameras are synchronized with the shutter on the master camera.

8 Repeat Steps 1 through 7 for the remaining cameras. When configuring remote cameras, be sure to select [Remote camera] in Step 7.





9 On the ma [Remote c

Cameras assigne in Step 7 are added to the master camera's remote camera list. The master camera can store information for up to 10 remote cameras in slots [01] through [10].


10 Highlight the desired slot and press \circledast .

Remote camera options will be displayed.

11 Highlight [Address] and press ().

You will be prompted to enter an IP address.

aster camera, highlight	۵	Co
camera list] and press 🕒.	0 * /	G
ssigned the remote camera role	1	R

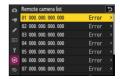





12 Enter the remote camera IP address.

Enter the IP address you noted in Step 5.

- Rotate the main command dial to highlight segments.
- Press ④ or ④ to change the highlighted segment and press ⑧ to proceed.
- Press ${\mathfrak R}$ to add the remote camera to the master camera remote camera list and establish a connection.

Viewing Remote Camera IP Addresses

To view a remote camera's IP address, select [Connect to other cameras] > [Network settings] in the camera's network menu, highlight a synchronized release host profile, press ③, and select [TCP/IP].






13 Add the remaining remote cameras.

The master camera shows the number of cameras in the group currently connected or not connected.



14 Take pictures.

• Pressing the shutter-release button on the master camera releases the shutters on the remote cameras.

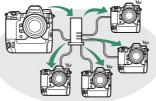

• Note that the standby timers will not expire automatically when the cameras are in synchronized release mode.

Suspending Synchronized Release

To temporarily disable synchronized release without ending the camera's connection to the network, select [**OFF**] for [**Connect to other cameras**] > [**Synchronized release**] in the network menu.

Viewing Remote Camera Status

To view remote camera status, highlight [**Remote camera list**] on the master camera and press **()**.

- Remote cameras are identified by IP address.
- Remote camera status is displayed as follows:
 - [Connected]: Normal connection.
 - [**Busy**]: The camera is being controlled from another master camera.
- ∩
 Remote carrera list
 □

 01
 €
 Connected >

 03
 000000
 0000

 04
 0000000
 Error >

 04
 0000000
 Error >

 05
 06000000
 Error >

 04
 00000000
 Error >

 05
 6600000000000
 Error >

 05
 66000000000000
 Error >

 10
 66000000000000
 Error >

 10
 670000000000
 Error >
- [**Error**]: The remote camera is off or its standby timer has expired. A third possibility is that the group name is incorrect.
- [OFF]: [OFF] is selected for [Synchronized release] on the remote camera or a remote camera has yet to be assigned to the slot.
- Highlighting a remote camera with the [**Connected**] label and pressing displays the number of pictures awaiting upload from the camera via FTP, FTP connection status, the battery level, and the number of exposures remaining.
- The entries for the remote cameras previously used for synchronized release will show the time of the most recent shot.

- To edit remote camera settings from the master camera, highlight the camera in the remote camera list and press ③.
 - To temporarily suspend the connection to the selected camera, select [OFF] for [Connect to remote camera].



- To temporarily suspend synchronized release on the selected camera, select [**OFF**] for [**Synchronized release**].
- If desired, you can then edit the camera's IP address by highlighting
 [Address] and pressing ③. To reconnect, select [ON] for [Connect to
 remote camera]. No connection will be established if no remote camera
 exists at the specified address.

Synchronizing Camera Clocks

When the cameras are connected to the network using [**Connect to other cameras**] in the network menu, the clocks on all cameras in the current group connected can be set to the time and date reported by the master camera. Synchronization applies to all options in the setup menu [**Time zone and date**] display.

1 Connect the cameras to the network using [Connect to other cameras] > [Network settings] in the network menu.

For more information, see "Synchronized Release" (22402).

2 On the master camera, select [Connect to other cameras], then highlight [Synchronize date and time] and press ().

 Master camera clock settings will be displayed.



- [Synchronize date and time] is not available on the remote cameras.
- [Synchronize date and time] will not be available if no camera is connected to the network.

3 Press ∞.

- The clocks on the remote cameras will be set to the date and time reported by the master camera.
- A message will be displayed when the process is complete.
- Press
 again to return to the [Connect to other cameras] display.

Flash Photography

"On-Camera" Versus "Remote"

You can take pictures using an optional flash unit mounted on the camera accessory shoe or one or more remote flash units.

• When using a flash, select [OFF] for [Silent mode] in the setup menu.

Camera-Mounted Flash Units

Take pictures using a flash unit mounted on the camera. See the following pages for more information (\Box 423).



Remote Flash Photography

Take pictures with one or more remote flash units using wireless flash control (Advanced Wireless Lighting, or AWL). For more information, see "Remote Flash Photography" (CP 437).



Using an On-Camera Flash

1 Mount a flash unit on the camera accessory shoe.

See the documentation supplied with each Speedlight for information on mounting the unit on the camera.



2 Turn on the camera and flash unit.

The flash will begin charging; the flash-ready indicator (**4**) will appear in the shooting display when charging is complete.

- ${f 3}$ Choose the flash control mode (${f m}$ 426) and flash mode (${f m}$ 429).
- **4** Adjust shutter speed and aperture.
- **5** Take pictures.

🔽 Shutter Speed

Shooting mode	Shutter speed
Ρ, Α	Set automatically by camera $(1/_{200} \text{ s} - 1/_{60} \text{ s})^*$
S	¹ / ₂₀₀ s-30 s
м	1/ ₂₀₀ s-30 s, Bulb , Time

Shutter speed can be set as follows when an optional flash unit is used:

* Shutter speed may be set as slow as 30 s if slow sync, slow rear-curtain sync, or slow sync with red-eye reduction is selected for flash mode.

Caution: Third-Party Flash Units

The camera cannot be used with flash units that would apply voltages over 250 V to the camera's X contacts or short-circuit contacts on the accessory shoe. Use of such flash units could not only interfere with normal operation of the camera but also damage the flash sync circuits of the camera and/or flash.

🔽 i-TTL Flash Control

When an optional flash unit that supports the Nikon Creative Lighting System is attached and set to TTL, the camera uses monitor pre-flashes for balanced or standard "i-TTL fill-flash" flash control. i-TTL flash control is not available with flash units that do not support the Nikon Creative Lighting System. The camera supports the following types of i-TTL flash control:

Flash control	Description
i-TTL balanced fill-flash	The camera uses "i-TTL balanced fill-flash" flash control for a natural balance between the main subject and ambient background lighting. After the shutter-release button is pressed and immediately before the main flash, the flash unit emits a series of monitor pre-flashes which the camera uses to optimize flash output for a balance between the main subject and ambient background lighting.
Standard i-TTL fill-flash	Flash output is adjusted to bring lighting in the frame to a standard level; the brightness of the background is not taken into account. Recommended for shots in which the main subject is emphasized at the expense of background details, or when exposure compensation is used.

 Standard i-TTL fill-flash is activated automatically when [Spot metering] is selected.


🖉 The Sync Terminal

A sync cable can be connected to the sync terminal (which features a JIS-B locking nut) as required. Do not connect another flash unit via a sync cable when performing rear-curtain sync flash photography with a flash unit mounted on the camera accessory shoe.



Flash Control Mode

When a flash unit that supports unified flash control (an SB-5000, SB-500, SB-400, or SB-300; \Box 428) is mounted on the camera, the flash control mode, flash level, and other flash settings can be adjusted using the [**Flash control**] > [**Flash control mode**] item in the photo shooting menu. The flash control

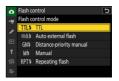

modes available vary with the flash used. The options available in the flash control display vary with the option selected for [**Flash control mode**].

- Settings for flash units other than the SB-5000, SB-500, SB-400, and SB-300 can only be adjusted using flash unit controls.
- Settings for an SB-5000 mounted on the accessory shoe can also be adjusted using the controls on the flash unit.

Option	Description	
[TTL]	 Flash output is adjusted automatically in response to shooting conditions. Output can be adjusted using [Flash compensation (TTL)]. 	


Option	Description
[Auto external flash]	 Light from the flash is reflected from the subject to an auto external flash sensor and flash output adjusted automatically. Output can be adjusted using [Auto external flash compensation]. Auto external flash supports "auto aperture" ((A) and "non-TTL auto" (A) modes. For details, see the documentation provided with the flash unit.
[Distance- priority manual]	 Choose the distance to the subject; flash output will be adjusted automatically. The distance to the subject is selected using [Distance-priority options] > [Distance], while flash output can be adjusted using [Flash compensation].
[Manual]	 Choose the flash level manually. Flash output is selected using [Manual output amount].
[Repeating flash]	 The flash fires repeatedly while the shutter is open, producing a multiple-exposure effect. Use [Repeating flash] > [Output] to adjust flash output and [Times] to choose the number of times the unit fires. [Frequency] controls how often the unit fires per second, measured in Hz. The maximum number of times the flash will fire varies with [Output] and [Frequency]. For details, see the documentation provided with the flash unit.

🔽 Unified Flash Control

Unified flash control allows the camera and flash unit to share settings. Changes to flash settings made with either the camera or flash unit are reflected on both devices, as are changes made using optional Camera Control Pro 2 software. The flash unit must support unified flash control.

Flash Modes

To choose the flash mode, hold the **\$** button and rotate the main command dial.

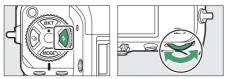

• The options available vary with the shooting mode.

	Option	Description	Available in
¥	[Fill flash] (front-curtain sync)	This mode is recommended in most situations. In modes P and A , shutter speed will automatically be set to values between $1/_{200}$ s (or $1/_{8000}$ s with auto FP high-speed sync) and $1/_{60}$ s.	P, S, A, M

	Option	Description	Available in
\$⊚	[Red-eye reduction]	 Use for portraits. The flash fires before the photograph is taken, reducing "red-eye". A flash unit with red-eye reduction is required. The desired results may not be achieved if the subject or camera moves before the shutter is released (this setting is not recommended with moving subjects or in other situations requiring a quick shutter response). 	P, S, A, M
🕏 SLOW	[Slow sync]	 As for "fill flash", except that shutter speed slows automatically to capture background lighting at night or under low light. Note that photos may be prone to blurring due to camera shake at slow shutter speeds. Use of a tripod is recommended. 	P, A
ţ⊗srow	[Slow sync + red-eye] (red- eye reduction with slow sync)	Use to include background lighting in portraits. Red-eye reduction is combined with slow shutter speeds to capture background lighting at night or under low light. • Note that photos may be prone to blurring due to camera shake at slow shutter speeds. • Use of a tripod is recommended.	P, A

	Option	Description	Available in
🗲 REAR	[Rear-curtain sync]	 The flash fires just before the shutter closes, creating the effect of a stream of light behind moving light sources. Selecting mode P or A after choosing this option sets the flash mode to slow sync. Note that photos may be prone to blurring due to camera shake at slow shutter speeds. Use of a tripod is recommended. 	P, S, A, M
۲	[Flash off]	The flash does not fire.	P, S, A, M

🔽 Studio Strobe Lighting

Rear-curtain sync may not correctly synchronize with studio flash systems.

Flash Compensation

Flash compensation is used to deliberately alter flash output, for example in order to change the brightness of the subject relative to the background. Flash output can be increased to make the main subject appear brighter, reduced to prevent glare, or otherwise fine-tuned to produce the desired result.

Adjusting Flash Compensation


Hold the **4** button and rotate the sub-command dial.





- Choose from values of from -3 to +1 EV.
- At default settings, changes to flash output are made in increments of ¹/₃ EV. The size of the increment can be selected using Custom Setting b2 [**EV steps for exposure cntrl**].

- In general, choose positive values for brighter lighting, negative values to ensure that the subject is not too brightly lit.
- At values other than ±0.0, a 22 icon will appear in the shooting display and the control panel.
- Flash compensation can be viewed in the shooting display and control panel by pressing the **\$** button.

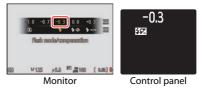

- Normal flash output can be restored by setting flash compensation to ± 0.0 . Flash compensation is not reset when the camera is turned off.

FV Lock

This feature is used to lock flash output for optional CLS-compatible flash units, letting you take multiple photos or recompose shots without changing the flash level. Your subject need not be in the center of the frame, giving you more freedom when composing shots.

- Flash output is adjusted automatically for any changes in ISO sensitivity and aperture.
 - 1 Assign [FV lock] to a control using Custom Setting f2 [Custom controls (shooting)].




2 Mount a flash unit that supports FV lock on the camera accessory shoe.

3 Turn the flash unit on and choose a flash control mode of TTL or monitor pre-flash (SA or A.

- If you are using an SB-5000, SB-500, SB-400, or SB-300 mounted on the camera accessory shoe, choose [TTL] or [Auto external flash] for [Flash control] > [Flash control mode].
- For information on other flash units, see the documentation provided with the unit.

4 Focus.

Position the subject in the center of the frame and press the shutterrelease button halfway to focus.

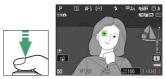

5 Lock flash level.

- After confirming that the flash-ready indicator (4) appears in the shooting display, press the [FV lock] control; the flash unit will emit a monitor pre-flash to determine the appropriate flash level.
- Flash output will lock and an FV lock icon (
) will appear in the shooting display.

6 Recompose the shot.





7 Press the shutter-release button the rest of the way down to shoot.

If desired, additional pictures can be taken without releasing FV lock. Repeat Steps 6 to 7 to take additional shots.



8 Release FV lock.

Press the [FV lock] control to release FV lock and confirm that the FV lock icon (121) is no longer displayed in the shooting display.

Remote Flash Photography

What Is Remote Flash Photography?

Take pictures with one or more remote flash units using wireless flash control (Advanced Wireless Lighting, or AWL). For information on using a flash unit mounted on the camera accessory shoe, see "Flash Photography" (□422).

Throughout this chapter, operations involving an accessory connected to the camera are indicated by \bigcirc , operations involving remote flash units by \blacksquare . For more information on using remote flash units (\blacksquare), see the documentation provided with the flash unit.

Using Remote Flash Units

Remote flash units can be controlled via:

• radio signals * (🖽 439),

- optical signals from a flash unit mounted on the camera accessory shoe (2453), or
- radio signals, with additional lighting provided by a shoe-mounted flash unit * (\$\pi 452\$).
- * Radio flash control is available only when a WR-R11a or WR-R10 is connected to the camera.







Radio AWL

Remote flash control provided via radio signals from a WR-R11a or WR-R10 connected to the camera is termed "radio Advanced Wireless Lighting", or "radio AWL". Radio AWL is available with SB-5000 flash units.



Establishing a Wireless Connection

Before using radio AWL, establish a wireless connection between the WR-R11a or WR-R10 and the remote flash units.

🔽 The WR-R10 Wireless Remote Controller

- A WR-A10 adapter is required when using the WR-R10.
- Be sure to update the firmware for the optional WR-R10 wireless remote controller to version 3.0 or later before using radio AWL. Information on performing firmware updates is available via the Nikon website for your country or region.

1 🗅: Connect the WR-R11a/WR-R10.

For more information, see the documentation provided with the WR-R11a/WR-R10.

2 ca: Select [Radio AWL] for [Flash control] > [Wireless flash options] in the photo shooting menu.

3 choose a channel for the WR-R11a/ WR-R10.

Set the WR-R11a/WR-R10 channel selector to the desired channel.





4 : Choose a link mode for the WR-R11a/WR-R10.

Select [Wireless remote (WR) options] > [Link mode] in the camera setup menu and choose from the following options:



Option	Description
[Pairing]	 The camera connects only to devices with which it has previously been paired. As camera will not communicate with devices with which it has not been paired, this option can be used to prevent signal interference from other devices in the vicinity. Given that each device must be paired separately, however, PIN is recommended when connecting to a large number of devices.
[PIN]	 Communication is shared among all devices with the same four-digit PIN. This option is a good choice for photography featuring a large number of remote devices. If there are multiple cameras present that share the same PIN, the flash units will be under the sole control of the camera that connects first, preventing all other cameras from connecting (the LEDs on the WR-R11a/WR-R10 units connected to the affected cameras will blink).

5 : Establish a wireless connection between the WR-R11a/ WR-R10 and the remote flash units.

- Set the remote units to radio AWL remote mode.
- Set the remote units to the channel you selected for the WR-R11a/ $\rm WR-R10$ in Step 3.
- Pair each of the remote units with the WR-R11a/WR-R10 according to the option selected in Step 4:
 - [Pairing]: Initiate pairing on the remote unit and press the WR-R11a/WR-R10 pairing button. Pairing is complete when the LINK lamps on the WR-R11a/WR-R10 and flash unit flash orange and green. Once a connection is established, the LINK lamp on the remote flash unit will light green.
 - [PIN]: Use the controls on the remote flash unit to enter the PIN you selected in the previous step. Pairing begins when the PIN is entered. Once a connection is established, the LINK lamp on the remote flash unit will light green.

6 •: Repeat Step 5 for the remaining remote units.

7 : Confirm that the flash-ready lights for all flash units are lit.

In radio AWL, the flash-ready indicator will light in the camera shooting display when all flash units are ready.

🔽 Listing Remote Flash Units

To view the flash units currently controlled using radio AWL, select [Flash control] > [Radio remote flash info] in the camera photo shooting menu.

• The identifier (remote flash unit name) for each unit can be changed using flash unit controls.



Reconnecting

As long as the channel, link mode, and other settings remain the same, the WR-R11a/WR-R10 will automatically connect to previously paired flash units when remote mode is selected on the flash unit, and Steps 3–6 can be omitted. The flash unit LINK lamp lights green when a connection is established.


Remote Flash Photography

Settings are adjusted using [**Flash control**] > [**Remote flash control**] in the photo shooting menu. Choose a remote flash control mode and take pictures as described below.



Group Flash

Select this item if you want to adjust settings separately for the flash units in each group.

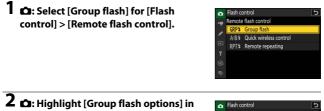

the [Flash control] display and press ().



3 choose a flash control mode and flash level.

• Choose a flash control mode and flash level for the flash units in each group.



• The following options are available:

Option	Description	
TTL	i-TTL flash control.	
⊗A	Auto aperture. Available only with compatible flash units.	
М	Choose the flash level manually.	
(off)	The remote units do not fire. [Comp.] cannot be adjusted.	

4 : Group the remote flash units.

- Choose a group (A–F) for each of the remote flash units.
- The master flash can control up to 18 flash units in any combination.

5 🗅/¶: Compose the shot and arrange the flash units.

- See the documentation provided with the flash units for more information.
- Test-fire the units and confirm that they are functioning normally. To test-fire the units, use the [Test flash] item in the *i* menu, which can be added to the menu using Custom Setting f1 [Customize B] menu].

6 🗅: Take the photograph.


🖉 Flash Info

Group flash options can be viewed using the [Flash info] item in the *i* menu, which can be added to the menu using Custom Setting f1 [Customize **1** menu].



Quick Wireless Control

Select this item to control the relative balance between the remote flash units in groups A and B and adjust flash output for group C. Output for group C is adjusted manually.

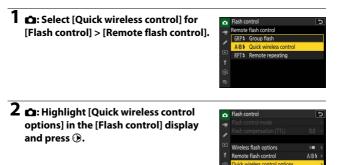

Radio remote flash info

• Choose the balance between groups A and B.

• Adjust flash compensation for groups A and B.





• Adjust settings for group C:

- Select [**M**] to enable or [--] to disable the units in group C.
- When [**M**] is selected, the units in group C will fire at the chosen output.



4 : Group the remote flash units.

- Choose a group (A, B, or C).
- The master flash can control up to 18 flash units in any combination.

5 🗗 🖣: Compose the shot and arrange the flash units.

- See the documentation provided with the flash units for more information.
- Test-fire the units and confirm that they are functioning normally. To test-fire the units, use the [Test flash] item in the *i* menu, which can be added to the menu using Custom Setting f1 [Customize B menu].

6 🗅: Take the photograph.


🖉 Flash Info

Quick wireless control settings can be viewed using the [**Flash info**] item in the *i* menu, which can be added to the menu using Custom Setting f1 [**Customize B menu**].



Remote Repeating

The flash units fire repeatedly while the shutter is open, producing a multiple-exposure effect.

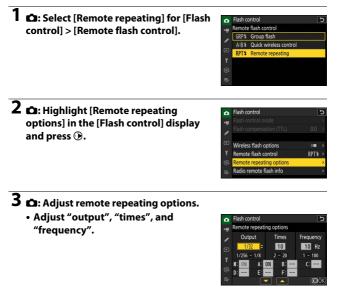

- Enable or disable selected groups.
 - Select [**ON**] to enable or [--] to disable the selected group.



4 : Group the remote flash units.

- Choose a group (A–F) for each of the remote flash units.
- The master flash can control up to 18 flash units in any combination.

5 🗗 🖣: Compose the shot and arrange the flash units.

- See the documentation provided with the flash units for more information.
- Test-fire the units and confirm that they are functioning normally. To test-fire the units, use the [Test flash] item in the *i* menu, which can be added to the menu using Custom Setting f1 [Customize B menu].

6 🗅: Take the photograph.

🖉 Flash Info

Remote repeating options can be viewed using the [**Flash info**] item in the *i* menu, which can be added to the menu using Custom Setting f1 [**Customize II menu**].



Adding a Shoe-Mounted Flash Unit

Radio-controlled flash units (\Box 439) can be combined with any of the following flash units mounted on the camera accessory shoe:

• SB-5000: Before attaching the flash unit, set it to radio-controlled master flash mode (a �(@ icon will appear at the top left corner of the display)



and choose group or remote-repeating flash control. Once the unit is attached, settings can be adjusted from the camera menus or using the controls on the SB-5000. In the case of the camera menus, use the options listed under [**Group flash options**] > [**Master flash**] or under [**M**] in the [**Remote repeating options**] display.

- SB-910, SB-900, SB-800, SB-700, SB-600: Configure the flash for standalone use. Use the controls on the flash unit to adjust flash settings.
- SB-500, SB-400, SB-300: Mount the unit on the camera. Adjust settings using the [Group flash options] > [Master flash] item in the camera menus.

Optical AWL

Remote flash units can be controlled via optical signals from an optional flash unit mounted on the camera accessory shoe and functioning as a master flash (optical AWL). For information on compatible flash units, see "Features Available with CLS-Compatible Flash Units" (CD816).



- If the flash unit in question is an SB-5000 or SB-500, settings can be adjusted from the camera. For more information, see "Using Optical AWL with the SB-5000 or SB-500" (C 454). See the documentation provided with the flash units for more information.
- Settings for other flash units must be adjusted using flash unit controls. For more information, see the documentation provided with the flash unit in question.

Using Optical AWL with the SB-5000 or SB-500

Mount the flash unit on the camera accessory shoe. Select [**Optical AWL**] for [**Flash control**] > [**Wireless flash options**] in the photo shooting menu and choose a remote flash control mode (the SB-500 supports only [**Group flash**]). Choose a remote flash control mode and take pictures as described below.



🔽 The SB-5000

When an SB-5000 is mounted on the camera accessory shoe, [Flash control] settings can also be changed using the controls on the flash unit.

Group Flash

Select this item if you want to adjust settings separately for the flash units in each group.

1 C: Select [Group flash] for [Flash control] > [Remote flash control].



2 **C**: Highlight [Group flash options] in the [Flash control] display and press ().



3 (: Adjust flash output and choose the channel and flash control mode.

• Choose the flash control mode and flash level for the master flash and the remote flash units in each group.



• The following options are available:

Option	Description
TTL	i-TTL flash control.
⊗A	Auto aperture. Available only with compatible flash units.
м	Choose the flash level manually.
 (off)	The remote units do not fire. [Comp.] cannot be adjusted.

- For [Channel], choose the channel (1–4) the master flash will use for optical remote flash control.
- If the remote flash units include an SB-500, you must choose Channel [3].

۵	Flash control		<u>+</u>
-88	Group flash op	tions	
Ĵ	*	Mode	Comp.
	Group B	> M	1/4
	Group C	>	
	Channel	> <mark>3</mark> ≎	
		▼	OKO

4 🗨: Choose a channel for the remote flash units.

Set the remote flash units to the channel selected for [**Channel**] in Step 3.

5 : Group the remote flash units.

- Choose a group (A, B, or C).
- If you are using an SB-500 as the master flash, choose from groups A and B.
- There is no limit on the number of remote flash units that may be used. The practical maximum, however, is three per group, as the light emitted by the remote flash units will interfere with performance if more flash units are used.

6 🗗/=: Compose the shot and arrange the flash units.

- See the documentation provided with the flash units for more information.
- Test-fire the units and confirm that they are functioning normally. To test-fire the units, use the [Test flash] item in the *i* menu, which can be added to the menu using Custom Setting f1 [Customize B menu].

7 D/R: Take the photograph after confirming that the flash-ready lights for all flash units are lit.


🖉 Flash Info

Group flash options can be viewed using the [Flash info] item in the *i* menu, which can be added to the menu using Custom Setting f1 [Customize D menu].



Quick Wireless Control (SB-5000 Only)

Select this item to control the relative balance between the remote flash units in groups A and B and adjust flash output for group C. Output for group C is adjusted manually.

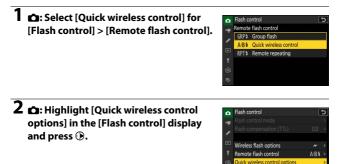

• Choose the balance between groups A and B.

- Adjust flash compensation for groups A and B.
- Adjust settings for group C:
 - Select [**M**] to enable or [--] to disable the units in group C.
 - When [**M**] is selected, the units in group C will fire at the chosen output.
- Choose the channel.
 - For [Channel], choose the channel (1– 4) the master flash will use for optical remote flash control.
 - If the remote flash units include an SB-500, you must choose Channel [**3**].









4 : Choose a channel for the remote flash units.

Set the remote flash units to the channel selected for [**Channel**] in Step 3.

5 : Group the remote flash units.

- Choose a group (A, B, or C).
- There is no limit on the number of remote flash units that may be used. The practical maximum, however, is three per group, as the light emitted by the remote flash units will interfere with performance if more flash units are used.

6 🗗 / 🖫 : Compose the shot and arrange the flash units.

- See the documentation provided with the flash units for more information.
- Test-fire the units and confirm that they are functioning normally. To test-fire the units, use the [Test flash] item in the *i* menu, which can be added to the menu using Custom Setting f1 [Customize B] menu].

7 D/=: Take the photograph after confirming that the flash-ready lights for all flash units are lit.

🖉 Flash Info

Quick wireless control settings can be viewed using the [**Flash info**] item in the *i* menu, which can be added to the menu using Custom Setting f1 [**Customize B menu**].



Remote Repeating (SB-5000 Only)

The flash units fire repeatedly while the shutter is open, producing a multiple-exposure effect.



3 🛋: Adjust remote repeating options.

• Adjust "output", "times", and "frequency".

- Enable or disable selected groups.
 - Select [**ON**] to enable or [--] to disable the selected group.
- Choose the channel.
 - For [Channel], choose the channel (1– 4) the master flash will use for optical remote flash control.
 - If the remote flash units include an SB-500, you must choose Channel [3].







4 : Choose a channel for the remote flash units.

Set the remote flash units to the channel selected for [**Channel**] in Step 3.

5 : Group the remote flash units.

- Choose a group (A, B, or C).
- There is no limit on the number of remote flash units that may be used. The practical maximum, however, is three per group, as the light emitted by the remote flash units will interfere with performance if more flash units are used.

6 🗗 / 🖥 : Compose the shot and arrange the flash units.

- See the documentation provided with the flash units for more information.
- Test-fire the units and confirm that they are functioning normally. To test-fire the units, use the [Test flash] item in the *i* menu, which can be added to the menu using Custom Setting f1 [Customize B] menu].

7 D/=: Take the photograph after confirming that the flash-ready lights for all flash units are lit.

🔽 Optical AWL

- Position the sensor windows on the remote flash units to pick up the light from the master flash. Particular care is required if the master flash is mounted on a hand-held camera.
- Be sure that direct light or strong reflections from the remote flash units do not enter the camera lens (in [**TTL**] mode) or the photocells on the remote flash units ([**③A**] mode). Otherwise light from the flash units may interfere with exposure.
- Even if [--] is selected for [**Master flash**] > [**Mode**], the master flash may emit low-intensity timing flashes. These flashes may appear in photographs taken at short range. This can be prevented by choosing low ISO sensitivities or small apertures (high f-numbers).
- After positioning the remote flash units, take a test shot and view the results in the camera display.

🖉 Flash Info

Remote repeating options can be viewed using the [**Flash info**] item in the *i* menu, which can be added to the menu using Custom Setting f1 [**Customize D menu**].



Menu Guide

Defaults

The defaults for the photo shooting, video recording, Custom Settings, playback, setup, and network menus are listed below.

Photo Shooting Menu Defaults

Photo shooting menu option	Default
[Shooting menu bank]	A
[Extended menu banks]	OFF
[Storage folder]	
[Rename]	NCZ_9
[Select folder by number]	100
[Select folder from list]	-
[File naming]	DSC
[Role played by card in Slot 2]	Overflow
[Image area]	
[Choose image area]	FX (36×24)
[DX crop alert]	OFF
[Image quality]	JPEG normal
[Image size]	Large
[RAW recording]	High efficiency★

Photo shooting menu option	Default
[ISO sensitivity settings]	
[ISO sensitivity]	100
[Auto ISO sensitivity control]	ON
[Maximum sensitivity]	25600
[Maximum sensitivity with \$]	Same as without flash
[Minimum shutter speed]	Auto
[White balance]	Auto: Keep white (reduce warm colors)
[Fine-tune]	A-B: 0, G-M: 0
[Choose color temperature]	5000 K
[Preset manual]	d-1
[Set Picture Control]	Auto
[Manage Picture Control]	_
[Color space]	sRGB
[Active D-Lighting]	Off
[Long exposure NR]	OFF
[High ISO NR]	Normal
[Vignette control]	Normal
[Diffraction compensation]	ON
[Auto distortion control]	ON
[Photo flicker reduction]	OFF
[Metering]	Matrix metering

Photo shooting menu option	Default
[Flash control]	
[Flash control mode]	TTL
[Wireless flash options]	Off
[Remote flash control]	Group flash
[Focus mode]	Single AF
[AF-area mode]	Single-point AF
[AF subject detection options]	Auto
[Vibration reduction]	Sport
[Auto bracketing]	1
[Auto bracketing set]	AE & flash bracketing
[Number of shots]	0
[Increment]	1.0
[Multiple exposure]	
[Multiple exposure mode]	Off
[Number of shots]	2
[Overlay mode]	Average
[Save individual pictures (RAW)]	ON
[Overlay shooting]	ON
[Select first exposure (RAW)]	-
[HDR overlay]	
[HDR mode]	Off
[HDR strength]	Auto
[Save individual pictures (RAW)]	OFF

Photo shooting menu option	Default
nterval timer shooting]	
[Choose start day/time]	Now
[Interval]	1 min.
[Intervals×shots/interval]	0001×1
[Exposure smoothing]	ON
[Interval priority]	OFF
[Focus before each shot]	OFF
[Options]	Off
[Starting storage folder]	1
[New folder]	
[Reset file numbering]	
ime-lapse video]	1
[Interval]	5 s
[Shooting time]	25 min.
[Exposure smoothing]	ON
[Choose image area]	FX
[Video file type]	H.265 8-bit (MOV)
[Frame size/frame rate]	3840×2160; 30p
[Interval priority]	OFF
[Focus before each shot]	OFF
[Destination]	Slot 1

Photo shooting menu option	Default
[Focus shift shooting]	
[No. of shots]	100
[Focus step width]	5
[Interval until next shot]	0
[First-frame exposure lock]	ON
[Starting storage folder]	
[New folder]	
[Reset file numbering]	

Video Recording Menu Defaults

Video recording menu option	Default
[Shooting menu bank]	A
[Extended menu banks]	OFF
[Storage folder]	
[Rename]	NCZ_9
[Select folder by number]	100
[Select folder from list]	_
[File naming]	DSC
[Destination]	Slot 1
[Video file type]	H.265 8-bit (MOV)
[Frame size/frame rate]	3840×2160; 30p
[Image area]	-
[Choose image area]	FX
[DX crop alert]	OFF

Video recording menu option	Default	
[ISO sensitivity settings]		
[Maximum sensitivity]	25600	
[Auto ISO control (mode M)]	ON	
[ISO sensitivity (mode M)]	100	
[White balance]	Same as photo settings	
[Fine-tune]	A-B: 0, G-M: 0	
[Choose color temperature]	5000 K	
[Preset manual]	d-1	
[Set Picture Control]	Same as photo settings	
[Manage Picture Control]	_	
[HLG quality]	!	
[Quick sharp]	0	
[Contrast]	0	
[Saturation]	0	
[Hue]	0	
[Active D-Lighting]	Off	
[High ISO NR]	Normal	
[Vignette control]	Normal	
[Diffraction compensation]	ON	
[Auto distortion control]	ON	
[Video flicker reduction]	Auto	
[Metering]	Matrix metering	
[Focus mode]	Full-time AF	
[AF-area mode]	Single-point AF	

Video recording menu option	Default	
[AF subject detection options]		
[Subject detection]	Auto	
[AF when subject not detected]	ON	
[Vibration reduction]	Same as photo settings	
[Electronic VR]	OFF	
[Microphone sensitivity]	Auto	
[Attenuator]	OFF	
[Frequency response]	Wide range	
[Wind noise reduction]	OFF	
[Mic jack plug-in power]	ON	
[Headphone volume]	15	
[Timecode]		
[Record timecodes]	Off	
[Count-up method]	Record run	
[Timecode origin]	_	
[Drop frame]	ON	
[External rec. cntrl (HDMI)]	OFF	

Custom Settings Menu Defaults

	Custom Settings menu option	Default		
[Cu:	stom Settings bank]	A		
a1	[AF-C priority selection]	Release		
a2	[AF-S priority selection]	Focus		
a3	[Focus tracking with lock-on]			
	[Blocked shot AF response]	3		
	[Subject motion]	Steady		
a4	[Focus points used]	All points		
a5	[Store points by orientation]	Off		
аб	[AF activation]	Shutter/AF-ON		
a7	[Focus point persistence]	Auto		
a8	[Limit AF-area mode selection]	[Limit AF-area mode selection]		
	[Pinpoint AF]	Ø		
	[Single-point AF]	 ✓ (cannot be deselected) 		
	[Dynamic-area AF (S)]	Ø		
	[Dynamic-area AF (M)]			
	[Dynamic-area AF (L)]	Ø		
	[Wide-area AF (S)]			
	[Wide-area AF (L)]			
	[3D-tracking]			
	[Auto-area AF]			

	Custom Settings menu option	Default
a9	[Focus mode restrictions]	No restrictions
a10	[Focus point wrap-around]	OFF
a11	[Focus point display]	I
	[Manual focus mode]	ON
	[Dynamic-area AF assist]	ON
	[AF-C in-focus display]	OFF
a12	[Built-in AF-assist illuminator]	ON
a13	[Focus peaking]	I
	[Focus peaking display]	OFF
	[Focus peaking sensitivity]	2 (standard)
	[Focus peaking highlight color]	Red
a14	[Manual focus ring in AF mode]	ON
b1	[ISO sensitivity step value]	1/3 step
b2	[EV steps for exposure cntrl] 1/3 EV (comp. 1/3 EV	
b3	[Easy exposure compensation]	Off
b4	[Matrix metering face detection]	ON
b5	[Center-weighted area]	Standard
b6	[Fine-tune optimal exposure]	·
	[Matrix metering]	0
	[Center-weighted metering]	0
	[Spot metering]	0
	[Highlight-weighted metering]	0
b7	[Keep exp. when f/ changes]	Exposure maintenance off

	Custom Settings menu option	Default	
c1	[Shutter-release button AE-L]	Off	
c2	[Self-timer]		
	[Self-timer delay]	10 s	
	[Number of shots]	1	
	[Interval between shots]	0.5 s	
c3	[Power off delay]		
	[Playback]	10 s	
	[Menus]	1 min	
	[Picture review]	4 s	
	[Standby timer]	30 s	

	Custom Settings menu option	Default	
d1	[Continuous shooting speed]		
	[Continuous high-speed]	20 fps	
	[Continuous low-speed]	5 fps	
d2	d2 [Maximum shots per burst] ∞		
d3	[Limit release mode selection]		
	[Single frame]	 (cannot be deselected) 	
	[Continuous L]	⊠	
	[Continuous H]	⊡ ⊡	
	[C30]	Ø	
	[C120]	Ø	
	[Self-timer]	Ø	
d4	[Sync. release mode options] Sync		
d5	[Extended shutter speeds (M)] OFF		
d6	[Limit selectable image area]		
	[FX (36×24)]	 ✓ (cannot be deselected) 	
	[DX (24×16)]	Ø	
	[1:1 (24×24)]	Ø	
	[16:9 (36×20)]	Ø	
d7	[File number sequence]	On	
d8	[View mode (photo Lv)]	Show effects of settings	
d9	[Starlight view (photo Lv)]	OFF	

	Custom Settings menu option	Default
d10	0 [Warm display colors]	
	[Warm display color options]	Off
	[Warm color display brightness]	0
d11	[LCD illumination]	OFF
d12	[View all in continuous mode]	ON
d13	[Release timing indicator]	Туре В
d14	[Image frame]	ON
d15	[Grid type]	3×3
d16	[Virtual horizon type]	Type A
d17	7 [Custom monitor shooting display]	
	[Display 1]	 ✓ (cannot be deselected)
	[Display 2]	
	[Display 3]	
	[Display 4]	
	[Display 5]	
d18	[Custom viewfinder shooting display]
	[Display 1]	 ✓ (cannot be deselected)
	[Display 2]	
	[Display 3]	
	[Display 4]	M

	Custom Settings menu option	Default
e1	[Flash sync speed]	1/200 s
e2	[Flash shutter speed]	1/60 s
e3	[Exposure comp. for flash]	Entire frame
e4	[Auto \$ ISO sensitivity control]	Subject and background
e5	[Modeling flash]	ON
еб	[Auto bracketing (mode M)]	Flash/speed
e7	[Bracketing order]	MTR > under > over
e8	[Flash burst priority]	Prioritize precise flash control
f1	[Customize 🖪 menu]	Set Picture Control, White balance, Image quality, Image size, AF-area mode/subj. detection, Focus mode, Metering, Vibration reduction, Shooting menu bank, Custom controls (shooting), Airplane mode, View memory card info

Cust	om Settings menu option	Default
[Custom controls (shooting)]		1
[F	n1 button]	Shooting menu bank
[F	n2 button]	Choose image area
[F	n3 button]	Live view info display off
[F	n button for vertical shooting]	Exposure compensation
[P	rotect/Fn4 button]	Set Picture Control
[A	F-ON button]	AF-ON
[S	ub-selector center]	AE/AF lock
[0	K button]	Select center focus point
[A	udio button]	None
[Q	UAL button]	Image quality/size
[ν	ertical multi selector center]	AE/AF lock
1.00	F-ON button for vertical nooting]	Same as AF-ON button
[V	'ideo record button]	None
[Command dials]		
		₽: ≦ / ∑ ₽*
	[Exposure setting]	S: ≦/≅Tv A: ≦Av/≅
		M: ≦Av/≅Tv
	[Focus/AF-area mode selection]	≊[+]/≅AF/MF
	[Sub-command dial zoom role]	Exposure setting
[L	ens Fn button]	AE/AF lock
[L	ens Fn2 button]	AF-ON
[L	ens control ring]	(Varies with lens)

	Custom Settings menu option	Default	
f3	[Custom controls (playback)]		
	[Fn1 button]	None	
	[Fn2 button]	None	
	[Fn3 button]	None	
	[Fn button for vertical shooting]	None	
	[Protect/Fn4 button]	Protect	
	[OK button]	Zoom on/off	
	[Audio button]	Voice memo	
	[QUAL button]	Rating	
	[WB button]	Select for upload to computer	
	[Vertical shooting multi selector]	Unswitch	
	[Main command dial]		
	[Frame advance]	1 frame	
	[Video playback]	10 frames	
	[Sub-command dial]		
	[Frame advance]	1 frame	
	[Video playback]	10 s	
	[Video record button]	None	
f4	[Control lock]		
	[Shutter speed lock]	OFF	
	[Aperture lock]	OFF	
	[Focus-point lock]	OFF	

	Custom Settings menu option	Default	
f5	[Reverse dial rotation]		
	[Exposure compensation]		
	[Shutter speed/aperture]		
f6	[Release button to use dial]	OFF	
f7	[Reverse indicators]	–aliiiiîîiiiia+	
f8	[Reverse ring for focus]	OFF	
f9	[Focus ring rotation range]	Non-linear	
f10	[Control ring response]	High	
f11	[Full-frame playback flicks]		
	[Flick up]	None	
	[Flick down]	None	
	[Flick advance direction]	Left→Right	
g1	[Customize 🖪 menu]	Set Picture Control, White balance, Frame size/frame rate, Microphone sensitivity, AF-area mode/subj. detection, Focus mode, Electronic VR, Vibration reduction, Shooting menu bank, Custom controls, Airplane mode, Destination	

	Custom Settings menu option	Default
g2	[Custom controls]	
	[Fn1 button]	Shooting menu bank
	[Fn2 button]	Choose image area
	[Fn3 button]	Live view info display off
	[Fn button for vertical shooting]	Exposure compensation
	[Focus mode button]	Focus mode/AF-area mode
	[AF-ON button]	AF-ON
	[Protect/Fn4 button]	Set Picture Control
	[OK button]	Select center focus point
	[Sub-selector center]	AE/AF lock
	[QUAL button]	None
	[Audio button]	Microphone sensitivity
	[AF-ON button for vertical shooting]	Same as AF-ON button
	[Vertical multi selector center]	AE/AF lock
	[Command dials]	
	[Exposure setting]	A : ≦Av/雲 M : ≧Av/雲Tv
	[Focus/AF-area mode selection]	' ≅(•]∕, \\$ AF/MF
	[Sub-command dial zoom role]	Exposure setting
	[Shutter-release button]	None
	[Lens Fn2 button]	AF-ON
	[Lens Fn button]	AE/AF lock
	[Lens control ring]	(Varies with lens)

	Custom Settings menu option	Default
g3	[Control lock]	
	[Shutter speed lock]	OFF
	[Aperture lock]	OFF
	[Focus-point lock]	OFF
g4	[Limit AF-area mode selection]	
	[Single-point AF]	✓ (cannot be deselected)
	[Wide-area AF (S)]	Ø
	[Wide-area AF (L)]	Ø
	[Subject-tracking AF]	Ø
	[Auto-area AF]	Ø
g5	[Focus mode restrictions] No restrictions	
g6	[AF speed]	0
	[When to apply]	Always
g7	[AF tracking sensitivity]	4
g8	[View assist]	OFF
g9	[Zebra pattern]	
	[Pattern tone range]	Zebra pattern off
	[Pattern]	Pattern 1
	[Highlight threshold]	250
	[Mid-tone range]	Value: 160; range: ±10
g10	[Limit zebra pattern tone range]	No restrictions

	Custom Settings menu option	Default	
g11	[Grid type]	3×3	
g12	[Custom monitor shooting display]		
	[Display 1]	 ✓ (cannot be deselected) 	
	[Display 2]		
	[Display 3]		
	[Display 4]		
g13	[Custom viewfinder shooting display]		
	[Display 1]	 ✓ (cannot be deselected) 	
	[Display 2]	M	
	[Display 3]	M	

Playback Menu Defaults

Playback menu option	Default
[Delete]	-
[Playback folder]	All
[Playback display options]	
[Focus point]	
[Exposure info]	
[Highlights]	
[RGB histogram]	
[Shooting data]	
[Overview]	
[None (picture only)]	۲
[Basic shooting data]	۲
[Flash data]	۲
[Picture Control/HLG data]	۲
[Other shooting data]	۲
[Copyright info]	۲
[Location data]	۲
[IPTC data]	∀
[Delete pictures from both slots]	Yes (confirmation required)
[Dual-format recording PB slot]	Slot 1

Playback menu option	Default
[Filtered playback criteria]	
[Protect]	
[Picture type]	
[Rating]	
[Select for upload to computer]	
[Select for upload (FTP)]	
[Voice memo]	
[Retouched pictures]	
[Picture review]	Off
[After delete]	Show next
[After burst, show]	Last picture in burst
[Rotate tall]	ON
[Copy image(s)]	-

Setup Menu Defaults

Setup menu option	Default
[Format memory card]	_
[Language]	(Default varies with country of purchase)

[Time zone and date]

[Time zone]	(Default varies with country of purchase)
[Date and time]	
[Date format]	(Default varies with country of purchase)
[Daylight saving time]	OFF
[Monitor brightness]	0
[Monitor color balance]	A-B: 0, G-M: 0
[Viewfinder brightness]	Auto
[Viewfinder color balance]	A-B: 0, G-M: 0
[Finder display size (photo Lv)]	Standard
[Limit monitor mode selection]	L
[Automatic display switch]	M
[Viewfinder only]	⊠
[Monitor only]	
[Prioritize viewfinder]	
[Auto rotate info display]	ON

Setup menu option	Default	
[AF fine-tuning options]		
[AF fine-tune]	OFF	
[Fine-tune and save lens]	_	
[Default]	_	
[List saved values]	_	
[Choose value for current lens]	_	
[Non-CPU lens data]		
[Lens number]	1	
[Focal length (mm)]		
[Maximum aperture]		
[Save focus position]	OFF	
[Sensor shield behavior at power off]	Sensor shield stays open	
[Clean image sensor]		
[Automatic cleaning]	Clean at shutdown	
[Image Dust Off ref photo]	—	
[Pixel mapping]	—	
[Image comment]		
[Attach comment]	Off	
[Copyright information]		
[Attach copyright information]	OFF	

Setup menu option	Default
[IPTC]	
[Edit/save]	_
[Delete]	_
[Auto embed during shooting]	Off
[Load/save]	_
[Voice memo options]	
[Voice memo control]	Press and hold
[Audio output (playback)]	Speaker/headphones
[Camera sounds]	
[Shutter sound]	ON
[Beep on/off]	Off
[Volume]	2
[Pitch]	Low
[Silent mode]	OFF
[Touch controls]	
[Enable/disable touch controls]	Enable
[Glove mode]	OFF
[HDMI]	
[Output resolution]	Auto
[Output range]	Auto
[Output shooting info]	ON
[Mirror camera info display]	ON

Setup menu option	Default
[USB connection priority]	Upload
[Location data (built-in)]	
[Record location data]	OFF
[Standby timer]	ON
[Set clock from satellite]	OFF
[Create log]	_
[Log list]	_
[Position]	_
[Wireless remote (WR) options]	
[LED lamp]	ON
[Link mode]	Pairing
[Assign remote (WR) Fn button]	None
[Conformity marking]	_
[Battery info]	_
[USB power delivery]	ON
[Energy saving (photo mode)]	OFF
[Slot empty release lock]	Enable release
[Save/load menu settings]	-
[Reset all settings]	-
[Firmware version]	_

Network Menu Defaults

Network menu option	Default
irplane mode]	OFF
/ired LAN]	OFF
onnect to smart device]	
[Pairing (Bluetooth)]	
[Bluetooth connection]	OFF
[Select pictures for upload]	
[Auto select for upload]	ON
[Wi-Fi connection]	_
[Upload while off]	ON
[Location data (smart device)]	_
onnect to computer]	
[Network settings]	-
[Connection type]	Picture transfer
[Options]	
[Auto upload]	OFF
[Delete after upload]	OFF
[Upload RAW + JPEG as]	RAW + JPEG
[JPEG+JPEG slot selection]	Slot 1
[Upload folder]	-
[Deselect all?]	-

Network menu option	Default
Connect to FTP server]	
[Network settings]	_
[Options]	
[Auto upload]	OFF
[Delete after upload]	OFF
[Upload RAW + JPEG as]	RAW + JPEG
[JPEG+JPEG slot selection]	Slot 1
[Overwrite if same name]	OFF
[Protect if marked for upload]	OFF
[Upload marking]	OFF
[Upload folder]	_
[Deselect all?]	_
Connect to other cameras]	1
[Synchronized release]	ON
[Network settings]	_
[Group name]	_
[Master/remote]	Master camera
[Remote camera list]	_
[Synchronize date and time]	-
USB]	MTP/PTP
Start via LAN]	OFF
Router frequency band]	2.4 GHz/5 GHz
[MAC address]	_

The Photo Shooting Menu: Shooting Options

To view the photo shooting menu, select the tab in the camera menus.

۵	PHOTO SHOOTING MENU		
100	shooting menu bank	А	>
	Extended menu banks	OFF	
	Storage folder	NCZ_9	
	File naming		
	Role played by card in Slot 2	U•U	
	Image area		
	Image quality	NORM	
		_	

The photo shooting menu contains the following items:

Item		ltem	
[Shooting menu bank]	493	[Active D-Lighting]	512
[Extended menu banks]	496	[Long exposure NR]	514
[Storage folder]	497	[High ISO NR]	515
[File naming]	502	[Vignette control]	516
[Role played by card in Slot	503	[Diffraction compensation]	517
2]		[Auto distortion control]	517
[Image area]	506	[Photo flicker reduction]	518
[Image quality]	506	[Metering]	520
[Image size]	507	[Flash control]	521
[RAW recording]	507	[Focus mode]	525
[ISO sensitivity settings]	508	[AF-area mode]	525
[White balance]	510	[AF subject detection	525
[Set Picture Control]	510	options]	525
[Manage Picture Control]	510	[Vibration reduction]	526
[Color space]	511	[Auto bracketing]	527

ltem		ltem	
[Multiple exposure]	528	[Time-lapse video]	556
[HDR overlay]	537	[Focus shift shooting]	568
[Interval timer shooting]	542		

🔽 See Also


"Photo Shooting Menu Defaults" (¹¹464)

Shooting Menu Bank

MENU button 🔿 🗖 photo shooting menu

Photo shooting and video recording menu options are stored in one of four banks (banks "A" through "D") that can be selected using [**Shooting menu bank**]. With the exceptions noted below, changes to settings made while one bank is selected are not applied to the remaining banks.

- Changes to the following photo shooting menu settings apply to all banks:
 - [Extended menu banks]
 - [White balance] presets
 - [Multiple exposure]
 - [Interval timer shooting]
 - [Time-lapse video]
 - [Focus shift shooting]
- Changes to the following video recording menu setting also apply to all banks:
 - [Extended menu banks]
- Shooting menu banks can also be edited via the [Shooting menu bank] item in the video recording menu. Changes made in the photo shooting menu apply in the video recording menu and vice versa.

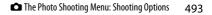

Shooting Menu Banks

The control panel shows the current menu bank ("A", "B", "C", or "D").



Renaming Shooting Menu Banks

A descriptive caption can be added to the bank name ("A", "B", "C", or "D") by highlighting the bank, pressing \textcircled , and selecting [**Rename**]. Captions can be up to 20 characters long.

Copying Shooting Menu Banks

To create a copy of a shooting menu bank, highlight the bank, press (), select [**Copy**], and choose a destination for the copy.

Restoring Default Settings

You can restore default settings for a selected shooting menu bank. To do so, highlight the bank and press í (); a confirmation dialog will be displayed. Highlight [**Yes**] and press ⁽ to restore default settings for the selected bank.



- Shooting menu banks cannot be reset while a multiple exposure is in progress.
- [Storage folder] and [Manage Picture Control] are not reset.

Extended Menu Banks

MENU button 🔿 🖸 photo shooting menu


Select [**ON**] to include exposure settings in the information recorded in each of the four shooting menu banks

- Changes to exposure settings will be stored in the bank currently selected for [**Shooting menu bank**]. The settings stored in the bank will be recalled the next time the bank is selected.
- The additional settings stored in extended banks for use in photo mode are:
 - shooting mode,
 - shutter speed (modes S and M only),
 - aperture (modes A and M only), and
 - flash mode.
- The additional settings stored in extended banks for use in video mode are:
 - shooting mode,
 - shutter speed (mode **M** only), and
 - aperture (modes **A** and **M** only).
- Selecting [OFF] restores the shooting and flash modes, shutter speed, and aperture in effect before [ON] was selected.
- Exposure settings can also be edited via the [**Extended menu banks**] item in the video recording menu. Changes made in the photo shooting menu apply in the video recording menu and *vice versa*.

Storage Folder

MENU button 🔿 🗖 photo shooting menu

Choose the folder in which subsequent pictures will be stored.

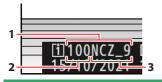



Folder name

🔽 "Storage Folder"

Changes to [**Storage folder**] made in the photo shooting menu apply in the video recording menu and *vice versa*.

Renaming Folders

The default folder name, which appears after the folder number, is "NCZ_9". To choose a different five-character folder name for new folders, select [**Rename**].

- Existing folders cannot be renamed.
- If desired, the default name can be restored for subsequent folders by pressing and holding the final (New) button while the keyboard is displayed.

Select Folder by Number

The folder in which subsequent pictures will be stored can be selected by number. If a folder with the specified number does not already exist, a new folder will be created.

1 Choose [Select folder by number].

- Highlight [Select folder by number] and press () to display the [Select folder by number] dialog.
- The card on which the new folder will be created is underlined in the card slot



display area at the top right corner of the [Select folder by number] dialog. The card used for new folders depends on the option currently selected for [Role played by card in Slot 2] in the photo shooting menu.

2 Choose a folder number.

- Press ④ or ④ to highlight digits.
- To change the highlighted digit, press $\textcircled{\baselinetwidth}$ or $\textcircled{\baselinetwidth}$.

3 Save changes and exit.

- If a folder with the selected number already exists, a
 , a

 icon will be displayed to the left of the folder number. Press
 to complete the operation and return to the main menu; if you chose a folder marked

 or

 it will be selected as the folder for new pictures.
- If you chose a folder number that does not already exist, a new folder will be created with that number when you press .
- In either case, subsequent pictures will be stored in the chosen folder.
- To exit without changing the storage folder, press the MENU button.

Folder Icons

Folders in the [**Select folder by number**] dialog are shown by □ if empty, by if full (containing either 5000 pictures or a picture numbered 9999), or by if partially full. A is icon indicates that no further pictures can be stored in the folder.

Select Folder from List

To choose from a list of existing folders:

1 Choose [Select folder from list].

Highlight [Select folder from list] and press () to display the [Select folder from list] dialog.

۵	Storage folder
-	Select folder from list
2	100NCZ_9
"	101NCZ_9
	102NCZ_9
۲	103NCZ_9
	QESConfirm 080

2 Highlight a folder.

Press O or O to highlight a folder.

3 Select the highlighted folder.

- \bullet Press $\textcircled{\sc os}$ to select the highlighted folder and return to the main menu.
- Subsequent photographs will be stored in the selected folder.

Cautions: Folder and File Numbers

- When the current folder number reaches 999, the camera will no longer be able to create new folders and the shutter release will be disabled if:
 - the current folder contains 5000 pictures (in addition, video recording will be disabled if the camera calculates that the number of files needed to record a video of the maximum length would result in the folder containing over 5000 files), or
 - the current folder contains a picture numbered 9999 (in addition, video recording will be disabled if the camera calculates that the number of files needed to record a video of the maximum length would result in a file numbered over 9999).
- If there is space on the memory card, you will nevertheless be able to continue shooting by:
 - creating a folder with a number less than 999 and selecting it as the storage folder, or
 - changing the options selected for [Frame size/frame rate] or [Video file type] before recording videos.

🔽 Startup Time

Additional time may be required for camera startup if the memory card contains a very large number of files or folders.

File Naming

MENU button 🔿 🖸 photo shooting menu

Pictures are saved using file names consisting of "DSC_" followed by a four-digit number and a three-letter extension. [**File naming**] is used to select three letters to replace the "DSC" portion of the file name. For information on text entry, see "Text Entry" (CD64).

🔽 File Names

- File names take the form "DSC_nnnn.xxx", where nnnn is a number from 0001 to 9999 and xxx is one of the following extensions, assigned according to the options selected for image quality and file type:
 - NEF: NEF (RAW) photos
 - JPG: JPEG (fine, normal, or basic) photos
 - MOV: MOV videos
 - MP4: MP4 videos
 - NDF: Dust off reference data
- Pictures created with [Adobe RGB] selected for [Color space] in the photo shooting menu have file names of the form "_DSCnnnn.xxx".
- In each pair of photographs recorded at image-quality settings of RAW + JPEG, the NEF (RAW) and JPEG pictures have the same file names but different extensions.

Role Played by Card in Slot 2

MENU button 🔿 🗅 photo shooting menu

Choose the role played by the card in Slot 2 when two memory cards are inserted in the camera.

Option		Description	
Ü ∙ Ü	[Overflow]	The card in Slot 2 is used only when the card in Slot 1 is full.	
[]+[]	[Backup]	Each picture is recorded twice, once to the card in Slot 1 and again to the card in Slot 2.	
RÁŴ+ĴĴ	[RAW Slot 1 - JPEG Slot 2]	 NEF (RAW) copies of photos taken at settings of RAW + JPEG are recorded only to the card in Slot 1, JPEG copies only to the card in Slot 2. Pictures taken at other image quality settings are recorded twice at the same setting, once to the card in Slot 1 and again to the card in Slot 2. 	
Ü+Ü	[JPEG Slot 1 - JPEG Slot 2]	 Two JPEG copies are recorded, one to each memory card. The copy saved to the card in Slot 1 is recorded at the image quality and size selected via the QUAL button or photo shooting menu. The copy saved to the card in Slot 2 is saved at an image quality of [JPEG basic] and a size of either [Medium] or [Small]. The size can be selected by pressing ⁽²⁾/₍₂₎ when [JPEG Slot 1 - JPEG Slot 2] is highlighted. At image qualities of RAW or RAW + JPEG, this option is equivalent to [Backup]. 	

Caution: [RAW Slot 1 - JPEG Slot 2]

If [ON] is selected for [Multiple exposure] > [Save individual pictures (RAW)] in the photo shooting menu, or if [ON] is selected for [HDR overlay] > [Save individual pictures (RAW)] in the photo shooting menu, unprocessed copies of the individual NEF (RAW) photos that make up each multiple exposure or HDR picture will be recorded to both memory cards together with the JPEG composite, regardless of the option selected for image quality.

[Backup], [RAW Slot 1 - JPEG Slot 2], and [JPEG Slot 1 - JPEG Slot 2]

- The shooting display and control panel show the number of exposures remaining on the card with the least amount of space available.
- The shutter release is disabled when either card is full.

Viewing Dual-Format Photos

- Use the [**Dual-format recording PB slot**] item in the playback menu to choose the slot from which dual-format photos are played back.
- When viewing dual-format photos, you can view the other copy using [Jump to copy on other card] in the *i* menu.

Recording Videos

The slot to which videos are recorded is selected using [**Destination**] in the video recording menu.

Deleting Copies

When deleting pictures recorded using [**Backup**], [**RAW Slot 1 - JPEG Slot 2**], or [**JPEG Slot 1 - JPEG Slot 2**], you have the choice of erasing either both copies or only the copy on the card in the current slot.

- Pressing in (Res) when a picture created using either of these options is highlighted during playback displays a confirmation message.
- To delete only the copy on the card in the current slot, highlight [Selected picture] and press in (****) again.



- To delete both copies, highlight [Same pictures on [1] and [2]] and press for (***).
- If a voice memo is appended to the picture, a confirmation dialog will be displayed. To delete only the voice memo, highlight [Voice memo only] and press in (

Delete Options

Use the [**Delete pictures from both slots**] item in the playback menu to choose the options displayed when a picture is deleted.

Image Area

MENU button 🔿 🖸 photo shooting menu

Adjust image area settings. For more information, see "Adjusting Image Area Settings" (□ 102), part of the section on "Image Recording Options (Image Area, Quality, and Size)" in the "Shooting Settings" chapter.

Image Quality

MENU button 🔿 🖸 photo shooting menu

Choose a file format for photographs. For more information, see "Adjusting Image Quality" (C 105), part of the section on "Image Recording Options (Image Area, Quality, and Size)" in the "Shooting Settings" chapter.

Image Size

MENU button 🔿 🖸 photo shooting menu

Choose the size, in pixels, of pictures recorded with the camera. For more information, see "Choosing an Image Size" (C1108), part of the section on "Image Recording Options (Image Area, Quality, and Size)" in the "Shooting Settings" chapter.

RAW Recording

MENU button 🔿 🔿 photo shooting menu

Choose a compression type for NEF (RAW) photographs. In descending order by the size of the files produced, the options are: [Lossless compression], [High efficiency★], and [High efficiency].

• [High efficiency *] produces pictures that compare favorably in quality to those produced by [Lossless compression] and are higher in quality than those produced by [High efficiency].

ISO Sensitivity Settings

Adjust ISO sensitivity settings for photographs.

Option	Description	
[ISO sensitivity]	Choose from settings of ISO 64 to 25600; the camera also supports settings below ISO 64 by about 0.3, 0.7, and 1 EV (ISO 32 equivalent) and above ISO 25600 by about 0.3, 0.7, 1, and 2 EV (ISO 102400 equivalent).	
[Auto ISO sensitivity control]	Select [ON] to enable auto ISO sensitivity control. If [OFF] is selected, [ISO sensitivity] will remain fixed at the value selected by the user. [Maximum sensitivity], [Maximum sensitivity with \$], and [Minimum shutter speed] options are available when [ON] is selected.	
[Maximum sensitivity]	Choose an upper limit for ISO sensitivity to prevent it being raised too high.	
[Maximum sensitivity with \$]	Choose the upper ISO sensitivity limit for photos taken using an optional flash unit.	

Option	Description	
[Minimum shutter speed]	Choose the shutter speed below which auto ISO sensitivity control will kick in to prevent underexposure in modes P and A ; options range from ¹ / _{16,000} to 30 s. If [Auto] is selected, the camera will choose the minimum shutter speed based on lens focal length. For example, the camera will automatically choose faster minimum shutter speeds to prevent blur caused by camera shake when a long lens is attached. • To view auto shutter-speed selection options, highlight [Auto] and press (B . Auto shutter-speed selection can be fine-tuned by choosing faster or slower minimums. Faster settings can be used to reduce blur when photographing fast-moving subjects. • Shutter speeds may drop below the selected minimum if optimal exposure cannot be achieved at the ISO sensitivity chosen for [Maximum sensitivity].	

White Balance

MENU button 🔿 🖸 photo shooting menu

Adjust white balance to match the color of the light source. For more information, see "White Balance" (D158) in the "Shooting Settings" chapter.

Set Picture Control

MENU button 🔿 🖸 photo shooting menu

Choose image processing ("Picture Control") options for new photos according to the scene or your creative intent. For more information, see "Picture Controls" (D 192) in the "Shooting Settings" chapter.

Manage Picture Control

MENU button 🔿 🗖 photo shooting menu

Color Space

MENU button 🔿 🔿 photo shooting menu

The color space determines the gamut of colors available for color reproduction. [**sRGB**] is recommended for general-purpose printing and display. With a broader gamut of colors than [**sRGB**], [**Adobe RGB**] is a better choice for professional publication and commercial printing.

Caution: Color Space

The selected color space may be overwritten when pictures are opened in third-party software. NX Studio can open pictures in the color space selected on the camera.

🔽 Adobe RGB

For accurate color reproduction, Adobe RGB pictures require applications, displays, and printers that support color management.

Active D-Lighting

MENU button 🔿 🖸 photo shooting menu

Preserve details in highlights and shadows, creating pictures with natural contrast. Use for high-contrast scenes, for example when photographing brightly-lit outdoor scenery through a door or window or taking pictures of shaded subjects on a sunny day. Active D-Lighting is most effective when used with matrix metering.



[Off]

[暗 A Auto]

Option		Description	
暗 A	[Auto]	The camera automatically adjusts Active D-Lighting in response to shooting conditions.	
SE H2	[Extra high 2]		
₽Ei H1	[Extra high 1]		
ΒάH	[High]	from (in order from high to low) [Extra high 2], [Extra	
暳 N	[Normal]	high 1], [High], [Normal], and [Low].	
啮L	[Low]		
≊ġOFF	[Off]	Active D-Lighting off.	

The option currently selected is shown by an icon in the display during shooting.



Cautions: Active D-Lighting

- "Noise" in the form of randomly-spaced bright pixels, fog, or lines may appear in photos taken with Active D-Lighting.
- In mode M, [暗A Auto] is equivalent to [暗N Normal].
- Uneven shading may be visible with some subjects.
- This function does not apply at high ISO sensitivities (Hi 0.3–Hi 2.0), including high sensitivities selected via auto ISO sensitivity control.

Long Exposure NR

MENU button 🔿 🖸 photo shooting menu

Select [**ON**] to reduce "noise" (bright spots or fog) in photographs taken at shutter speeds slower than 1 s.

 Long-exposure noise reduction is performed after the photo is taken. During processing, the message, "[Performing noise reduction]" will appear in the shooting display and "Job NR" will flash in the control panel. Pictures cannot be taken until the message has cleared from the display. The time required to process photos after shooting roughly doubles.



Caution: Long-Exposure Noise Reduction

If the camera is turned off before processing is complete, the picture will be saved but noise reduction will not be performed.

High ISO NR

MENU button 🔿 🔿 photo shooting menu

Photographs taken at high ISO sensitivities can be processed to reduce "noise" (randomly-spaced bright pixels).

Option	Description	
[High]	Reduce noise in photographs taken at all ISO sensitivities.	
[Normal]	The higher the sensitivity, the greater the effect. Choose	
[Low]	the amount of noise reduction performed from (in order from high to low) [High], [Normal], and [Low].	
[Off]	Noise reduction is performed only as required. The amount of noise reduction performed is always lower than when [Low] is selected.	



Vignette Control

MENU button 🔿 🖸 photo shooting menu

Vignette control reduces "vignetting"—a drop in brightness at the edges of a photograph—by an amount that varies from lens to lens. Its effects are most noticeable at maximum aperture.

	Option	Description	
	[High]	Choose the amount of vignette control performed	
	[Normal]	from (in order from high to low) [High], [Normal],	
ΠL	[Low]	and [Low].	
[Off]		Vignette control disabled.	

🔽 Caution: Vignette Control

Depending on the scene, shooting conditions, and type of lens, JPEG pictures may exhibit "noise" (fog) or over- or under-exposure at the edge of the frame that introduces variations in peripheral brightness. In addition, custom Picture Controls and preset Picture Controls that have been modified from default settings may not produce the desired effect. Take test shots and view the results in the monitor.

🔽 Vignette Control

Changes to [**Vignette control**] in the photo shooting menu apply in the video recording menu and *vice versa*.

Diffraction Compensation

MENU button 🔿 🗖 photo shooting menu

Select [ON] to reduce diffraction at small apertures (high f-numbers).

Diffraction Compensation

Changes to [**Diffraction compensation**] in the photo shooting menu apply in the video recording menu and *vice versa*.

Auto Distortion Control

MENU button 🔿 🔿 photo shooting menu

Select [**ON**] as required to reduce barrel distortion when shooting with wide-angle lenses and to reduce pin-cushion distortion when shooting with long lenses. Note that [**ON**] may be selected automatically with some lenses, in which case this item will be grayed out and unavailable.

🔽 Auto Distortion Control

Changes to [Auto distortion control] in the photo shooting menu apply in the video recording menu and *vice versa*.

Photo Flicker Reduction

MENU button 🔿 🗖 photo shooting menu

Selecting [**ON**] reduces the effects of flicker from such light sources as fluorescent or mercury-vapor lamps.

- Flicker can cause uneven exposure or (in photographs taken in continuous release modes) inconsistent exposure or coloration.
- If flicker reduction does not produce the desired results, turn the camera off and aim it at the subject or light source before turning it on again.
- If [ON] is selected and flicker is detected when the shutter is released, a green
 will appear next to the FLICKER icon in the shooting display.
- If **[ON]** is selected, the shooting display will briefly go dark when the shutter is released. In continuous high-speed and continuous low-speed modes, the camera will behave as described below.
 - **Continuous high-speed**: Priority is given to frame rate. The display will briefly go dark with the first shot in each burst but not with the subsequent shots.
 - **Continuous low-speed**: Priority is given to flicker reduction. The display will briefly go dark each time the shutter is released and the frame rate may drop or become erratic.

"[Photo Flicker Reduction]"

- Flicker reduction may slightly delay shutter response.
- Flicker reduction can detect flicker at 100 and 120 Hz (associated respectively with AC power supplies of 50 and 60 Hz). The desired results may not be achieved if the frequency of the power supply changes during burst photography.
- Flicker may not be detected or the desired results may not be achieved depending on the light source and shooting conditions, for example with scenes that are brightly lit or feature dark backgrounds.
- The desired results may also not be achieved with decorative lighting displays and other non-standard lighting.
- The actual effects of photo flicker reduction may differ from those visible in the display.

🔽 Continuous High-Speed

- When [Focus] is selected for Custom Setting a1 [AF-C priority selection], flicker reduction for continuous high-speed release mode behaves in the same way as it does for continuous low-speed release.
- Flicker reduction may not produce the desired results during burst photography if:
 - the shutter speed changes (mode A or P),
 - the frame advance rate slows, or
 - the bursts are long.

[Photo Flicker Reduction]: Restrictions

[Photo flicker reduction] does not take effect under some conditions, including during:

- HDR overlay and
- high-speed frame capture.

Metering

MENU button 🔿 🖸 photo shooting menu

Metering determines how the camera sets exposure.

Option		Description
۵	[Matrix metering]	The camera meters a wide area of the frame and sets exposure according to tone distribution, color, composition, and distance for results close to those seen by the naked eye.
۲	 [Center-weighted metering] The camera assigns the greatest weight to t center of the frame. This mode can, for exar be used with subjects that dominate the composition. Center-weighted metering is also recommend when using filters with an exposure factor (fractor) over 1×. The size of the area assigned the greatest we can be selected using Custom Setting b5 [Center-weighted area]. 	
·	 The camera meters a circle with a diameter of 4 mm/0.16 in. (equivalent to approximately 1 of the frame). This ensures that the subject with be correctly exposed even when the backgrouting is much brighter or darker. The metered area is centered on the current focus point. If [Auto-area AF] is selected for area mode (□113), the camera will instead meter the center focus point. 	
•*	[Highlight- weighted metering]	The camera assigns the greatest weight to highlights. Use this option to reduce loss of detail in highlights, for example when photographing spotlit performers on stage.

Flash Control


MENU button 🔿 🗅 photo shooting menu

Adjust settings for wireless remote flash units or optional flash units mounted on the camera accessory shoe.

 For information on adjusting settings for optional flash units mounted on the camera accessory shoe, see "Flash Photography" (C1422).



• For information on adjusting settings for wireless remote flash units, see "Remote Flash Photography" (CP 437).

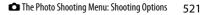

Flash Control Mode

Choose a flash control mode and flash level and adjust other settings for SB-5000, SB-500, SB-400, or SB-300 flash units mounted on the camera accessory shoe.

• The options available in the flash control display vary with the option selected for [Flash control mode].



- Settings for flash units other than the SB-5000, SB-500, SB-400, and SB-300 can only be adjusted using flash unit controls.
- Settings for an SB-5000 mounted on the accessory shoe can also be adjusted using the controls on the flash unit.

Option	Description	
[TTL]	Flash output is adjusted automatically in response to shooting conditions.	
[Auto external flash]	Light from the flash is reflected from the subject to an auto external flash sensor and flash output adjusted automatically.	
[Distance- priority manual]	Choose the distance to the subject; flash output will be adjusted automatically.	
[Manual]	Choose the flash level manually.	
[Repeating flash]	The flash fires repeatedly during the exposure, producing a multiple-exposure effect.	

Wireless Flash Options

Adjust settings for simultaneous wireless control of multiple remote flash units. This option is available only when an SB-5000 or SB-500 flash unit or a WR-R11a or WR-R10 wireless remote controller is mounted on the camera.



Option		Description
		The remote flash units are controlled using low- intensity flashes emitted by the master flash (印453).
((1	[Radio AWL]	The remote flash units are controlled by radio signals from a WR-R11a/WR-R10 attached to the camera (\Box 439).
[Off]	-	Remote flash photography disabled.

Remote Flash Control

Choose the remote flash control mode. Flash options can be adjusted in the flash control display; the options available vary with the option selected for [**Remote flash control**].

Option	Description	
[Group flash]	Choose a separate flash control mode for each group of remote flash units (^[]] 444, 454).	
[Quick wireless control]	Choose the balance between groups A and B and adjust output for group C manually (\Box 447, 457).	
[Remote repeating]	The flash units fire repeatedly while the shutter is open, producing a multiple-exposure effect (\Box 450, 460).	

Radio Remote Flash Info

View the flash units currently controlled via radio AWL.

۵	Flash control		5
-	Radio remote	flash info	
1	A SB-5000		
Þ			
Y			
۵			
⇒			ONDone

Focus Mode

MENU button 🔿 🖸 photo shooting menu

Control how the camera focuses. For more information, see "Choosing a Focus Mode" (\Box 110), part of the section on "Focus" in the "Shooting Settings" chapter.

AF-Area Mode

MENU button 🔿 🔿 photo shooting menu

Choose how the camera selects the focus point for autofocus. For more information, see "Choosing an AF-Area Mode" (\Box 113), part of the section on "Focus" in the "Shooting Settings" chapter.

AF Subject Detection Options

MENU button 🔿 🗖 photo shooting menu

Choose the type of subject to which the camera gives priority when focusing using autofocus. For more information, see "Choosing a Subject Type for Autofocus" (C 119), part of the section on "Focus" in the "Shooting Settings" chapter.

Vibration Reduction

MENU button 🔿 🖸 photo shooting menu

Choose whether to enable vibration reduction. The options available vary with the lens.

Option		Description	
(a)ON	Image: Normal Choose for enhanced vibration reduction when photographing static subjects.		
(&)SPT	[Sport]	Choose when photographing athletes and other subjects that are moving rapidly and unpredictably.	
[Off]	1	Vibration reduction is disabled.	

Cautions: Using Vibration Reduction

- Vibration reduction may be unavailable with some lenses.
- We recommend that you wait for the image in the display to stabilize before shooting.
- When [Normal] is selected for lenses that support vibration reduction, the image in the viewfinder may jiggle before the shutter is released, but this is a natural consequence of how vibration reduction is performed and does not indicate a malfunction. [Sport] or [Off] can be used should you find the motion distracting.
- [Normal] or [Sport] is recommended for panning shots. In [Normal] and [Sport] modes, vibration reduction applies only to motion that is not part of the pan. If the camera is panned horizontally, for example, vibration reduction will be applied only to vertical shake.

- [Normal] and [Sport] are also recommended if the camera is mounted on a tripod or monopod. Note, however, that [Off] may be a better choice with some tripods depending on shooting conditions. Settings may vary from lens to lens; consult the lens documentation for more information.
- If an F mount lens with a vibration reduction switch is attached via an optional FTZ II/FTZ mount adapter, [Vibration reduction] will be grayed out and unavailable. Use the lens switch for vibration reduction.

Auto Bracketing

MENU button 🔿 🖸 photo shooting menu

Bracketing automatically varies exposure, flash level, Active D-Lighting (ADL), or white balance slightly with each shot, "bracketing" the current value. For more information, see "Auto Bracketing" (CL 177) in the "Shooting Settings" chapter.

Multiple Exposure

MENU button 🔿 🔿 photo shooting menu

Record two to ten NEF (RAW) exposures as a single photograph.

Option	Description	
[Multiple exposure mode]	 [On (series)]: Take a series of multiple exposures. To end multiple exposure photography, select [Multiple exposure mode] again and choose [Off]. [On (single photo)]: End multiple exposure photography after creating a single multiple exposure. [Off]: End multiple exposure photography. 	
[Number of shots]	Choose the number of exposures that will be combined to form a single photograph.	

Option	Description		
[Overlay mode]	 [Add]: The exposures are overlaid without modification; gain is not adjusted. [Average]: Gain is adjusted before the exposures are overlaid. The gain for each exposure is equal to 1 divided by the total number of exposures taken. For example, in a photo made by combining two exposures, the gain for each exposure will be set to 1/2, while in a photo combining three exposures, gain will be set to 1/3. [Lighten]: The camera compares the pixels in each picture and uses only the brightest. [Darken]: The camera compares the pixels in each picture and uses only the darkest. 		
[Save individual pictures (RAW)]	 [ON]: Save both the multiple exposure and the shots that make it up; the pictures are saved in NEF (RAW) format. [OFF]: Discard the individual shots and save only the multiple exposure. 		
[Overlay shooting]	If [ON] is selected, earlier exposures will be superimposed on the view through the lens. The earlier exposures aid composition of the next shot.		
[Select first exposure (RAW)]	Choose the first exposure from the NEF (RAW) pictures on the memory card.		

Creating a Multiple Exposure

Highlight [Multiple exposure] in the photo shooting menu and press [®].

2 Choose an option for [Multiple exposure mode].

- Highlight [Multiple exposure mode] and press ().
- Highlight a multiple exposure mode using ④ or ⊕ and press ֎.
- If [On (series)] or [On (single photo)] is selected, an icon will appear in the display.

3 Choose a value for [Number of shots] (number of exposures).

- Highlight [Number of shots] and press ③.
- Choose the number of exposures using
 Or (a) and press (b).





PHOTO SHOOTING MENU

ject detection options

n reduction

AF-S

[11]

d,

AE

0

Focus mode

area mode



4 Select an [Overlay mode].

- Highlight [Overlay mode] and press ().
- Highlight an option using ⊕ or ⊕ and press ⊛.



5 Choose a setting for [Save individual pictures (RAW)].

To save both the multiple exposure and the shots that make it up, select [**ON**]; the individual shots are saved in NEF (RAW) format. To save only the multiple exposure, select [**OFF**].

Multiple exposure	[5
Multiple exposure mode		
Number of shots		
Overlay mode	AVG	
Save individual pictures (RAW)	OON)
Overlay shooting	OON)
Select first exposure (RAW)		

6 Choose an option for [Overlay shooting].

Select [**ON**] to superimpose earlier exposures on the view through the lens. You can use the earlier exposures as a guide when composing subsequent shots.

7 Choose an option for [Select first exposure (RAW)].

- To choose the first exposure from existing NEF (RAW) photos, highlight [Select first exposure (RAW)] and press
 .
- Highlight the desired picture using the multi selector.
- \bullet To view the highlighted picture full screen, press and hold the $\ensuremath{\mathfrak{P}}$ button.
- After highlighting the desired picture, press ®.





8 Start shooting.

• Take the selected number of shots. If you used [**Select first exposure (RAW**)] to select an existing NEF (RAW) picture as the first exposure in Step 7, shooting will start from the second exposure.



- Once you have taken the selected number of shots, the pictures will be overlaid to create a multiple exposure. Multiple exposures are recorded in JPEG format regardless of the option selected for image quality.
- If [On (series)] is selected for [Multiple exposure mode], you can continue to take additional multiple exposures until [Off] is selected.
- If [On (single photo)] is selected, the camera will exit multiple exposure mode once the number of shots selected in Step 3 has been taken.

() () ()	E (175	() ()	BB(AG	ntif Ela Xollis El
8		۰		
	1/125	PS. 6	4170 100	i 19777 [2.82]

I The i Menu

Pictures can be viewed by pressing the \mathbf{E} button while a multiple exposure is in progress. The most recent shot in the current multiple exposure is indicated by a \mathbf{E} icon; pressing the \mathbf{i} button when this icon is present displays the multiple exposure \mathbf{i} menu.



- Highlight items and press ® to select.
- You also have the option of using touch controls after pressing the *i* button.

Option	Description
[View progress]	View a preview created from the exposures recorded to the current point.
[Retake last exposure]	Retake the most recent exposure.
[Save and exit]	Create a multiple exposure from the exposures taken to current point.
[Discard and exit]	 Exit without recording a multiple exposure. If [ON] is selected for [Save individual pictures (RAW)], the individual exposures will be saved separately.

Cautions: Multiple Exposure

- If you use the menus or view pictures in the display while shooting a multiple exposure, remember that shooting will end and the multiple exposure will be recorded if no operations are performed for about 40 seconds (or in the case of menus, about 90 seconds). The time available to record the next exposure can be extended by choosing longer times for Custom Setting c3 [Power off delay] > [Playback] or [Menus].
- Multiple exposures may be affected by "noise" in the form of randomlyspaced bright pixels, fog, or lines.
- In continuous shooting modes, the camera records all exposures in a single burst. If [**On (single photo**)] is selected, multiple exposure shooting will end after the first multiple exposure is recorded. If [**On (series**)] is selected, an additional multiple exposure will be recorded each time the shutterrelease button is pressed.
- In self-timer mode, the interval between each shot in the exposure is selected using Custom Setting c2 [Self-timer] > [Interval between shots]. Regardless of the value selected for the c2 [Number of shots] option, shooting will however end after the number of shots selected for the multiple exposure.
- Multiple exposures may end if settings are changed while shooting is in progress.
- Shooting settings and photo info for multiple exposure photographs are those for the first exposure.
- Do not remove or replace the memory card while a multiple exposure is in progress.
- Memory cards cannot be formatted while a multiple exposure is in progress. Some menu items will be grayed out and unavailable.

Multiple Exposure: Restrictions

Multiple exposure cannot be combined with some camera features, including:

- video recording,
- high-speed frame capture,
- bracketing,
- HDR overlay,
- interval-timer photography,
- · time-lapse video recording, and
- focus shift.

Ending Multiple Exposures

To end a multiple exposure before the specified number of exposures have been taken, select [**Off**] for multiple exposure mode. A multiple exposure will be created from the exposures that have been recorded to that point (if [**Average**] is selected for [**Overlay mode**], gain will be adjusted to



reflect the number of exposures actually recorded).

The multiple exposure will also end if:

- the standby timer expires after the first exposure has been taken, or
- you press the button followed by the i button and select either
 [Save and exit] or [Discard and exit]


HDR Overlay

MENU button 🔿 🔿 photo shooting menu

Used with high contrast subjects, High Dynamic Range (HDR) preserves details in highlights and shadows by combining two shots taken at different exposures. Use with high-contrast scenes and other subjects to preserve a wide range of details, from highlights to shadows.



Option	Description
[HDR mode]	 [On (series)]: Take a series of HDR photographs. To end HDR photography, select [HDR mode] again and choose [Off]. [On (single photo)]: End HDR photography after recording a single HDR photograph. [Off]: End HDR photography.
[HDR strength]	Adjust HDR strength. If [Auto] is selected, the camera will automatically adjust HDR strength to suit the scene.
[Save individual pictures (RAW)]	Choose [ON] to save each of the individual shots used to create the HDR picture; the shots are saved in NEF (RAW) format.

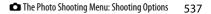

Taking HDR Photographs

We recommend that you use the matrix metering option when shooting with HDR.

1 Highlight [HDR overlay] in the photo PHOTO SHOOTING MENU shooting menu and press (). AF-area mode [11] piect detection options . ion reduction to bracketing AE\$ OFF 0FF 2 Select an [HDR mode]. 0 HDR overlag 0 5 • Highlight [HDR mode] and press (). HDR strength Save individual pictures (RAW) • Highlight one of the following options HDR overlay 0 using 🕙 or 🝚 and press 🐵. HDR mode On (series) On (single photo)

Option		Description
ONS	[On (series)]	Take a series of HDR photographs. HDR shooting will continue until you select [Off] for [HDR mode].
[On (single photo)]		Normal shooting will resume after you have taken a single HDR photograph.
[Off]		Proceed without taking additional HDR photographs.

• If [On (series)] or [On (single photo)] is selected, an icon will appear in the display.

- HDR overlay HDR mode • Highlight [HDR strength] and press (). **AUTO** OFF vidual pictures (RAW)
- Highlight an option using 🕙 or 🕞 and press ®.

3 Choose an [HDR strength].

- If [Auto] is selected, the camera will automatically adjust HDR strength to suit the scene.
- - High Normal Low





4 Choose a setting for [Save individual pictures (RAW)].

Choose [**ON**] to save each of the individual shots used to create the HDR picture; the shots are saved in NEF (RAW) format.

5 Frame the photograph, focus, and shoot.

- The camera takes two exposures when the shutter-release button is pressed all the way down.
- "Busy" will flash in the control panel while the pictures are combined. No photographs can be taken until recording is complete.
- If [**On** (series)] is selected for [**HDR** mode], you can continue to take HDR photographs until [**Off**] is selected.
- If [**On (single photo**)] is selected, HDR will turn off automatically after a single shot.
- HDR photographs are recorded in JPEG format regardless of the option selected for image quality.





Cautions: HDR Photography

- The edges of the picture will be cropped out.
- The desired results may not be achieved if the camera or subject moves during shooting. Use of a tripod is recommended.
- Depending on the scene, you may notice shadows around bright objects or halos around dark objects. In other cases, the effect produced by HDR may not be particularly noticeable.
- Uneven shading may be visible with some subjects.
- When spot or center-weighted metering is selected, an [HDR strength] setting of [Auto] is equivalent to [Normal].
- Optional flash units will not fire.
- In continuous release modes, only one photograph will be taken each time the shutter-release button is pressed all the way down.
- Shutter speeds of "Bulb" and "Time" are not available.

MDR: Restrictions

HDR cannot be combined with some camera features, including:

- · photo flicker reduction,
- high-speed frame capture,
- bracketing,
- multiple exposures,
- interval-timer photography,
- time-lapse video recording, and
- focus shift.



Interval Timer Shooting

MENU button 🔿 🖸 photo shooting menu

Take photographs at the selected interval until the specified number of shots has been recorded. When using the interval timer, select a release mode other than self-timer or high-speed frame capture.

Option	Description
[Start]	Start interval timer shooting. Shooting will begin either after about 3 s ([Now] selected for [Choose start day/ time]) or at a selected date and time ([Choose day/ time]). Shooting will continue at the selected interval until all shots have been taken.
[Choose start day/time]	Choose a start option. Select [Now] to start shooting immediately, [Choose day/time] to start shooting at a chosen date and time.
[Interval]	Specify the interval between shots in hours, minutes, and seconds.
[Intervals×shots/ interval]	Choose the number of intervals and the number of shots per interval.
[Exposure smoothing]	 Selecting [ON] allows the camera to adjust exposure to match the previous shot. Large changes in subject brightness during shooting may result in apparent variations in exposure. This can be addressed by shortening the interval between shots. Exposure smoothing will not take effect in mode M if [OFF] is selected for [ISO sensitivity settings] > [Auto ISO sensitivity control] in the photo shooting menu.

Option	Description
[Interval priority]	 [ON]: Enable interval priority to ensure that frames shot in modes P and A are taken at the chosen interval. Flash photography is disabled. Release priority is enabled regardless of the options selected for Custom Settings a1 [AF-C priority selection] and a2 [AF-S priority selection]. If [ON] is selected for [ISO sensitivity settings] > [Auto ISO sensitivity control] and the time chosen for [Minimum shutter speed] is longer than the interval, the time selected for the interval will take priority over the selected shutter speed. [OFF]: Disable interval priority to ensure that photos are correctly exposed.
[Focus before each shot]	If [ON] is selected, the camera will focus between shots. Select [OFF] to focus at a fixed distance.

Option	Description
[Options]	 Combine interval-timer photography with other options. [AE bracketing]: Perform exposure bracketing during interval-timer photography. [Time-lapse video]: Use the photos taken during interval-timer photography to create a time-lapse video with an aspect ratio of 16:9. The camera saves both the photos and the time-lapse video. Selecting [1:1 (24×24)] for [Image area] > [Choose image area] in the photo shooting menu disables the shutter release. Videos created using [Time-lapse video] are recorded in the [sRGB] color space, regardless of the option selected for [Color space] in the photo shooting menu. [Off]: Do not perform additional operations during interval-timer photography.
[Starting storage folder]	 Highlight options and press [®] or ^(*) to select (^I) or deselect (^I). [New folder]: A new folder is created for each new sequence. [Reset file numbering]: File numbering is reset to 0001 whenever a new folder is created.

Interval-Timer Photography

🗹 Before Shooting

- Take a test shot at current settings.
- Before proceeding, select [**Time zone and date**] in the setup menu and make sure that the camera clock is set to the correct time and date.
- To ensure that shooting is not interrupted, use a fully-charged battery, the supplied charging AC adapter, or an optional AC adapter and power connector.

1	Highlight [Interval timer shooting] in
	the photo shooting menu and press ().

۵	PHOTO SHOOTING MENU		0
•	AF subject detection options		
,	Vibration reduction	(@)SPT	
	Auto bracketing	AE\$	
	Multiple exposure	0FF	
	HDR overlay		
	Interval timer shooting	0FF	>
	Time-lapse video	0FF	>

2 Adjust interval timer settings.

Choose the start day and time.



Choose day/time

Interval timer shooting

Choose start day/time

Highlight [**Choose start day/time**] and press ③.

Highlight an option and press ®.

5

- To start shooting immediately, select [Now].
- To start shooting at a chosen date and time, select [Choose day/ time]. Choose the date and time and press ®.
- Choose the interval between shots.



Highlight [**Interval**] and press **(**.



Choose an interval (in hours, minutes, and seconds) and press \circledast .

• Choose the number of shots per interval.



- In single frame release mode, the photographs for each interval will be taken at the rate for continuous high-speed release mode.
- Enable or disable exposure smoothing.



to select [ON] or [OFF]. - Selecting [ON] allows the camera to adjust exposure to match the previous shot. • Choose an interval priority option.



Highlight [Interval priority] and press () to select [ON] or [OFF].

• Choose whether the camera focuses between shots.



Highlight [Focus before each shot] and press () to select [ON] or [OFF].

 - If [ON] is selected for [Focus before each shot], the camera will focus before each shot according to the option currently selected for focus mode.

Choose additional options.

Interval timer shooting	
Exposure smoothing	ON
Interval priority	() OFF)
Focus before each shot	() OFF)
Options	OFF :
Starting storage folder	
End day/time	
	Pause→0

Highlight [**Options**] and press **()**.

Interval timer shooting	5
Options	
AE bracketing	>
Time-lapse video	
Off	

Highlight [AE bracketing] or [Timelapse video] and press @.

- If you selected [AE bracketing], choose values for [Number of shots] and [Increment]; if you selected [Time-lapse video], choose settings for [Video file type], [Frame size/frame rate], and [Destination].
- Choose starting folder options.



Highlight [**Starting** storage folder] and press **()**.



After highlighting the desired options and pressing \circledast to turn them on (\square) or off (\square), press \circledast .

3 Highlight [Start] and press **S**.

- If [Now] was selected for [Choose start day/time] in Step 2, shooting will start after about 3 s.
- Otherwise shooting will start at the time selected for [Choose start dav/time] > [Choose dav/time].
- The display turns off during shooting.
- Shooting will continue at the selected interval until all shots have been taken.

V During Shooting

- A his icon is displayed in the control panel during interval timer photography. If [Time-lapse video] is selected for [**Options**], a 🍋 icon will also be displayed.
- If the display is turned on by pressing the shutter-release button halfway, the message [Interval timer shooting] will be displayed and the icon will flash. If [Time-lapse video] is selected for [Options], a 🐂 icon will also be displayed.

al timer shooting

Interval timer shooting	• -
Start	
Choose start day/time	10/15 10:05 >
Interval	00:01'00" >
Intervals×shots/interval	3x2 >
Exposure smoothing	ON
End day/time	
	Pause→00



Pausing Interval-Timer Photography

Interval-timer photography can be paused between intervals by pressing ⁽¹⁾ or by selecting [**Interval timer shooting**] in the photo shooting menu, highlighting [**Pause**], and pressing ⁽²⁾. Note that the menus may not be displayed when the **MENU** button is pressed if the time selected for [**Interval**] is very short.

• If [**Time-lapse video**] is selected for [**Options**], pressing [®] between intervals will end interval-timer photography.

Resuming Interval-Timer Photography

Interval timer shooting can be resumed as described below.

• To resume shooting immediately:

Interval timer shooting		5
Restart		
Off		
Restart option		>
Exposure smoothing		ON
End day/time		
Pause		
Highlight [Postart	1

Highlight [Restart] and press [®].

• To resume shooting at a specified time:



Highlight [Restart option] and press (), then highlight [Choose day/time] and press ().



Choose a starting date and time and press [∞].

Interval timer shooting		5
Restart		
Off		
Restart option		>
Exposure smoothing	0	N
End day/time		
Pauco		

Highlight [**Restart**] and press ®.

Ending Interval-Timer Photography

To end interval-timer photography before all the photos are taken, select [Interval timer shooting] in the photo shooting menu, highlight [Off], and press . Note that the menus may not be displayed when the MENU button is pressed if the time selected for [Interval] is very short. In this case you will need to press . to pause interval-timer photography and then select [Interval timer shooting] in the photo shooting menu, highlight [Off], and press .

Cautions: Interval-Timer Photography

- Choose an interval longer than the time needed to take the selected number of shots at the predicted shutter speed. Note that during actual interval-timer photography, the camera must not only take shots at the selected interval but must also have sufficient time to complete the exposures and perform such tasks as processing the photographs. If the interval is too short to take the selected number of photos, the camera may skip to the next interval without shooting.
- If the interval is too short, the total number of shots taken may be less than that selected for [Intervalsxshots/interval].
- If you are using a flash, choose an interval longer than the time needed for the flash to charge. If the interval is too short, the flash may fire at less than the power needed for full exposure.
- If shooting cannot proceed at current settings—for example, if shutter speed is set to "Bulb" or "Time", the [Interval] is [00:00'00"], or the start time is in less than a minute—a warning will be displayed.
- If [Time-lapse video] is selected for [Options], the standby timer will not expire during interval-timer photography, regardless of the option selected for Custom Setting c3 [Power off delay] > [Standby timer].
- If [**Time-lapse video**] is selected for [**Options**] at a frame size 7680 × 4320, interval-timer photography will not start if:
 - [DX (24×16)] or [1:1 (24×24)] is selected for [Image area] > [Choose image area] in the photo shooting menu, or
 - a DX lens is attached.

- If the memory card is full, the interval timer will remain active but no pictures will be taken. Insert another memory card and resume shooting (D551).
- Depending on memory card performance and shooting conditions, shooting may end before the selected number of shots have been taken or the selected number of intervals is complete.
- Interval timer shooting will pause if:
 - the camera is turned off and then on again (when the camera is off, batteries and memory cards can be replaced without ending intervaltimer photography), or
 - self-timer or high-speed frame capture is selected for release mode.
- Changing camera settings while the interval timer is active may cause shooting to end.

🔽 Release Mode

Regardless of the release mode selected, the camera will take the specified number of shots at each interval.

Adjusting Settings Between Shots

Pictures can be viewed and shooting and menu settings adjusted between shots. Note, however, that the display will turn off and shooting will resume a few seconds before the next shot is taken.

🔽 Interval-Timer Photography: Restrictions

Interval-timer photography cannot be combined with some camera features, including:

- video recording,
- long time-exposures ("Bulb" or "Time"),
- the self-timer,
- high-speed frame capture,
- bracketing,
- multiple exposures,
- HDR overlay, and
- focus shift.

🔽 Interval Timer Settings

Turning the camera off or selecting a new release mode does not affect interval-timer photography settings.

🔽 Shooting Menu Banks

You cannot change or reset shooting menu banks while interval-timer photography is in progress.

Time-Lapse Video

MENU button 🔿 🖸 photo shooting menu

The camera automatically takes photos at selected intervals to create a time-lapse video.

Option	Description
[Start]	Start time-lapse recording. Shooting starts after about 3 s and continues at the interval selected for [Interval] for the time selected for [Shooting time].
[Interval]	Choose the interval between shots, in minutes and seconds.
[Shooting time]	Choose how long the camera will continue to take pictures, in hours and minutes.
[Exposure smoothing]	 Selecting [ON] smooths abrupt changes in exposure. Large changes in subject brightness during shooting may result in apparent variations in exposure. This can be addressed by shortening the interval between shots. Exposure smoothing will not take effect in mode M if [OFF] is selected for [ISO sensitivity settings] > [Auto ISO sensitivity control] in the photo shooting menu.
[Choose image area]	Choose the image area for time-lapse videos from [FX] and [DX].
[Video file type]	Choose the video file type for the final video.

Option	Description	
[Frame size/ frame rate]	Choose the frame size and rate for the final video. The options available vary with the setting chosen for [Video file type].	
 [ON]: Enable interval priority to ensure that framess in modes P and A are taken at the chosen interval. Release priority is enabled regardless of the optic selected for Custom Settings a1 [AF-C priority selection] and a2 [AF-S priority selection]. If [ON] is selected for [ISO sensitivity settings] > [Auto ISO sensitivity control] and the time chose for [Minimum shutter speed] is longer than the interval, the time selected for the interval will tak priority over the selected shutter speed. [OFF]: Disable interval priority to ensure that phot are correctly exposed. 		
[Focus before each shot]	If [ON] is selected, the camera will focus between shots.	
[Destination]	Choose the slot used to record time-lapse videos when two memory cards are inserted.	

Recording Time-Lapse Videos

Before Shooting

- Time-lapse videos are shot using the video crop.
- Take test shots and check the results in the monitor.
- Before proceeding, select [**Time zone and date**] in the setup menu and make sure that the camera clock is set to the correct time and date.
- To ensure that shooting is not interrupted, use a fully-charged battery, the supplied charging AC adapter, or an optional AC adapter and power connector.

Highlight [Time-lapse video] in the photo shooting menu and press .



2 Adjust time-lapse video settings. • Choose the interval between shots.



Highlight [Interval] and press ().



Choose an interval (in minutes and seconds) and press **(8)**.

- Choose an interval longer than the slowest anticipated shutter speed.
- Choose the total shooting time.



- The maximum shooting time is 23 hours and 59 minutes.

• Enable or disable exposure smoothing.



Highlight [Exposure smoothing] and press () to select [ON] or [OFF].

- Selecting [ON] smooths abrupt changes in exposure.
- Choose the image area.



Highlight [**Choose image area**] and press ③.



Highlight an option and press [®].

• Choose a video file type.



Highlight [**Video file type**] and press ().



Highlight an option and press ®.

• Choose the frame size and rate.



 Time-lapse video
 つ

 Frame size/Frame rate
 H265 8-bit (MOV)

 運営:
 3840-2160;
 60p

 運営:
 3840-2160;
 50p

 運営:
 3840-2160;
 50p

 運営:
 3840-2160;
 50p

 運営:
 3840-2160;
 30p

 運営:
 3840-2160;
 25p

 運営:
 3840-2160;
 24p

Highlight [Frame size/ frame rate] and press ③. Highlight an option and press ®.

Choose an interval priority option.



Highlight [Interval priority] and press () to select [ON] or [OFF].

• Choose whether the camera focuses between shots.



Highlight [Focus before each shot] and press () to select [ON] or [OFF].

 - If [ON] is selected for [Focus before each shot], the camera will focus before each shot according to the option currently selected for focus mode.

Choose a destination.



Highlight [**Destination**] and press **()**.



Highlight the slot that will be used to record time-lapse videos when two memory cards are inserted and press **(**).

3 Highlight [Start] and press ®.

- Shooting starts after about 3 s.
- The display turns off during shooting.
- The camera takes pictures at interval selected for [Interval] for the time selected for [Shooting time] in Step 2.

V During Shooting

• A 🔅 icon is displayed in the control panel during shooting.

 If the display is turned on by pressing the shutter-release button halfway, the message [Interval timer shooting] will be displayed and the 🗯 icon will flash.







Ending Shooting

To end shooting before all the photos are taken, press [®] or select [**Time-lapse video**] in the photo shooting menu, highlight [**Off**], and press [®]. Note that the menus may not be displayed when the **MENU** button is pressed if the time selected for [**Interval**] is very short.

• A video will be created from the frames shot to the point where shooting ended and normal photography will resume.

🔽 Calculating the Length of the Final Video

- The total number of frames in the final video can be calculated by dividing the shooting time selected in Step 2 by the interval, rounding up, and adding 1.
- The length of the final video can then be calculated by dividing the number of shots by the frame rate selected for [Frame size/frame rate] (for example, a 48-frame video recorded with [1920×1080; 24p] selected for [Frame size/frame rate] will be about two seconds long).



Frame size/frame rate Length recorded/maximum length Memory card indicator

🔽 Picture Review

The [] button cannot be used to view pictures while shooting is in progress. The current frame will however be displayed for a few seconds after each shot if [**On**] or [**On (monitor only**]] is selected for [**Picture review**] in the playback menu. Note that other playback operations cannot be performed while the frame is displayed. The current frame may not be displayed if the interval is very short.

🔽 Cautions: Time-Lapse Videos

- Sound is not recorded with time-lapse videos.
- The shutter speed and the time needed to record the picture to the memory card may vary from shot to shot. As a result, camera may be unable to take shots at the selected interval.
- Shooting will not begin if a time-lapse video cannot be recorded at current settings, for example if:
 - the value selected for [Interval] is longer than that selected for [Shooting time],
 - [00:00'00"] is selected for [Interval] or [Shooting time], or
 - the memory card is full.
- When 7680 × 4320 is selected for [Frame size/frame rate], shooting will not start if a DX lens is attached or [DX] selected for [Choose image area].
- The 🕞 button cannot be used to view pictures while time-lapse recording is in progress.
- For consistent coloration, choose a white balance setting other than □ A [Auto] or ★A [Natural light auto] when recording time-lapse videos.
- Regardless of the option selected for Custom Setting c3 [Power off delay] > [Standby timer], the standby timer will not expire while recording is in progress.
- Shooting may end if camera controls are used, settings are changed, or an HDMI cable is connected. A video will be created from the frames shot to the point where shooting ended.
- The following end shooting without a beep sounding or a video being recorded:
 - Disconnecting the power source
 - Ejecting the memory card

🔽 Adjusting Settings Between Shots

Shooting and menu settings can be adjusted between shots. Note, however, that the monitor will turn off approximately 2 s before the next shot is taken.

Time-Lapse Videos: Restrictions

Time-lapse video recording cannot be combined with some camera features, including:

- video recording,
- long time-exposures ("Bulb" or "Time"),
- the self-timer,
- high-speed frame capture,
- bracketing,
- multiple exposures,
- HDR overlay,
- interval-timer photography, and
- focus shift.

Focus Shift Shooting

MENU button 🔿 🔿 photo shooting menu

Focus shift automatically varies focus over a series of shots. Use it to take photos that will later be combined using focus stacking to create a single picture with increased depth of field. Before using focus shift, choose a focus mode of **AF-S** or **AF-C** and a release mode other than self-timer or high-speed frame capture.

Option	Description	
[Start]	Start shooting. The camera will take the selected number of shots, changing the focus distance by the selected amount with each shot.	
[No. of shots]	Choose the number of shots (maximum 300).	
[Focus step width]	Focus shift varies the focus distance over a series of photographs. Choose the amount the focus distance changes with each shot.	
[Interval until next shot]	 Choose the interval between shots, in seconds. Select [00] to take photos at up to about 5 fps. To ensure correct exposure when using a flash, choose an interval long enough for the flash to charge. 	
[First-frame exposure lock]	 [ON]: The camera locks exposure for all shots at the setting for the first frame. [OFF]: The camera adjusts exposure before each shot. 	
[Starting storage folder]	 Highlight options and press [®] or [®] to select (☑) or deselect (□). [New folder]: A new folder is created for each new sequence. [Reset file numbering]: File numbering is reset to 0001 whenever a new folder is created. 	

Focus Shift Photography

🗹 Before Shooting

- Take a test shot at current settings.
- To ensure that shooting is not interrupted, use a fully-charged battery, the supplied charging AC adapter, or an optional AC adapter and power connector.


1 Focus.

- During focus shift, the camera takes a series of shots starting from a selected focus position and continuing toward infinity. Given that shooting ends when infinity is reached, the starting focus position should be slightly in front of (i.e., closer to the camera than) the closest point on the subject.
- Do not move the camera after focusing.

2 Highlight [Focus shift shooting] in the photo shooting menu and press ().



3 Adjust focus shift settings.Choose the number of shots.

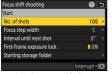


Highlight [**No. of shots**] and press **()**.



Choose the number of shots and press [™].

- The maximum number of shots is 300.
- We recommend taking more shots than you think you'll need. You can winnow them down during focus stacking.
- More than 100 shots may be required for photographs of insects or other small objects. On the other hand, only a few may be needed to photograph a landscape from front to back with a wide-angle lens.

Choose the amount the focus distance changes with each shot.

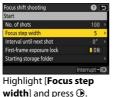



Choose a focus step width and press [∞].

- Press ① to reduce the focus step width, ③ to increase.
- Note that high settings increase the risk that some areas will be out of focus when the shots are stacked. A value of 5 or less is recommended.
- Try experimenting with different settings before shooting.
- Choose the interval until next shot.



Highlight [Interval until next shot] and press ().



Choose the interval between shots and press ⊛.

- Choose the interval between shots, in seconds.
- Select [00] to take photos at up to about 5 fps.
- To ensure correct exposure when using a flash, choose an interval long enough for the flash to charge. A setting of [**00**] is recommended when shooting without a flash.

• Enable or disable first-frame exposure lock.



Highlight [First-frame exposure lock] and press () to select [ON] or [OFF].

- [OFF] is recommended if lighting and other conditions will not change during shooting, [ON] when photographing landscapes and the like under variable lighting.
- Selecting [ON] locks exposure at the value for the first shot, ensuring that all photos have the same exposure. Large changes in subject brightness during shooting may however result in apparent variations in exposure. This can be addressed by selecting [OFF].

Choose starting folder options.



Highlight [Starting storage folder] and press ().



After highlighting the desired options and pressing ⊛ to turn them on (☑) or off (□), press ④.

4 Highlight [Start] and press ®.

- Shooting starts after about 3 s.
- The display turns off during shooting.
- The camera takes photographs at the selected interval, starting at the focus distance selected at the start of shooting

and progressing out toward infinity by the selected focus step distance with each shot.

• Shooting ends when the selected number of shots has been taken or focus reaches infinity.

Focus shift shooting	c (9
Start	
No. of shots	100 >
Focus step width	
Interval until next shot	
First-frame exposure lock	ON
Starting storage folder	
	Interrupt→08

Ending Focus Shift Photography

To end shooting before all shots have been taken, either:

- select [Focus shift shooting] in the photo shooting menu, highlight [Off], and press $\circledast,$ or
- press the shutter-release button halfway or press the ® button between shots.

During Shooting

A Fitus icon is displayed in the control panel during shooting.

Cautions: Focus Shift Photography

- The shutter speed and the time needed to record the picture may vary from shot to shot. As a result, the camera may be unable to take shots at the selected interval.
- Shooting ends when focus reaches infinity, and consequently depending on the focus position at the start of shooting, shooting may end before the selected number of shots has been taken.
- Regardless of the option selected for Custom Setting c3 [Power off delay] > [Standby timer], the standby timer will not expire while shooting is in progress.
- If you are using a flash, choose an interval longer than the time needed for the flash to charge. If the interval is too short, the flash may fire at less than the power needed for full exposure.
- If shooting cannot proceed at current settings, for example because shutter speed is set to "Bulb" or "Time", a warning will be displayed.
- Changing camera settings while focus shift photography is in progress may cause shooting to end.

Focus Shift Photography: Restrictions

Focus-shift photography cannot be combined with some camera features, including:


- video recording,
- · long time-exposures ("Bulb" or "Time"),
- the self-timer,
- high-speed frame capture,
- bracketing,
- multiple exposures,
- HDR overlay,
- interval-timer photography, and
- time-lapse video recording.

Aperture

Given that pictures shot at very small apertures (high f-numbers) may lack definition, we recommend that you choose apertures wider (f-numbers lower) than f/8–f/11.

Close-ups

Because focus depth is reduced at short focus distances, we recommend choosing smaller focus steps and increasing the number of shots when photographing subjects close to the camera.

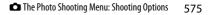

ℜ The Video Recording Menu: Video Recording Options

To view the video recording menu, select the **🐙** tab in the camera menus.

0	VIDEO RECORDING MENU		
-	hooting menu bank	А	>
-	xtended menu banks	OFF	
1	Storage folder	NCZ_9	
Þ	File naming		
Y	Destination		
۲	Video file type	H 265	
⇒	Frame size/frame rate	2160	

The video recording menu contains the following items:

ltem		ltem	
[Shooting menu bank]	577	[Auto distortion control]	584
[Extended menu banks]	577	[Video flicker reduction]	585
[Storage folder]	577	[Metering]	586
[File naming]	578	[Focus mode]	586
[Destination]	578	[AF-area mode]	586
[Video file type]	578	[AF subject detection	587
[Frame size/frame rate]	579	options]	
[Image area]	579	[Vibration reduction]	587
[ISO sensitivity settings]	580	[Electronic VR]	587
[White balance]	581	[Microphone sensitivity]	588
[Set Picture Control]	581	[Attenuator]	589
[Manage Picture Control]	581	[Frequency response]	589
[HLG quality]	582	[Wind noise reduction]	589
[Active D-Lighting]	583	[Mic jack plug-in power]	590
[High ISO NR]	583	[Headphone volume]	590
[Vignette control]	584	[Timecode]	591
[Diffraction compensation]	584	[External rec. cntrl (HDMI)]	592

"Video Recording Menu Defaults" (2468).

Shooting Menu Bank

MENU button 🔿 🐙 video recording menu

Select a shooting menu bank ("A" through "D"). More information is available in the section devoted to the [**Shooting menu bank**] item in the photo shooting menu (^[1]493).

Extended Menu Banks

MENU button 🔿 🖷 video recording menu

Select **[ON]** to include exposure settings in the information recorded in each of the four shooting menu banks. More information is available in the section devoted to the **[Extended menu banks**] item in the photo shooting menu (\$\$\sum 496\$).

Storage Folder

MENU button 🔿 🖷 video recording menu

Choose the folder in which subsequent pictures will be stored. More information is available in the section devoted to the [**Storage folder**] item in the photo shooting menu (□497).

"Storage Folder"

Changes to [**Storage folder**] in the photo shooting menu apply in the video recording menu and *vice versa*.

File Naming

MENU button 🔿 🗮 video recording menu

Choose the three-letter prefix used in naming the files in which videos are stored; the default prefix is "DSC" (\Box 502).

Destination		
	MENU button 🔿 🗮 video recording me	enu

Choose the slot to which videos are recorded when two memory cards are inserted.

- The menu shows the time available on each card.
- Recording ends automatically when no time remains on the current card.

Video File Type

MENU button 🔿 🗮 video recording menu

Choose the video file type. For more information, see the section on "Video File Types" (D214) in the "Video Recording" chapter.

Frame Size/Frame Rate

MENU button 🔿 🖷 video recording menu

Choose the video frame size (in pixels) and frame rate. For more information, see the section on "Video Frame Size and Rate Options" (D216) in the "Video Recording" chapter.

Image Area

MENU button 🔿 🦷 video recording menu

Choose a video crop. For more information, see the section on "Video Image Area Options" (D218) in the "Video Recording" chapter.



ISO Sensitivity Settings

MENU button 🔿 🖷 video recording menu

Adjust the following ISO sensitivity settings for use in video mode.



Option	Description
[Maximum sensitivity]	 Choose the upper limit for auto ISO sensitivity control from values between ISO 200 and Hi 2.0. The selected value serves as the upper limit for ISO sensitivity in modes P, S, and A and when [ON] is selected for [Auto ISO control (mode M)] in mode M.
[Auto ISO control (mode M)]	 [ON]: Enable auto ISO sensitivity control in mode M. [OFF]: Use the value selected for [ISO sensitivity (mode M)]. Regardless of the option selected, auto ISO sensitivity control is used in modes other than M.
[ISO sensitivity (mode M)]	Choose the ISO sensitivity for mode M from values between ISO 64 and Hi 2.0.

Cautions: Auto ISO Sensitivity Control

- At high ISO sensitivities, "noise" (randomly-spaced bright pixels, fog, or lines) may increase.
- At high ISO sensitivities, the camera may have difficulty focusing.
- The foregoing can be prevented by choosing a lower value for [ISO sensitivity settings] > [Maximum sensitivity].

White Balance

MENU button 🔿 🐙 video recording menu

Choose the white balance for videos. Select [**Same as photo settings**] to use the option currently selected for photos (\square 158).

Set Picture Control

MENU button 🔿 🖷 video recording menu

Choose a Picture Control for videos. Select [**Same as photo settings**] to use the option currently selected for photos (\square 192).

Manage Picture Control

MENU button 🔿 🖷 video recording menu

Save modified Picture Controls as custom Picture Controls (2199).



HLG Quality

MENU button 🔿 🗮 video recording menu

Adjust HLG video image processing options for use when [**HLG**] is chosen as the tone mode for [**Video file type**] > [**H.265 10-bit (MOV**]] in the video recording menu.

Option	Description	
[Quick sharp]	Use [Quick sharp] to quickly adjust levels for balanced [Sharpening], [Mid-range sharpening], and [Clarity]. These parameters can also be adjusted individually.	
[Sharpening]	Control the sharpness of details and outlines.	
[Mid-range sharpening]	Adjust the sharpness of patterns and lines in the range between [Sharpening] and [Clarity].	
[Clarity]	Adjust overall sharpness and the sharpness of thicker outlines without affecting brightness or dynamic range.	
[Contrast]	Adjust contrast.	
[Saturation] Control the vividness of colors.		
[Hue]	Adjust hue.	

Active D-Lighting

MENU button 🔿 🖷 video recording menu

Preserve details in highlights and shadows, creating videos with natural contrast.

Option		Description		
set H*	[Extra high]			
eet H	[High]	Choose the amount of Active D-Lighting performed from (in order from high to low) [Extra high], [High], [Normal], and [Low].		
≊⊟ N	[Normal]			
eet L	[Low]			
[Off]		Active D-Lighting off.		

High ISO NR

MENU button 🔿 🗮 video recording menu

Reduce "noise" (randomly-spaced bright pixels) in videos recorded at high ISO sensitivities (22515).



Vignette Control

MENU button 🔿 🐙 video recording menu

Reduce vignetting in videos (2516).

Vignette Control

Changes to [**Vignette control**] in the photo shooting menu apply in the video recording menu and *vice versa*.

Diffraction Compensation

MENU button ➡ ♥ video recording menu

Choose whether to reduce diffraction in videos (2517).

Diffraction Compensation

Changes to [**Diffraction compensation**] in the photo shooting menu apply in the video recording menu and *vice versa*.

Auto Distortion Control

MENU button 🔿 🗮 video recording menu

Choose whether to reduce barrel and pin-cushion distortion in videos (\Box 517).

Auto Distortion Control

Changes to [Auto distortion control] in the photo shooting menu apply in the video recording menu and *vice versa*.

Video Flicker Reduction

MENU button 🔿 🗮 video recording menu

Reduce flicker and banding when shooting under fluorescent or mercury-vapor lighting during video recording. Choose [**Auto**] to allow the camera to automatically choose the correct frequency. If [**Auto**] fails to produce the desired results, select [**50 Hz**] or [**60 Hz**] according to the frequency of the local power supply. Choose [**50 Hz**] for areas with a 50 Hz power supply, [**60 Hz**] for areas with a 60 Hz power supply.

Cautions: [Video Flicker Reduction]

- If [Auto] fails to produce the desired results and you are unsure as to the frequency of the local power supply, test both the 50 and 60 Hz options and choose the one that produces the best results.
- Flicker reduction may not produce the desired results if the subject is very bright. If this is the case, try choosing a smaller aperture (higher f-number).
- Flicker reduction may fail to produce the desired results in modes other than **M**. If this is the case, select mode **M** and choose a shutter speed adapted to the frequency of the local power supply:
 - 50 Hz: 1/100 s, 1/50 s, 1/25 s
 - 60 Hz: 1/125 s, 1/60 s, 1/30 s



Metering

MENU button ➡ ♥ video recording menu

Choose how the camera meters exposure in video mode. [Spot metering] is not available in the video recording menu (¹¹⁵²⁰).

Focus Mode	
	MENU button 🔿 🗮 video recording menu
Choose a focus mode for video	o recording (🕮 110).

AF-Area	Mode
---------	------

MENU button 🔿 🗮 video recording menu

Choose an AF-area mode for video recording (2113).

AF Subject Detection Options

MENU button 🔿 🖷 video recording menu

Subject Detection

Choose the type of subject to which the camera gives priority when focusing in video mode (\Box 119).

AF When Subject Not Detected

Choose whether the camera focuses if unable to detect a subject of the type selected for [**Subject detection**] when [**Full-time AF**] is selected for focus mode.

- If [**ON**] is selected, the camera will initiate autofocus whether or not a subject of the selected type is detected.
- Select [**OFF**] to disable autofocus when no subject of the selected type is detected.

Vibration Reduction

MENU button 🔿 🗮 video recording menu

Adjust vibration reduction settings for video mode. Select [**Same as photo settings**] to use the option currently selected for photos (\Box 526).

Electronic VR

MENU button 🔿 🖷 video recording menu

Choose whether to enable electronic vibration reduction in video mode. Electronic vibration reduction is fixed at [**OFF**] at a frame size of 7680 \times 4320 and at frame rates of 120p or 100p.

Microphone Sensitivity

MENU button 🔿 🗮 video recording menu

Turn built-in or external microphones on or off or adjust microphone sensitivity.

Option	Description Microphone sensitivity is adjusted automatically.				
[Auto]					
[Manual]	Adjust microphone sensitivity manually. Choose from values of from [1] to [20]. The higher the value, the higher the sensitivity; the lower the value, the lower the sensitivity.				
[Microphone off] Turn sound recording off.					
 If the sound 	level is displayed in red, the	00m00s [j][29m59s]			

 If the sound level is displayed in red, the volume is too high. Reduce microphone sensitivity.



🔽 Videos Without Sound

Videos recorded with [Microphone off] selected for [Microphone sensitivity] are indicated by a 🕅 icon.



Attenuator

MENU button 🔿 🐙 video recording menu

Select [**ON**] to reduce microphone gain and prevent audio distortion when recording videos in loud environments.

Frequency Response

MENU button 🔿 🐙 video recording menu

Choose the range of frequencies to which built-in and external microphones respond.

Option		Description	
₩₩DE [Wide range]		Record a wide range of frequencies. Choose for everything from music to the bustling hum of a city street.	
WYOICE	[Vocal range]	Choose for human voices.	

Wind Noise Reduction

MENU button 🔿 🖷 video recording menu

Select [**ON**] to enable the low-cut filter, reducing noise produced by wind blowing over the built-in microphone. Note that other sounds may also be affected.

Selecting **[ON]** for **[Wind noise reduction]** has no effect on optional stereo microphones. Wind-noise reduction for optional stereo microphones that support this feature can be enabled or disabled using microphone controls.

Mic Jack Plug-in Power

MENU button 🔿 🗮 video recording menu

The camera does not provide power to external microphones when [**OFF**] is selected.

- To prevent noise from interference generated by the power supply, we recommend turning plug-in power [**OFF**] when using microphones that do not require plug-in power.
- For information on whether your microphone requires plug-in power, consult the manufacturer.

Headphone Volume

MENU button 🔿 🖷 video recording menu

Press ⊕ or ⊕ to adjust headphone volume.

Timecode

MENU button 🔿 🖷 video recording menu

Choose whether to record time codes giving the hour, minute, second, and frame number for each frame when shooting videos. Time codes are available only with videos recorded in MOV format.

Option	Description			
[Record timecodes]	 [On]: Record time codes. The time code appears in the shooting display. [On (with HDMI output)]: Time codes will be included with footage saved to external recorders connected to the camera via an HDMI cable. The camera supports Atomos SHOGUN, NINJA, and SUMO-series Monitor recorders. [Off]: Time codes are not recorded. 			
[Count-up method]	 [Record run]: Time codes are incremented only while recording is in progress. [Free run]: Time codes are incremented continuously. Time codes continue to be incremented while the camera is off. 			

Option	Description		
[Timecode origin]	 [Reset]: Reset the time code to 00:00:00.00. [Enter manually]: Enter the hour, minute, second, and frame number manually. [Current time]: Set the time code to the current time as reported by the camera clock. Before proceeding, select [Time zone and date] in the setup menu and make sure that the camera clock is set to the correct time and date. 		
[Drop frame]	Select [ON] to compensate for discrepancies between the frame count and the actual recording time at frame rates of 30 and 60 fps.		

🔽 Caution: HDMI Devices

Selecting [**On (with HDMI output**)] for [**Record timecodes**] may disrupt footage output to HDMI devices.

External Rec. Cntrl (HDMI)

MENU button 🔿 🗮 video recording menu


Selecting **[ON]** allows camera controls to be used to start and stop recording on the external recorder. For more information, see the section on "Recorders" (D 302) in the "Connecting to HDMI TVs and Recorders" chapter.

Custom Settings: Fine-Tuning Camera Settings

To view Custom Settings, select the \checkmark tab in the camera menus.



Custom Settings are used to customize camera settings to suit individual preferences. The Custom Settings menu is divided into two levels.

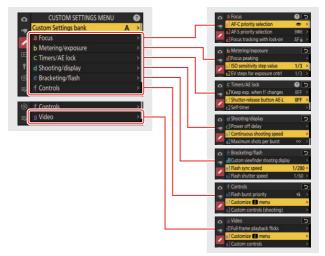

The following Custom Settings are available: 1

	ltem		ltem		
[Custom Settings bank]		597	b [Metering/exposure]		
a [Focus]			b1	[ISO sensitivity step	612
a1	[AF-C priority selection]	598	DI	value]	012
a2	[AF-S priority selection]	599	b2	[EV steps for exposure	612
a3	[Focus tracking with lock-on]	600	b3	cntrl] [Easy exposure	613
a4	[Focus points used]	601		compensation]	
a5	[Store points by orientation]	602	b4	[Matrix metering face detection]	613
a6	[AF activation]	604	b5	[Center-weighted area]	614
a7	[Focus point persistence]	605	b6	[Fine-tune optimal exposure]	615
a8	[Limit AF-area mode selection]	606	b7	[Keep exp. when f/ changes]	616
	[Focus mode		c [Timers/AE lock]		
a9	restrictions]	606	c1	[Shutter-release button AE-L]	617
a10	[Focus point wrap- around]	606	c2	[Self-timer]	617
a11	[Focus point display]	607	c3	[Power off delay]	618
a12	[Built-in AF-assist illuminator]	609			
a13	[Focus peaking]	610			
a14	[Manual focus ring in AF mode] ²	611			

ltem d [Shooting/display]

a [Shooting/display]			
d1	[Continuous shooting speed]	619	
d2	[Maximum shots per burst]	619	
d3	[Limit release mode selection]	620	
d4	[Sync. release mode options]	620	
d5	[Extended shutter speeds (M)]	621	
d6	[Limit selectable image area]	621	
d7	[File number sequence]	622	
d8	[View mode (photo Lv)]	624	
d9	[Starlight view (photo Lv)]	626	
d10	[Warm display colors]	626	
d11	[LCD illumination]	627	
d12	[View all in continuous mode]	629	
d13	[Release timing indicator]	629	
d14	[Image frame]	630	
d15	[Grid type]	630	
d16	[Virtual horizon type]	631	
d17	[Custom monitor shooting display]	634	
d18	[Custom viewfinder shooting display]	636	

	ltem	
e [Bi	racketing/flash]	
e1	[Flash sync speed]	637
e2	[Flash shutter speed]	639
e3	[Exposure comp. for flash]	639
e4	[Auto \$ ISO sensitivity control]	640
e5	[Modeling flash]	640
еб	[Auto bracketing (mode M)]	641
e7	[Bracketing order]	642
e8	[Flash burst priority]	643

	ltem			ltem	
f [Controls]		1	g [Video]		
f1	[Customize 🖬 menu]	644	g1	[Customize 🖬 menu]	672
f2	[Custom controls	647	g2	[Custom controls]	674
	(shooting)]	0.17	g3	[Control lock]	682
f3	[Custom controls (playback)]	659	g4	[Limit AF-area mode selection]	683
f4	[Control lock]	665	5	[Focus mode	602
f5	[Reverse dial rotation]	666	g5	restrictions]	683
f6	[Release button to use	666	g6	[AF speed]	684
10	dial]		g7	[AF tracking sensitivity]	685
f7	[Reverse indicators]	667	g8	[View assist]	685
f8	[Reverse ring for focus]	667	g9	[Zebra pattern]	686
f9	[Focus ring rotation range]	668	g10	[Limit zebra pattern tone range]	688
f10	[Control ring response]	669	g11	[Grid type]	688
f11	[Full-frame playback flicks]	670	g12	[Custom monitor shooting display]	689
			g13	[Custom viewfinder shooting display]	691

- 1 Items modified from default values are indicated by asterisks ("*****").
- 2 Available with compatible lenses only.

🔽 See Also

"Custom Settings Menu Defaults" (2471)

Custom Settings Bank

MENU button 🔿 🖋 Custom Settings menu

Custom Settings are stored in one of four banks (banks "A" through "D") that can be selected using [Custom Settings bank]. Changes to settings made while one bank is selected are not applied to the remaining banks.

Renaming Custom Settings Banks

A descriptive caption can be added to the bank name ("A", "B", "C", or "D") by highlighting the bank, pressing (), and selecting [Rename]. Captions can be up to 20 characters long.

Copying Custom Settings Banks

To create a copy of a custom settings bank, highlight the bank, press (), select [Copy], and choose a destination for the copy.

Restoring Default Settings

You can restore default settings for a selected Custom Settings bank. To do so, highlight the bank and press for (me); a confirmation dialog will be displayed. Highlight [Yes] and press ® to restore default settings for the selected bank.





a1: AF-C Priority Selection

MENU button 🔿 🖋 Custom Settings menu

Choose whether photos can be taken before the camera focuses when **AF-C** is selected.

Option		Description
۲	[Release]	Photos can be taken whenever the shutter-release button is pressed (release priority).
#\$	[Focus + release]	Priority is normally given to release, but if the subject is dark or low contrast and the camera is in continuous-release mode, priority will be given to focus for the first shot in each series. For the remaining shots, priority will be given to release regardless of focus. This helps ensure that the first shot in each series is in focus.
[::::]	[Focus]	Photos can be taken only when the camera is in focus (focus priority).

a2: AF-S Priority Selection

MENU button 🔿 🖋 Custom Settings menu

Choose whether photos can be taken before the camera focuses when AF-S is selected.

Option		Description
۲	[Release]	Photos can be taken whenever the shutter-release button is pressed (release priority).
[::::]	[Focus]	Photos can be taken only when the camera is in focus (focus priority).



a3: Focus Tracking with Lock-On

MENU button 🔿 🖋 Custom Settings menu

Choose how quickly focus responds if something passes between the subject and the camera when **AF-C** is selected for the focus mode.

Blocked Shot AF Response

- Choose [5] (**Delayed**) to help maintain focus on your original subject.
- Choose [1] (Quick) to make it easier to shift focus to objects crossing your field of view.
- Regardless of the option selected, blocked shot AF response functions in mode [3] when [3D-tracking] is selected for AF-area mode.
- If [Auto-area AF] is selected for AF-area mode, blocked shot AF response will function in mode [3] when [2] or [1] is selected.

Subject Motion

Option	Description
[Steady]	Choose for smooth focus when photographing subjects that approach the camera at a steady pace.
[Erratic]	Choose for improved response when photographing subjects prone to sudden starts and stops.



a4: Focus Points Used

MENU button 🔿 🖌 Custom Settings menu

Choose the number of focus points available for manual focus-point selection when an option other than [Auto-area AF] is selected for AFarea mode.

Option		Description
	[All points]	Every focus point available in the current AF-area mode can be selected. The number of points available varies with the AF-area mode.
:::	[Alternating points]	The number of available focus points is reduced to one quarter of the number available when [All points] is selected. Use for quick focus-point selection. The number of points available for [Pinpoint AF] is not affected.



a5: Store Points by Orientation

MENU button 🔿 🖋 Custom Settings menu

Choose whether separate focus points can be selected for "wide" (landscape) orientation, for "tall" (portrait) orientation with the camera rotated 90° clockwise, and for "tall" orientation with the camera rotated 90° counterclockwise.

• Select [Off] to use the same focus point regardless of camera orientation.










An EFFF ER



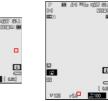

Camera rotated 90°clockwise

Landscape (wide) orientation

1/125

• Select [Focus point] to enable separate focus-point selection. To enable separate selection of both the focus point and AF-area mode, choose [Focus point and AF-area mode].





Camera rotated 90° counter-clockwise





Landscape (wide) orientation





Camera rotated 90°clockwise



a6: AF Activation

MENU button 🔿 🖋 Custom Settings menu

Choose whether the shutter-release button can be used to focus.

Option	Description
[Shutter/ AF-ON]	The camera focuses when the shutter-release button is pressed halfway.
[AF-ON only]	The camera does not focus when the shutter-release button is pressed halfway.

• Highlighting [AF-ON only] and pressing (displays [Out-of-focus release] options.

Option	Description
[Enable]	Photos can be taken whenever the shutter-release button is pressed (release priority).
[Disable]	 Photos can be taken only when the camera is in focus (focus priority). Focus using the AF-ON button or other controls to which AF-ON has been assigned.

a7: Focus Point Persistence

MENU button 🔿 🖋 Custom Settings menu

Choose whether the focus point selected by the camera continues in use after you change AF-area modes using a control to which [AF-area mode] or [AF-area mode + AF-ON] has been assigned via Custom Setting f2 [Custom controls (shooting)]. This only applies if you change AF-area modes while focusing with the shutter-release button pressed halfway.

Option	Description
[Auto]	The focus point last chosen by the camera before you switched AF-area modes remains in effect.
[Off]	The focus point last chosen by the user is restored.

• Focus-point persistence applies if while the control is pressed, you switch from an AF-area mode such as [Auto-area AF] in which the focus point is chosen automatically to a mode in which the focus point is selected manually.



a8: Limit AF-Area Mode Selection MENU button + Custom Settings menu

Choose the AF-area modes that can be selected by pressing the focusmode button and rotating the sub-command dial.

- Highlight options and press
 [®] or
 [®] to select (□) or deselect (□). Modes marked with a check (□) are available for selection via the sub-command dial.
- To complete the operation, press MENU.

a9: Focus Mode Restrictions

MENU button 🔿 🖋 Custom Settings menu

a

a8Limit AF-area mode selection

-point AF

Dynamic-area AF (L)

Wide-area AF (S)

namic-area AF (S) namic-area AF (M)

(TETT) D

Limit focus-mode selection to a single focus mode. If an option other than [**No restrictions**] is selected, rotating the main command dial while holding the focus-mode button will not change the focus mode.

a10: Focus Point Wrap-Around

MENU button 🔿 🖋 Custom Settings menu

Choose whether focus-point selection "wraps around" from one edge of the display to another. If **[ON]** is selected, focus-point selection will "wrap around" from top to bottom, bottom to top, right to left, and left to right, so that, for example, pressing **()** when a focus point at the right edge of the display is highlighted selects the corresponding point at the left edge.

a11: Focus Point Display

MENU button 🔿 🖋 Custom Settings menu

Choose from the focus point display options below.

Manual Focus Mode

Option	Description	
[ON]	The focus point is displayed at all times in manual focus mode.	
[OFF]	The focus point is displayed only during focus point selection.	

Dynamic-Area AF Assist

Choose whether both the selected focus point and the surrounding focus points are displayed in dynamic-area AF mode.

Option	Description
[ON]	Display both the selected focus point and surrounding focus points.
[OFF]	Display only the selected focus point.



AF-C In-Focus Display

Choose whether the focus point changes color when the subject is in focus in focus mode **AF-C**.

Option	Description
[ON]	The focus point is displayed in green when the camera judges that the subject is in focus.
[OFF]	The active focus point is displayed in red or yellow at all times, whether or not the camera is in focus.

a12: Built-in AF-Assist Illuminator

MENU button 🔿 🖋 Custom Settings menu

Choose whether the built-in AF-assist illuminator lights to assist the focus operation in photo mode when lighting is poor.

Option	Description
[ON]	In photo mode, the illuminator will light as required when AF - S is selected for focus mode.
[OFF]	The illuminator does not light to assist the focus operation. The camera may not be able to focus when lighting is poor.

The AF-Assist Illuminator

- The AF-assist illuminator has a range of about 1–3 m (3 ft 4 in.–9 ft 10 in.).
- Remove lens hoods when using the illuminator.
- Do not obstruct the AF-assist illuminator while it is lit.





a13: Focus Peaking

MENU button 🔿 🖋 Custom Settings menu

When focus peaking is enabled in manual focus mode, objects that are in focus are indicated by colored outlines in the display. You can choose the color.

Focus Peaking Display

Select [ON] to enable focus peaking.

Focus Peaking Sensitivity

Choose focus peaking sensitivity from [3 (high sensitivity)], [2 (standard)], and [1 (low sensitivity)]. The higher the value, the greater the depth that will be shown as being in focus.

Focus Peaking Highlight Color

Choose the highlight color.

a14: Manual Focus Ring in AF Mode

MENU button 🔿 🖋 Custom Settings menu

This item is available with compatible lenses only. It controls whether the lens focus ring can be used for manual focus in autofocus mode.

Option	Description
[ON]	Autofocus can be over-ridden by rotating the lens focus ring (autofocus with manual override). The focus ring can be used for manual focus while the shutter-release button is pressed halfway. To refocus using autofocus, lift your finger from the shutter-release button and then press it halfway again.
[OFF]	The lens focus ring cannot be used for manual focus in autofocus mode.



b: Metering/Exposure

b1: ISO sensitivity Step Value

MENU button 🔿 🖋 Custom Settings menu

Choose whether changes to ISO sensitivity are made in increments of $1/_3$ or 1 EV. If the value currently selected for ISO sensitivity is not available at the chosen setting, ISO sensitivity will be set to the nearest available value.



Select the increments used for adjustments to shutter speed, aperture, bracketing, and exposure and flash compensation.

 If [1 EV (comp. 1/3 EV)] is selected, changes to shutter speed, aperture, and bracketing will be made in increments of 1 EV and changes to exposure and flash compensation in increments of 1/3 EV.

b3: Easy Exposure Compensation

MENU button 🔿 🖋 Custom Settings menu

Choose whether the 🗹 button is needed for exposure compensation.

Option	Description	
[On (Auto reset)]	Exposure compensation can be adjusted using only a command dial. The setting selected with the command dial is reset when the camera turns off or the standby timer expires.	
[On]	Exposure compensation can be adjusted using only a command dial. Exposure compensation is not reset when the camera turns off or the standby timer expires.	
[Off]	Exposure compensation is set by pressing the 🖬 button and rotating a command dial.	

- This option takes effect in modes P, S, and A. Easy exposure compensation is not available in mode M.
- The command dial used varies with the mode.

b4: Matrix Metering Face Detection

MENU button 🔿 🖋 Custom Settings menu

Choose whether exposure is adjusted for the faces of human portrait subjects detected by the camera when [Matrix metering] is selected.

Option	Description		
[ON]	The camera adjusts exposure for faces.		
[OFF]	Exposure is not adjusted according to whether faces have been detected.		



b5: Center-Weighted Area

MENU button 🔿 🖋 Custom Settings menu

When [**Center-weighted metering**] is selected, the camera assigns the greatest weight to an area in the center of the shooting display when setting exposure.


Option		Description
SMALL	[Small]	The camera assigns the greatest weight to an area equivalent to a circle 8 mm in diameter.
STNDRD	[Standard]	The camera assigns the greatest weight to an area equivalent to a circle 12 mm in diameter.
AVG	[Average]	Weighting is based on the average of the entire frame.

Fine-Tuning Exposure

- Custom Setting b6 [Fine-tune optimal exposure] fine-tunes exposure separately for each Custom Settings bank. Be aware of different fine-tuning values for Custom Setting b6 when switching banks.
- Regardless of the option selected for Custom Setting b6 [Fine-tune optimal exposure], the exposure compensation icon (2) will not be displayed. The only way to determine how much exposure has been altered is to view the amount in the fine-tuning menu for Custom Setting b6.
- The values selected are not affected by two-button resets.

b6: Fine-Tune Optimal Exposure MENU button 🔿 🖋 Custom Settings menu

Use this option to fine-tune the exposure value selected by the camera; exposure can be fine-tuned separately for each metering method. Exposure can be adjusted up for brighter exposures or down for darker exposures in the range +1 to -1 EV in steps of ¹/₆ EV. The default is zero.

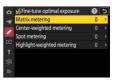



b7: Keep Exp. When f/ Changes

MENU button 🔿 🖋 Custom Settings menu

When [OFF] is selected for [ISO sensitivity settings] > [Auto ISO sensitivity control] in the photo shooting menu in mode M, actions such as switching to a lens with a different aperture range may cause unintended changes to aperture. If an option other than [Exposure maintenance off] is selected for [Keep exp. when f/ changes], the camera will adjust shutter speed or ISO sensitivity to maintain exposure at its current value.

- Other cases in which settings may be automatically adjusted to maintain exposure include when:
 - lenses with different maximum apertures at minimum and maximum zoom are zoomed in or out, or
 - the focus distance changes while a micro lens is attached.
- The setting adjusted to maintain exposure when aperture changes can be chosen from [**Shutter speed**] and [**ISO sensitivity**]. Select [**Exposure maintenance off**] to disable this feature.
- Depending on the lens, the camera may be unable to maintain current exposure at some settings.
- Exposure maintenance is not available during video recording.

c1: Shutter-Release Button AE-L

MENU button 🔿 🖋 Custom Settings menu

Choose whether exposure locks when the shutter-release button is pressed.

Option		Description
.≞ON	[On (half press)]	Pressing the shutter-release button halfway locks exposure.
ŁON	[On (burst mode)]	Exposure only locks while the shutter-release button is pressed all the way down.
[Off]		Pressing the shutter-release button does not lock exposure.

c2: Self-Timer

MENU button 🔿 🖋 Custom Settings menu

Choose the length of the shutter release delay, the number of shots taken, and the interval between shots in self-timer mode.

Option	Description	
[Self-timer delay]	Choose the length of the shutter-release delay.	
[Number of shots]	Press (*) and (*) to choose the number of shots taken each time the shutter-release button is pressed; choose from values of from 1 to 9.	
[Interval between shots]	Choose the interval between shots when [Number of shots] is more than 1.	



c3: Power Off Delay

MENU button 🔿 🖌 Custom Settings menu

Choose how long the monitor or viewfinder remains on when no operations are performed.

- Different settings can be chosen for [Playback], [Menus], [Picture review], and [Standby timer].
- [Standby timer] determines how long the control panel and the monitor or viewfinder display remain on after the shutter-release button is pressed halfway. The monitor and viewfinder dim a few seconds before the standby timer expires. If [10 s] is selected, the timer will be extended to 20 seconds while the *i* menu is displayed.
- Longer power-off delays reduce battery endurance.

d1: Continuous Shooting Speed

MENU button 🔿 🖋 Custom Settings menu

Choose the frame advance rate for continuous high-speed and continuous low-speed modes.

Option	Description	
[Continuous high-speed]	Choose the frame rate for continuous high-speed release mode from options ranging from [20 fps] to [10 fps].	
[Continuous low-speed]	Choose the frame rate for continuous low-speed release mode from options ranging from [10 fps] to [1 fps]. • The actual frame rate when [8 fps] is selected is 7.5 fps.	

d2: Maximum Shots per Burst

MENU button 🔿 🖋 Custom Settings menu

The maximum number of shots that can be taken in a single burst in continuous release modes can be set to " ∞ " (no limit) or to any value between 1 and 200.

• Note that regardless of the option selected, there is no limit to the number of photos that can be taken in a single burst when a shutter speed of 1 s or slower is selected in mode S or M.

The Memory Buffer

Custom Setting d2 [Maximum shots per burst] is used to select the number of shots that can be taken in a single burst. The number of shots that can be taken before the memory buffer fills and shooting slows varies with image guality and other settings. When the buffer is full, the camera will display "r000" and the frame advance rate will drop.



620 🖌 Custom Settings: Fine-Tuning Camera Settings

d3: Limit Release Mode Selection

MENU button 🔿 🖋 Custom Settings menu

Choose the release modes that can be accessed by pressing the \square button and rotating the main command dial when the release mode dial is rotated to \square .

- Highlight options and press
 [®] or
 [®] to select (□) or deselect (□). Modes marked with a check (□) are available for selection via the main command dial.
- To complete the operation, press MENU.

d4: Sync. Release Mode Options

MENU button 🔿 🖌 Custom Settings menu

Choose whether the shutters on the remote cameras are synchronized with the shutter on the master camera when using an optional wireless remote controller or the [**Connect to other cameras**] item in the network menu.

For information on synchronized release using [Connect to other cameras] in the network menu, see the section on "Synchronized Release" (D402) in the "Connecting to Other Cameras" chapter.



d5: Extended Shutter Speeds (M)

MENU button 🔿 🖋 Custom Settings menu

Extend the range of shutter speeds available in mode M: the slowest shutter speed available when [ON] is selected is 900 s (15 minutes). Extended shutter speeds can be used for pictures of the night sky and other long exposures.

• At speeds slower than 1 s, the shutter speed displayed by the camera may differ from the actual exposure time. The actual exposure times at shutter speeds of 15 and 30 seconds, for example, are respectively 16 and 32 seconds. The exposure time will again match the selected shutter speed at speeds of 60 seconds and slower.



Choose the options that can be accessed by rotating a command dial in the *i* menu or while pressing a control to which image area has been assigned.

- Highlight options and press ® or () to select () or deselect (). Modes marked with a check (\mathbf{M}) are available for selection via the command dials.
- To complete the operation, press MENU.





d7: File Number Sequence

MENU button 🔿 🖌 Custom Settings menu

Choose a file numbering option.

Option	Description		
 [On] [On] When a new folder is created or a new memory card inserted in the camera, file numbering will continue for a last number used. This simplifies file management b minimizing the occurrence of duplicate file names w multiple cards are used. 			
[Off]	When a new folder is created or a new memory card is inserted, file numbering restarts from 0001. If the current folder already contains pictures, file numbering will instead continue from the highest file number in the current folder. If you select [Off] after selecting [On], the camera will store the current file number. File numbering will resume from the previously-stored value the next time [On] is selected.		
[Reset]	Reset the file numbering for [On]. If the current folder is empty, file numbering will restart from 0001 with the next picture taken. If the current folder contains pictures, the next picture taken will be assigned a file number by adding one to the highest file number in the current folder.		

🔽 File Number Sequence

- If a picture is taken when the current folder contains a picture numbered 9999, a new folder will be created and file numbering will restart from 0001.
- When the current folder number reaches 999, the camera will no longer be able to create new folders and the shutter release will be disabled if:
 - the current folder contains 5000 pictures (in addition, video recording will be disabled if the camera calculates that the number of files needed to record a video of the maximum length would result in the folder containing over 5000 files), or
 - the current folder contains a picture numbered 9999 (in addition, video recording will be disabled if the camera calculates that the number of files needed to record a video of the maximum length would result in a file numbered over 9999).

To resume shooting, choose [Reset] for Custom Setting d7 [File number sequence] and then either format the current memory card or insert a new memory card.

🔽 Folder Numberina

- If a picture is taken when the current folder contains 5000 pictures or a picture numbered 9999, a new folder will be created and selected as the current folder.
- The new folder is assigned a number one higher than current folder number. If a folder with that number already exists, the new folder will be assigned the lowest available folder number.



d8: View Mode (Photo Lv)

MENU button 🔿 🖋 Custom Settings menu

Choose whether the camera adjusts the preview in the viewfinder or monitor to reflect how shooting settings will affect the hue and brightness of the final picture. Regardless of the option selected, the effects of camera settings are always visible in video mode.

Option		Description
VIEW	[Show effects of settings]	 The effects of changes to settings such as white balance, Picture Controls, and exposure compensation are visible in the shooting display. Imp will appear in the shooting display.

Option		Description
¥₩.>	[Adjust for ease of viewing]	The effects of changes to settings such as white balance, Picture Controls, and exposure compensation are not visible in the shooting display. Pressing when [Adjust for ease of viewing] is highlighted displays [Auto] and [Custom] options. • [Auto]: Color, brightness, and other settings are adjusted for ease of viewing during prolonged periods of use. • [Custom]: Press to make individual adjustments to [White balance], [Set Picture Control], and [Brighten shadows]. • [White balance]: Choose from [Preview current setting], [Auto], and [Choose color temperature]. Select [Choose color temperature] to choose the color temperature for the shooting display. • [Set Picture Control]: Choose from [Preview current setting] and [Adjust for ease of viewing]. • [Brighten shadows]: Choose whether or by how much the camera brightens shadows (dark areas) in the display; the available options are [Off], [+1], [+2], and [+3]. The higher the value, the greater the effect. • ▷ will appear in the shooting display.



d9: Starlight View (Photo Lv)

MENU button 🔿 🖋 Custom Settings menu

Select [**ON**] to brighten the display for ease of viewing in dark environments (starlight view). Note that the display may become slightly jerky when starlight view is in effect.

d10: Warm Display Col	lors	
	MENU button 🔿 🖋	Custom Settings menu

Use warmer colors with reduced brightness in the shooting, menu, and/ or playback displays. This makes the displays easier to view with vision adapted to dark environments during astronomical photography and the like.

Option	Description		
[Warm display color options]	 Choose from the following options. [Mode 1]: Use warmer colors in the shooting, menu, and playback displays. [Mode 2]: Use warmer colors in the menu display. Warmer colors are also used for the icons and other information in the shooting and playback displays, but not for the view through the lens or the content of pictures themselves. [Off]: Warm colors are not used. 		
[Warm color display brightness]	Press \textcircled{O} or \textcircled{O} to adjust warm color display brightness. Choose higher values for increased brightness, lower values for reduced brightness.		

d11: LCD Illumination

MENU button 🔿 🖋 Custom Settings menu


Choose when the control panel and button backlights light.

- If [OFF] is selected, the backlights will light when the power switch is rotated to *. The backlights turn off when the shutter-release button is pressed.
- If [ON] is selected, the backlights will light while the standby timer is active. Note that this increases the drain on the battery. The backlights will turn off while the shutter-release button is pressed, but will turn on again when the button is released.



Button Backlights

The following are equipped with backlights:

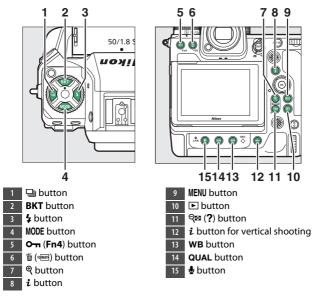

d12: View All in Continuous Mode

MENU button 🔿 🖋 Custom Settings menu

If [OFF] is selected, the display will go blank during burst photography.

d13: Release Timing Indicator MENU button 🔿 🖋 Custom Settings menu

Choose how the display responds when the shutter is released.

Option	Description	
[Type A]	The display goes dark when the shutter is released.	
[Type B]	Borders appear at the top, bottom, and sides of the frame when the shutter is released.	
[Type C]	Borders appear at the sides of the frame when the shutter is released.	
[Off]	A release timing indicator is not displayed when the shutter is released.	

- Note that regardless of the option selected, release timing indicators are not displayed during high-speed frame capture.
- Similarly, note that regardless of the option selected, release timing indicators are not displayed at slow shutter speeds.



d14: Image Frame

MENU button 🔿 🖌 Custom Settings menu

Select [**OFF**] to hide the white border around the shooting displays in the monitor and viewfinder.

d15: Grid Type

MENU button 🔿 🖋 Custom Settings menu

Choose a framing grid for the shooting display. The selected grid can be displayed by placing a check (☑) next to ⅲ in the list for Custom Setting d17 [Custom monitor shooting display] (□ 634) or d18 [Custom viewfinder shooting display] (□ 636).

d16: Virtual Horizon Type

MENU button 🔿 🖋 Custom Settings menu

Choose a virtual horizon for the shooting display. The selected virtual horizon can be displayed by placing a check (1) next to 1 in the list for Custom Setting d17 [Custom monitor shooting display] (CG34) or d18 [Custom viewfinder shooting display] (^[]636).

• [Type A]: A large indicator showing roll and pitch fills the display.



- [Type B]: A roll indicator appears at the bottom of the display and a pitch indicator at its right edge.
- * The indicators are displayed in green when the camera is level.





<u>Roll</u>

	Camera rotated clockwise	Camera rotated counterclockwise	
Option			
[Type A]		P F F F F F F F F F F F F F	
[Type B]		(2) (2) (2) (2) (2) (2) (2) (2)	

Pitch

	Camera tilted forward	Camera tilted back		
Option				
[Type A]	P 	P I I I I I I I I I I I I I		
[Type B]	P C C C C C C C C C C C C C	57 15 15 15 15 15 15 15 15 15 15		

The Virtual Horizon Display

Note that the display may not be accurate when the camera is tilted at a sharp angle forward or back. The camera will not display pitch and roll indicators when held at angles at which tilt cannot be measured.



d17: Custom Monitor Shooting Display MENU button ➡ ✓ Custom Settings menu

Choose the monitor displays accessible by pressing the **DISP** button during shooting.



• To choose indicators that appear in displays [Display 1] through [Display 4], highlight the corresponding option and press (). You can then highlight items and press ® to select $(\mathbf{\Delta})$ or deselect $(\mathbf{\Box})$.



C	Option	Description
SIMPLE	[Basic shooting info]	View the shooting mode, shutter speed, aperture, and other basic shooting info.
DETAIL	[Detailed shooting info]	View the focus mode, AF-area mode, white balance, and other detailed shooting info.
اط	[Touch controls]	View options that can be accessed via touch controls, including touch AF and the $m{i}$ menu.
-j-	[Virtual horizon]	Enable the virtual horizon. The display type can be selected using Custom Setting d16 [Virtual horizon type].
	[Histogram]	Enable the RGB histogram.
	[Framing grid]	Enable the framing grid. The display type can be selected using Custom Setting d15 [Grid type].
÷	[Center indicator]	Display crosshairs at the center of the frame.

- [Display 5] consists solely of the information display and cannot be customized.
- To complete the operation, press MENU.



d18: Custom Viewfinder Shooting Display MENU button → ✓ Custom Settings menu

Choose the viewfinder displays accessible by pressing the **DISP** button during shooting.

- Highlight items ([**Display 2**] through [**Display 4**]) and press ⊛ to select (☑) or deselect (□). Only displays marked with a check (☑) can be accessed by pressing the **DISP** button during shooting. [**Display 1**] cannot be deselected.
- To choose indicators that appear in displays [**Display 1**] through [**Display 4**], highlight the corresponding option and press [®]. You can then highlight items and press [®] to select (**□**) or deselect (**□**). Apart from [**Touch controls**], the options are the same as those for Custom Setting d17 [**Custom monitor shooting display**] (**□**634).
- To complete the operation, press MENU.

e1: Flash Sync Speed

MENU button 🔿 🖋 Custom Settings menu

Choose the flash sync speed.

Option	Description			
[1/250 s (Auto FP)]	 Flash sync speed is set to ¹/₂₅₀ or ¹/₂₀₀ s. With compatible flash units, auto FP high-speed sync will automatically be enabled at shutter speeds faster than ¹/₂₅₀ or ¹/₂₀₀ s. In modes P and A, auto FP high-speed sync will be activated if the actual shutter speed is faster than ¹/₂₅₀ or 			
[1/200 s (Auto FP)]	 1/200 s. If the flash supports auto FP high-speed sync, the camera can select shutter speeds as fast as 1/8000 s. In modes S and M, the user can select shutter speeds as fast as 1/8000 s when using flash units that support auto FP high-speed sync. 			
[1/200 s]				
[1/160 s]	-			
[1/125 s]	Flash sync speed set to selected value, which can be from			
[1/100 s]	$1/_{200}$ to $1/_{60}$ s.			
[1/80 s]				
[1/60 s]	-			



🔽 Auto FP High-Speed Sync

Depending on the shutter speed, horizontal lines may appear in pictures taken using auto FP high-speed sync when [1/250 s (Auto FP)] or [1/200 s (Auto FP)] is selected. This effect can be mitigated by:

- · choosing a slower shutter speed or
- adjusting flash output.

🖉 Auto FP High-Speed Sync

Auto FP high-speed sync allows the flash to be used at shutter speeds as fast as $1_{/8000}$ s. When [**1/250 s (Auto FP**)] or [**1/200 s (Auto FP**)] is selected, the camera automatically enables auto FP high-speed sync at shutter speeds faster than the flash sync speed. This makes it possible to choose the maximum aperture for reduced depth of field even when the subject is backlit in bright sunlight.

e2: Flash Shutter Speed

MENU button 🔿 🖋 Custom Settings menu

Choose the slowest shutter speed available with a flash in mode P or A. Regardless of the setting chosen for Custom Setting e2 [Flash shutter speed], shutter speeds can be as slow as 30 s in modes S and M or at flash settings of slow sync, slow rear-curtain sync, or red-eye reduction with slow sync.

e3: Exposure Comp. for Flash				
MENU button 🔿 🖋 Cu	istom Settings menu			

Choose how the camera adjusts flash level when exposure compensation is used.

Option		Description		
92 Z	[Entire frame]	The camera adjusts both the flash level and exposure. This changes the exposure for the entire frame.		
Z	[Background only]	Exposure compensation is adjusted for the background only.		



e4: Auto **4** ISO Sensitivity Control

MENU button 🔿 🖋 Custom Settings menu

Choose how the camera adjusts flash level when auto ISO sensitivity control is enabled.

Option		Description		
<u>16</u>	[Subject and background]	The camera takes both the main subject and background lighting into account when adjusting ISO sensitivity.		
2	[Subject only]	ISO sensitivity is adjusted only to ensure that the main subject is correctly exposed.		

e5: Modeling Flash

MENU button 🔿 🖌 Custom Settings menu

If **[ON]** is selected when the camera is used with an optional flash unit that supports the Nikon Creative Lighting system, pressing a control to which **[Preview]** has been assigned using Custom Setting f2 **[Custom controls (shooting)]** will emit a modeling flash.

e6: Auto Bracketing (Mode M)

MENU button 🔿 🖌 Custom Settings menu

The settings affected when bracketing is enabled in mode **M** and [**OFF**] is selected for [ISO sensitivity settings] > [Auto ISO sensitivity **control**] in the photo shooting menu are determined by the options selected for [Auto bracketing] > [Auto bracketing set] in the photo shooting menu and the option chosen for Custom Setting e6 [Auto bracketing (mode M)].

Custom Setting e6 [Auto bracketing (mode		Photo shooting menu [Auto bracketing] > [Auto bracketing set]			
	M)]	AE & flash bracketing	AE bracketing		
\$+0)	[Flash/speed]	Shutter speed and flash level	Shutter speed		
‡ 09	[Flash/speed/ aperture]	Shutter speed, aperture, and flash level	Shutter speed and aperture		
\$+⊛	[Flash/aperture]	Aperture and flash level	Aperture		
IS0	[Flash/ISO sensitivity]	ISO sensitivity and flash level	ISO sensitivity		
۶ [Flash only]		Flash level	—		

• When [ON] is selected for [ISO sensitivity settings] > [Auto ISO sensitivity control] in the photo shooting menu, the camera will vary flash level and/or ISO sensitivity as per [Flash/ISO sensitivity], regardless of the option selected for Custom Setting e6 [Auto bracketing (mode M)].

V Flash Bracketing

Flash bracketing is performed only with i-TTL or $\bigotimes \mathbf{A}$ (auto aperture) flash control.



e7: Bracketing Order

MENU button 🔿 🖋 Custom Settings menu

Choose the order in which the shots in the bracketing program are taken.

Option		Description	
N	[MTR > under > over]	The unmodified shot is taken first, followed by the shot with the lowest value, followed by the shot with the highest value.	
-→ +	[Under > MTR > over]	Shooting proceeds in order from the lowest to the highest value.	

 Custom Setting e7 [Bracketing order] has no effect on the order of the shots taken when [ADL bracketing] is selected for [Auto bracketing] > [Auto bracketing set] in the photo shooting menu.

e8: Flash Burst Priority

MENU button 🔿 🖋 Custom Settings menu

Choose whether optional flash units emit monitor pre-flashes before each shot during burst photography in high- or low-speed continuous release mode.

Option		Description		
Ð	[Prioritize frame advance rate]	 The flash unit emits a monitor pre-flash before the first shot in each sequence and locks output at the metered value for the remaining shots. The frame advance rate drops less than when [Prioritize precise flash control] is selected. An FV lock icon ([21]) will appear in the shooting display during burst photography. 		
\$ \$	[Prioritize precise flash control]	The flash unit emits a monitor pre-flash before each shot and adjusts flash output as required. The frame advance rate may drop in some circumstances.		



f1: Customize 🖪 Menu

MENU button 🔿 🖌 Custom Settings menu

Choose the items listed in the \boldsymbol{i} menu displayed when the \boldsymbol{i} button is pressed in photo mode.

- Highlight a position in the \boldsymbol{i} menu, press $\boldsymbol{\circledast}$, and select the desired item.
- The following items can be assigned to the *i* menu.

Option			Option		
SHOOT	[Shooting menu	493	GHR	[Long exposure NR]	514
	bank]		ISONR	[High ISO NR]	515
CUSTOM	[Select custom	597	2 0.	[Metering]	520
	settings bank]		4	[Flash mode]	429
EX.	[Choose image area]	102	91Z	[Flash compensation]	432
QUAL	[Image quality]	105		Wireless options/	
SIZE	[Image size]	108	\$MODE	flash mode]	437
	[View memory card	645	CDD4	[Group flash options]	444,
	info]		GRP\$		454
Z	[Exposure	143	ATECT	[Test flash]	439,
_	compensation]	115	\$TEST		453
ISO	[ISO sensitivity	154	\$info	[Flash info]	444
	settings]			[Radio remote flash	439
WB	[White balance]	158	♥into	info]	439
F	[Set Picture Control]	192			
RGB	[Color space]	511			
₽ <mark>6</mark>	[Active D-Lighting]	512			

Option			Option		
AF/MF	[Focus mode]	110	SL	[Silent mode]	735
[+]/s [×]	[AF-area mode/subj. detection]	113	∎≡	[Custom controls (shooting)]	647
(4)	[Vibration reduction]	526	(VIEW)	[View mode (photo	624
BKT	[Auto bracketing]	527		Lv)]	024
	[Multiple exposure]	528	ΞQ	[Split-screen display	646
HDR	[HDR overlay]	537		zoom]	
	[Interval timer		PEAK	[Focus peaking]	610
٥ <u>b</u>	shooting	542	Ö	[Monitor/viewfinder	709,
O .	[Time-lapse video]	556	Ų.	brightness]	711
Fitus	[Focus shift shooting]	568	*	[Airplane mode]	756
410005	· •	308	(RED)	[Warm display colors]	626
AF LOCK-ON	[Focus tracking with lock-on]	600			020

View Memory Card Info

View the slot currently selected as the destination for new pictures and the options used to record pictures when two memory cards are inserted. This option can be used to view but not to change the option selected.


• The options used to record pictures when two memory cards are inserted can be selected using [Role played by card in Slot 2] in the photo shooting menu.



Split-Screen Display Zoom

If **[Split-screen display zoom**] is assigned to the *i* menu, you can select **[Split-screen display zoom**] to simultaneously zoom in on two areas that are aligned horizontally but are in different parts of the frame (split-screen display zoom). The locations of the areas are indicated by the two frames (\Box) in the navigation window in the bottom right corner of the display.

 Zooming in simultaneously on two widelyseparated but horizontally-aligned areas of the frame makes it easier to level pictures of buildings or other wide objects.

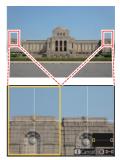

- Use the ♥ and ♥ (?) buttons to zoom in and out.

- To focus on the subject at the center of the selected area, press the shutter-release button halfway.
- To exit split-screen display zoom, press the *i* button.

f2: Custom Controls (Shooting)

MENU button 🔿 🖋 Custom Settings menu

Choose the operations performed in photo mode using camera or lens controls, including the camera buttons and sub-selector and the lens control ring.

• Choose the roles played by the controls below. Highlight the desired control and press ®.

Option		Option	
E.	[Fn1 button]		[QUAL button]
Fn2	[Fn2 button]	®	[Vertical multi selector
Fn3	[Fn3 button]		center]
h	[Fn button for vertical shooting]	er an	[AF-ON button for vertical shooting]
Fn4	[Protect/Fn4 button]	*	[Video record button]
AF CN	[AF-ON button]	5	[Command dials]
۲	[Sub-selector center]	L'Fn	[Lens Fn button]
OK	[OK button]	L-Fn2	[Lens Fn2 button]
Ų	[Audio button]	01	[Lens control ring]



• The roles that can be assigned are listed below. The roles available vary with the control.

Role		Description	
PRE®	[Preset focus point]	 Pressing the control selects a preset focus point. To choose the point, highlight it, hold the control, and press the focus-mode button until the focus point flashes. Separate focus points can be selected for "wide" (landscape) orientation and for each of the two "tall" (portrait) orientations if an option other than [Off] is selected for Custom Setting a5 [Store points by orientation]. The behavior of the selected control can be chosen by pressing () when [Preset focus point]: Pressing the control recall focus point]: Pressing the control recalls the preset focus point. [Hold to recall focus point]: The preset focus point is selected while the control is pressed. Releasing the control restores the focus point selected before the control was pressed. 	
RESET	[Select center focus point]	Pressing the control selects the center focus point.	

	Role	Description	
[1]	[AF-area mode]	 Holding the control selects a preset AF-area mode. The AF-area mode previously in effect is restored when the control is released. To choose the AF-area mode, press () when [AF-area mode] is highlighted. 	
[r])	Holding the control selects a preset AF-area mode and initiates autofocus. The AF-area mode previously in effect is restored when the control released. mode + AF-ON • To choose the AF-area mode, press ③ when [AF-area mode + AF-ON] is highlighted.		
AF-ON	[AF-ON]	Pressing the control initiates autofocus, duplicating the function of the AF-ON button.	
A	[AF lock only]	Focus locks while the control is pressed.	
ā9	[AE lock (Hold)]	Exposure locks when the control is pressed. Exposure lock does not end when the shutter is released. Exposure remains locked until the control is pressed a second time or the standby timer expires.	
<u>₿</u> ®	[AWB lock (hold)]	If [Auto] or [Natural light auto] is selected for white balance, white balance will lock when the control is pressed (white-balance lock). White- balance lock does not end when the shutter is released. The lock will however be released when the control is pressed a second time or the standby timer expires.	



	Role	Description	
8 3	[AE/AWB lock (hold)]	Exposure locks when the control is pressed. White balance will also lock provided [Auto] or [Natural light auto] is selected for white balance. Exposure and white-balance lock do not end when the shutter is released. The lock will however be released when the control is pressed a second time or the standby timer expires.	
Å®	[AE lock (Reset on release)]	Exposure locks when the control is pressed. Exposure remains locked until the control is pressed a second time, the shutter is released, or the standby timer expires.	
A 3	[AE lock only]	Exposure locks while the control is pressed.	
A.	[AE/AF lock]	Focus and exposure lock while the control is pressed.	
۶L	[FV lock]	Press the control to lock flash value for optional flash units; press again to cancel FV lock.	
®/ \$	[4 Disable/ enable]	If the flash is currently enabled, it will be disabled while the control is pressed. If the flash is currently off, front-curtain sync will be selected while the control is pressed.	
6	[Preview]	While the control is pressed, the shooting display will show how color, exposure, and depth of field are affected by current photo settings.	

	Role	Description
۵,	[Recall shooting functions]	 Hold the control to recall previously-selected settings. To choose the settings recalled, press ⁽²⁾ when [Recall shooting functions] is highlighted. Highlight items using ⁽²⁾ or ⁽²⁾ and press ⁽²⁾ to select (⁽²⁾) or deselect (⁽²⁾). Only items marked with a check (⁽²⁾) will be recalled while the button is pressed. Highlight items using ⁽²⁾ or ⁽²⁾ and press ⁽²⁾ to view options. Press ⁽²⁾ to save changes and exit. To store current camera settings for later recall using this option, select [Save current settings]. Settings such as shutter speed and aperture can be changed by holding the control and rotating a command dial. In mode P, you can adjust flexible program settings. If an option other than [Off] is selected for Custom Setting b3 [Easy exposure compensation can be adjusted by rotating a command dial.



Role		Description	
BKTQJ	[Bracketing burst]	 If the control is pressed when an option other than [WB bracketing] is selected for [Auto bracketing] > [Auto bracketing set] in the photo shooting menu in continuous release mode, the camera will take all the shots in the current bracketing program and repeat the bracketing burst while the shutter-release button is pressed. In single-frame release mode, shooting will end after the first bracketing burst. If [WB bracketing] is selected for [Auto bracketing set], the camera will take pictures while the shutter-release button is pressed and apply white balance bracketing to each shot. 	

	Role	Description
Q - g	[Sync. release selection]	 When [Synchronized release] is selected for [Connect to other cameras] in the network menu, or when a wireless remote controller is used for synchronized release, the chosen control can be used to toggle between remote release and master or synchronized release. The options available depend on the setting chosen for Custom Setting d4 [Sync. release mode options]. The following options are available when [Sync] is selected for [Sync. release mode options]: [Master release only] (ལ་ཐི): Keep the control pressed to take pictures with the master camera only. [Remote release only] (ལ་ཐི): Keep the control pressed to take pictures only with the remote cameras. The following options are available when [No sync] is selected for [Sync. release mode options]: [Synchronized release] (ལ་ཐི): Keep the control pressed to synchronize the releases on the master and remote cameras. [Remote release only] (ལ་ཐི): Keep the control pressed to take pictures only with the remote cameras.



	Role	Description	
+[RAW]	[+ RAW]	 If a JPEG option is currently selected for image quality, "RAW" will appear in the shooting display and an NEF (RAW) copy will be recorded with the next picture taken after the control is pressed. The original image quality setting will be restored when you remove your finger from the shutter-release button or press the control again, canceling [+ RAW]. NEF (RAW) copies are recorded at the settings currently selected for [RAW recording] in the photo shooting menu. 	
SL	[Silent mode]	Press the control to enable silent mode. Press again to disable.	
₽œ	[Live view info display off]	Press the control to hide icons and other information in the shooting display. Press again to view.	
▦	[Framing grid]	Press the control to display a framing grid. To hide the grid, press the control again. The display type can be selected using Custom Setting d15 [Grid type].	
€	[Zoom on/off]	Press the control to zoom the display in on the area around the current focus point. Press again to cancel zoom.	

	Role	Description	
	[Virtual horizon]	Press the control to enable the virtual horizon display. Press again to hide the display. The display type can be selected using Custom Setting d16 [Virtual horizon type].	
(STAR)	[Starlight view (photo Lv)]	Press the control to toggle starlight view on. Press again to end starlight view.	
PEAK	[Focus peaking display]	Press the control once to enable focus peaking when MF is selected for focus mode. Press again to end focus peaking.	
₽	[MY MENU]	Press the control to display "MY MENU".	
ſ₽	[Access top item in MY MENU]	Press the control to jump to the top item in "MY MENU". Select this option for quick access to a frequently-used menu item.	
►	[Playback]	Press the control to start playback.	
₽₹	[Filtered playback]	Press the control to view only pictures that meet the criteria selected for [Filtered playback criteria] in the playback menu.	
= AFON	[Same as AF-ON button]	The control performs the role currently selected for the AF-ON button.	
SHOOT	[Shooting menu bank]	Press the control and rotate a command dial to choose a shooting menu bank.	
MODE	[Shooting mode]	Press the control and rotate the main command dial to choose a shooting mode.	
E	[Choose image area]	Press the control and rotate a command dial to choose the image area.	

	Role	Description	
QUAL	[Image quality/ size]	Press the control and rotate the main command dial to choose an image quality option and the sub-command dial to select image size.	
r.	[Set Picture Control]	Press the control and rotate a command dial to choose a Picture Control.	
时	[Active D-Lighting]	Press the control and rotate a command dial to adjust Active D-Lighting.	
C 0.	[Metering]	Press the control and rotate a command dial to choose a metering option.	
AF/[+]	[Focus mode/ AF-area mode]	Hold the control and rotate the main command dial to choose the focus mode, the sub-command dial to choose the AF-area mode.	
ВКТ	[Auto bracketing]	Press the control and rotate the main command dial to choose the number of shots and the sub- command dial to select the bracketing increment or Active D-Lighting amount.	
Ð	[Multiple exposure]	Press the control and rotate the main command dial to choose the mode and the sub-command dial to choose the number of shots.	
HDR	[HDR overlay]	Press the control and rotate the main command dial to choose the mode and the sub-command dial to adjust HDR strength.	
LOCK	[Control lock]	 Press the control and rotate the main command dial to lock shutter speed (modes S and M). To lock aperture (modes A and M), press the control and rotate the sub-command dial. To lock focus-point selection, hold the control and press , , , , , , , or . 	

	Role	Description
÷9	aperture] adjusted in increments of 1 EV by holding control and rotating the main command of In modes A and M, aperture can be adjust increments of 1 EV by holding the control rotating the sub-command dial.	
Non-CPU	[Choose non- CPU lens number]	Press the control and rotate a command dial to choose a lens number saved using the [Non-CPU lens data] item in the setup menu.
M/A	[Focus (M/A)]	Autofocus can be over-ridden by rotating the lens control ring (autofocus with manual override). The control ring can be used for manual focus while the shutter-release button is pressed halfway. To refocus using autofocus, lift your finger from the shutter-release button and then press it halfway again.
\$	[Aperture]	Rotate the lens control ring to adjust aperture.



Role		Description
	[Exposure compensation]	 Assigning this function to the Fn button for vertical shooting allows exposure compensation to be adjusted by holding the button and rotating a command dial. Assigning this function to the lens control ring allows exposure compensation to be adjusted by rotating the ring.
IS0	[ISO sensitivity]	Rotate the lens control ring to adjust ISO sensitivity.
[None	2]	The control has no effect.

Command Dials

The following roles can be assigned to the command dials. To view options, highlight items and press \mathfrak{G} .

Role	Description	
[Exposure setting]	Reverse the roles of the main and sub-command dials in selected modes. Press $$ or $$ to highlight a mode and $$ or $$ to switch roles.	
[Focus/AF-area mode selection]	Switch the roles played by rotating the main and sub-command dials while the focus-mode button is pressed.	
[Sub-command dial zoom role]	 Choose the role played by the sub-command dial in the zoom display. Choose [Exposure setting] to change the role played by the sub-command dial in each mode. Choose [Zoom] to use the sub-command dial to zoom in or out. 	

Choose the operations performed during playback using the cameras

Option			Option	
n,	[Fn1 button]		[QUAL button]	
602 10	[Fn2 button]	WB	[WB button]	
Fn3	[Fn3 button]	•	[Vertical shooting multi	
	[Fn button for vertical shooting]	\¥	selector]	
Ĩ Fn			[Main command dial]	
Fn4	[Protect/Fn4 button]	â	[Sub-command dial]	
OK	[OK button]		[Video record button]	
Q	[Audio button]			



(3 Custom controls (playback)

n1 button None

f3: Custom Controls (Playback)

• Choose the roles played by the controls

below. Highlight the desired control and

controls listed below.

press ®.

MENU button 🔿 🖋 Custom Settings menu

5



• The roles that can be assigned to these controls are listed below. The roles available vary with the control.

Om Protect		Description
		Press the control to toggle protection for the current picture on or off.
Q	[Zoom on/off]	 Press the control to zoom the display in on the area around the current focus point (the zoom ratio is selected in advance). Press again to cancel zoom. To choose the zoom ratio, highlight [Zoom on/off] and press ⁽. Zoom on/off is available in both full-frame and thumbnail playback.
▶▼ [Filtered playback]		Press the control to view only pictures that meet the criteria selected for [Filtered playback criteria] in the playback menu.
Ŷ	● [Voice memo] Use the control for voice memo operation	

Role		Description
⊷PC	[Select for upload to computer]	 Press the control to upload the current picture to a computer or FTP server with which the camera is currently connected. To view upload options, highlight [Select for upload to computer] or [Select for upload (FTP)] and press ③. Highlight options and press ③ to select (☑) or deselect (□). [Priority upload]: If this option is selected (☑), pressing the control to mark a picture for
∽FTP	[Select for upload (FTP)]	 upload will move it to the front of the upload queue. [Protect]: If this option is selected (☑), pressing the control to mark a picture for upload will simultaneously protect it. [Rating]: If this option is selected (☑), pressing the control to mark a picture for upload will simultaneously assign it a preset rating. Press ③ to choose the rating.
*	[Rating]	 To rate the current picture in playback mode, press the control and rotate the main command dial. To display rating options, highlight [Rating] and press ①. If an option other than [None] is selected, the chosen rating can be assigned to pictures simply by pressing the selected control. Pressing the control again selects a "no star" rating.



Role		Description	
8	[Thumbnail on/ off]	Press the control to toggle between full-frame and 4-, 9-, or 72-frame thumbnail playback.	
[View histograms]		A histogram is displayed while the control is pressed. The histogram display is available in both full-frame and thumbnail playback.	
[Choose slot and folder]		Press the control to display the [Choose slot and folder] dialog, where you can then choose a slot and folder for playback.	
[④/\$ switched]		Press the multi selector for vertical shooting up or down to view other pictures, left or right to page through photo information.	
[⊕/\$ unswitched]		Press the multi selector for vertical shooting up o down to page through photo information, left or right to view other pictures.	
[None]		The control has no effect.	

Command Dials

The following roles can be assigned to the command dials. To view options, highlight items and press ().

Frame Advance

Choose the number of frames that can be skipped by rotating the command dials during full-frame playback.

Option		Description		
[1 frame]		Skip forward or back 1 frame at a time.		
[10 frames]		Skip forward or back 10 frames at a time.		
[50 frames]		Skip forward or back 50 frames at a time.		
*	[Rating]	Skip to the next or previous picture with the selected rating.		
07	[Protect]	Skip to the next or previous protected picture.		
Ó	[Photos only]	Skip to the next or previous photo.		
塛	[Videos only]	Skip to the next or previous video.		
	[Folder]	Rotate the dial to select a folder.		
	[Page]	View the next or previous page of thumbnails.		



Video Playback

Choose the roles played by the command dials during video playback.

Option	Description		
[1 frame]	Advance or rewind a frame at a time.		
[5 frames]	Advance or rewind 5 frames at a time.		
[10 frames]	Advance or rewind 10 frames at a time.		
[2 s]	Skip forward or back 2 s at a time.		
[5 s]	Skip forward or back 5 s at a time.		
[10 s]	Skip forward or back 10 s at a time.		
[First/last frame]	Skip to the first or last frame.		

f4: Control Lock

MENU button 🔿 🖋 Custom Settings menu

Lock exposure settings or focus-point selection.

Option	Description		
[Shutter speed lock]	 Select [ON] to lock shutter speed at its current value in modes S and M. I icons appear in the shooting display and control panel when shutter-speed lock is in effect. 		
[Aperture lock]	 Select [ON] to lock aperture at its current value in modes A and M. I icons appear in the shooting display and control panel when aperture lock is in effect. 		
[Focus-point lock]	 Select [ON] to lock focus-point selection on the currently-selected focus point. Focus point lock does not apply when [Auto-area AF] is selected for AF-area mode. When [3D-tracking] is selected, the focus point will track subject motion while the shutter-release button is pressed halfway. 		



f5: Reverse Dial Rotation

MENU button 🔿 🖋 Custom Settings menu

Reverse the direction of rotation of the command dials for selected operations.

- Highlight [Exposure compensation] or [Shutter speed/aperture] and press ③ to select (☑) or deselect (□).
- Press MENU to save changes and exit.
- The changes also apply to the command dial for vertical shooting.

f6: Release Button to Use Dial MENU button ⇒ ✓ Custom Settings menu

Selecting [**ON**] allows adjustments that are normally made by holding a button and rotating a command dial to be made by rotating the command dial after the button is released. This ends when the button is pressed again, the shutter-release button is pressed halfway, or the standby timer expires.

- [Release button to use dial] applies to the ⊠, ISO (), BKT, ⊒, MODE, ¢, O¬n (Fn4), QUAL, WB, and focus-mode buttons.
- [Release button to use dial] also applies to controls to which certain roles have been assigned using Custom Setting f2 [Custom controls (shooting)] or g2 [Custom controls].

f7: Reverse Indicators

MENU button 🔿 🖋 Custom Settings menu

Choose whether the exposure indicator is displayed with negative values on the left and positive values on the right, or with positive values on the left and negative values on the right.

Option		Description	
+0-	+_:::::::::::-	The indicator is displayed with positive values on the left and negative values on the right.	
-0+	-	The indicator is displayed with negative values on the left and positive values on the right.	

ĺ	f8: Reverse Ring for Focus
	MENU button 🔿 🖊 Custom Settings menu

Select [ON] to reverse the direction of rotation for the focus or control rings on Z mount lenses during manual focus.

- This option does not support:
 - certain Z mount lenses that can only be focused manually, or
 - F mount lenses connected via an FTZ II/FTZ mount adapter.



f9: Focus Ring Rotation Range

MENU button 🔿 🖋 Custom Settings menu

Choose how far the focus or control rings on Z mount lenses must be rotated to go all the way from the minimum focus distance to infinity.

Option	Description			
[Non-linear]	The focus distance changes by a large amount when the ring is rotated rapidly and by a small amount when the ring is rotated slowly, without regard to how far the ring is rotated.			
[90 °]				
[120 °]	_			
[150°]	-			
[180 °]				
[210 °]	Choose how far the ring must be rotated to go all the way			
[240 °]	from the minimum focus distance to infinity. To take focus			
[270 °]	from the minimum distance to infinity when, for example, [90 °] is selected, the ring need only be rotated 90°. Larger			
[300 °]	values permit finer adjustments.			
[330 °]				
[360 °]				
[540°]	-			
[720 °]	-			
[Max.]	Taking focus from the minimum focus distance to infinity requires rotating the ring the maximum distance permitted at current lens settings.			

• If the lens does not support rotation range selection, [Focus ring rotation range] will be fixed at [Non-linear].

f10: Control Ring Response

MENU button 🔿 🖋 Custom Settings menu

Choose how responsive the lens control ring is when assigned the [Aperture], [Power aperture], [Exposure compensation], or [ISO sensitivity] using Custom Setting f2 [Custom controls (shooting)] or g2 [Custom controls].



f11: Full-Frame Playback Flicks

MENU button 🔿 🖌 Custom Settings menu

Choose the role assigned to the flick up and down or flick left and right gestures during full-frame playback.

Flick Up/Flick Down

Choose the operation performed by flicking up or down.

Option		Description		
*	[Rating]	Assign the current picture a pre-selected rating. The rating can be chosen by pressing \mathfrak{G} .		
⊷PC	[Select for upload to computer]	Mark the current picture for priority upload to a computer.		
∽FTP	[Select for upload (FTP)]	Mark the current picture for priority upload to an FTP server.		
0-п	[Protect]	Protect the current picture.		
Ŷ	[Voice memo]	Flick to start recording a voice memo. If a memo already exists for the current picture, flicking instead begins playback of the existing memo. Press ® to end recording or playback.		
[None]		Flicking up or down has no effect.		

 Pictures selected by flicking up or down when [Rating], [Select for upload to computer], [Select for upload (FTP)], or [Protect] is selected are indicated by icons (2231). The marking can be removed by flicking again in the same direction.

Flick Advance Direction Choose the gesture used for frame advance.

Option		Description		
[Left← Right]		Flick from right to left to view the next picture.		
⇒	[Left→ Right]	Flick from left to right to view the next picture.		



g1: Customize 🖬 Menu

MENU button 🔿 🖋 Custom Settings menu

Choose the items listed in the \boldsymbol{i} menu displayed when the \boldsymbol{i} button is pressed in video mode.

- Highlight a position in the \boldsymbol{i} menu, press $\boldsymbol{\circledast}$, and select the desired item.
- The following items can be assigned to the *i* menu.

Option			Option		
SHOOT	[Shooting menu	493	2 0.	[Metering]	520
	bank]		AF/MF	[Focus mode]	110
CUSTOM	[Select custom settings bank]	597	[+]/ª×	[AF-area mode/subj. detection]	113
EX	[Choose image area]	218	(4)	[Vibration reduction]	587
¶QUAL	[Frame size/frame	216	()	[Electronic VR]	587
	rate]		ſ₽	[Microphone	588
	[Destination]	578	¥=	sensitivity]	200
Z	[Exposure compensation]	143	ATT	[Attenuator]	589
			\mathbf{v}	[Frequency response]	589
IS0	[ISO sensitivity settings]	154	÷.	[Wind noise reduction]	589
WB	[White balance]	158	Q	[Headphone volume]	590
<u> </u>	[Set Picture Control]	192	SL	[Silent mode]	735
HLGØ	[HLG quality]	582		[Custom controls]	674
畤	[Active D-Lighting]	512			
			PEAK	[Focus peaking]	610

	Option			Option	
Z	[Zebra pattern]	686	20	[Multi selector	673
÷Ö:	[Monitor/viewfinder	709,		exposure comp.]	0/3
Ų.	brightness]	711	RED	[Warm display colors]	626
¥	[Airplane mode]	756			
¢	[Multi-selector power aperture]	673			

Multi-Selector Power Aperture

Choose whether the multi selector can be used for power aperture. When [Enable] is selected, holding (*) widens the aperture. Holding (*) narrows the aperture.

Multi Selector Exposure Comp.

Choose whether the multi selector can be used to adjust exposure compensation. Selecting [Enable] allows exposure compensation to be set by pressing 🖱 or 🏵.



g2: Custom Controls

Choose the operations performed in video mode using camera or lens controls, including the camera buttons and sub-selector and the lens control ring.

 Choose the roles played by the controls below. Highlight the desired control and press [®].

Option		Option	
m	[Fn1 button]	0141	[QUAL button]
Fn2	[Fn2 button]	Q	[Audio button]
Fn3	[Fn3 button]	C.	[AF-ON button for vertical
	[Fn button for vertical		shooting]
US.	shooting]	90	[Vertical multi selector
€.	[Focus mode button]	0	center]
AFON	[AF-ON button]	2	[Command dials]
Fn4	[Protect/Fn4 button]	۲	[Shutter-release button]
OK	[OK button]	Lfn2	[Lens Fn2 button]
۲	[Sub-selector center]	L'Fn	[Lens Fn button]
	I	01	[Lens control ring]

 Quadram controls
 Image: Control of the co

MENU button 🔿 🖌 Custom Settings menu

• The roles that can be assigned are listed below. The roles available vary with the control.

	Role	Description
SL	[Silent mode]	Press the control to enable silent mode. Press again to disable.
₫Œ	[Live view info display off]	Press the control to hide icons and other information in the shooting display. Press again to view.
▦	[Framing grid]	Press the control to display a framing grid. To hide the grid, press the control again. The display type can be selected using Custom Setting g11 [Grid type].
AF-ON	[AF-ON]	Pressing the control initiates autofocus, duplicating the function of the AF-ON button.
Ā	[AF lock only]	Focus locks while the control is pressed.
Åê	[AE lock (Hold)]	Exposure locks when the control is pressed. Exposure lock does not end when recording begins. Exposure remains locked until the control is pressed a second time or the standby timer expires.



Role		Description
đ9	[AWB lock (hold)]	If [Auto] or [Natural light auto] is selected for white balance, white balance will lock when the control is pressed (white-balance lock). White- balance lock does not end when recording begins. The lock will however be released when the control is pressed a second time or the standby timer expires.
\$	[AE/AWB lock (hold)]	Exposure locks when the control is pressed. White balance will also lock provided [Auto] or [Natural light auto] is selected for white balance. Exposure and white-balance lock do not end when recording begins. The lock will however be released when the control is pressed a second time or the standby timer expires.
£13	[AE lock only]	Exposure locks while the control is pressed.
Å	[AE/AF lock]	Focus and exposure lock while the control is pressed.
€	[Zoom on/off]	Press the control to zoom the display in on the area around the current focus point. Press again to cancel zoom.
	[Virtual horizon]	Press the control to enable the virtual horizon display. Press again to hide the display. The display type can be selected using Custom Setting d16 [Virtual horizon type].

Role		Description
PEAK	[Focus peaking display]	Press the control once to enable focus peaking when MF is selected for focus mode. Press again to end focus peaking.
₽	[MY MENU]	Press the control to display "MY MENU".
ſ₹	[Access top item in MY MENU]	Press the control to jump to the top item in "MY MENU". Select this option for quick access to a frequently-used menu item.
►	[Playback]	Press the control to start playback.
₽₹	[Filtered playback]	Press the control to view only pictures that meet the criteria selected for [Filtered playback criteria] in the playback menu.
٥	[Power aperture (open)]	Aperture widens while the Fn1 button is pressed. Use in combination with Custom Setting g2 [Custom controls] > [Fn2 button] > [Power aperture (close)] for button-controlled aperture adjustment.
\$	[Power aperture (close)]	Aperture narrows while the Fn2 button is pressed. Use in combination with Custom Setting g2 [Custom controls] > [Fn1 button] > [Power aperture (open)] for button-controlled aperture adjustment.
Ŧ	[Exposure compensation +]	Exposure compensation increases while the Fn1 button is pressed. Use in combination with Custom Setting g2 [Custom controls] > [Fn2 button] > [Exposure compensation –] for button-controlled exposure compensation.
⊿	[Exposure compensation -]	Exposure compensation decreases while the Fn2 button is pressed. Use in combination with Custom Setting g2 [Custom controls] > [Fn1 button] > [Exposure compensation +] for button-controlled exposure compensation.

Role		Description
	[Pattern tone range]	Press the control to cycle through zebra pattern tone range options.
PRE®	[Preset focus point]	 Pressing the control selects a preset focus point. To choose the point, highlight it, hold the control, and press the focus-mode button until the focus point flashes. The behavior of the selected control can be chosen by pressing when [Preset focus point] is highlighted. [Press to recall focus point]: Pressing the control recalls the preset focus point. [Hold to recall focus point]: The preset focus point is selected while the control is pressed. Releasing the control restores the focus point selected before the control was pressed.

Role		Description
RESET	[Select center focus point]	Pressing the control selects the center focus point.
= AFON	[Same as AF-ON button]	The control performs the role currently selected for the AF-ON button.
塛	[Record videos]	Press the control to start recording. Press again to end recording.
MODE	[Shooting mode]	Press the control and rotate the main command dial to choose a shooting mode.
SHOOT	[Shooting menu bank]	Press the control and rotate a command dial to choose a shooting menu bank.
E)	[Choose image area]	Press the control and rotate a command dial to choose the image area for videos. Note that the image area cannot be changed while recording is in progress.
R	[Set Picture Control]	Press the control and rotate a command dial to choose a Picture Control.
畦	[Active D-Lighting]	Press the control and rotate a command dial to adjust Active D-Lighting for videos.
B 0.	[Metering]	Press the control and rotate a command dial to choose a metering option for use during video recording.
AF/[+]	[Focus mode/ AF-area mode]	Hold the control and rotate the main command dial to choose the focus mode, the sub-command dial to choose the AF-area mode.



	Role	Description
LOCK	[Control lock]	 Press the control and rotate the main command dial to lock shutter speed (mode M). To lock aperture (modes A and M), press the control and rotate the sub-command dial. To lock focus-point selection, hold the control and press (*), (*), (*), or (*).
₽≣	[Microphone sensitivity]	Press the control and rotate a command dial to adjust microphone sensitivity.
M/A	[Focus (M/A)]	The lens control ring can be used for manual focus regardless of the option selected for focus mode. To refocus using autofocus, press the shutter- release button halfway or press a control to which AF-ON has been assigned.
\$	[Power aperture]	Rotate the lens control ring to adjust aperture.
Z	[Exposure compensation]	 Assigning this function to the Fn button for vertical shooting allows exposure compensation to be adjusted by holding the button and rotating a command dial. Assigning this function to the lens control ring allows exposure compensation to be adjusted by rotating the ring.
ISO	[ISO sensitivity]	Rotate the lens control ring to adjust ISO sensitivity.
[None	e]	The control has no effect.

V Power Aperture

- Power aperture is available only in modes **A** and **M**.
- The display may flicker while aperture is adjusted.

Command Dials

The following roles can be assigned to the command dials. To view options, highlight items and press ().

Role	Description
[Exposure setting]	Reverse the roles of the main and sub-command dials in selected modes. Press \textcircled{O} or \textcircled{O} to highlight a mode and \textcircled{O} or \textcircled{O} to switch roles.
[Focus/AF-area mode selection]	Switch the roles played by rotating the main and sub-command dials while the focus-mode button is pressed.
[Sub-command dial zoom role]	 Choose the role played by the sub-command dial in the zoom display. Choose [Exposure setting] to change the role played by the sub-command dial in each mode. Choose [Zoom] to use the sub-command dial to zoom in or out.



g3: Control Lock

MENU button 🔿 🖋 Custom Settings menu

Lock exposure settings or focus-point selection.

Option	Description
[Shutter speed lock]	 Select [ON] to lock shutter speed at its current value in mode M. I icons appear in the shooting display and control panel when shutter-speed lock is in effect.
[Aperture lock]	 Select [ON] to lock aperture at its current value in modes A and M. I icons appear in the shooting display and control panel when aperture lock is in effect.
[Focus-point lock]	 Select [ON] to lock focus-point selection on the currently-selected focus point. Focus point lock does not apply when [Auto-area AF] is selected for AF-area mode. When [Subject-tracking AF] is selected, the focus point will track subject motion.

MENU button I Custom Settings menu

Limit focus-mode selection to a single focus mode. If an option other than [No restrictions] is selected, rotating the main command dial while holding the focus-mode button will not change the focus mode.

Choose the AF-area modes that can be selected by pressing the focusmode button and rotating the sub-command dial.

• Highlight options and press ® or () to select (𝔄) or deselect (□). Modes marked with a check (\mathbf{M}) are available for selection via the sub-command dial.

q4: Limit AF-Area Mode Selection

• To complete the operation, press MENU.

q5: Focus Mode Restrictions

Limit AF-area mode selection 5 2 e-point AF ea AF (L) ct-tracking AF

Auto-area AF

MENU button 🔿 🖌 Custom Settings menu



g6: AF Speed

Choose the focus speed for video mode.

Use [When to apply] to choose when the selected option applies.

Option		Description
ALWAYS	[Always]	The camera focuses at the selected speed at all times in video mode.
REC	[Only while recording]	Focus is adjusted at the selected speed only while video recording is in progress. At other times, the camera focuses as quickly as possible.

🔽 Lens Sounds

The sound produced by the lens during focus operations increases with AF speed. The effect is particularly noticeable at a setting of [+**5**], so choose lower values if you find the noise distracting.



MENU button 🔿 🖋 Custom Settings menu

q7: AF Tracking Sensitivity

The AF tracking sensitivity for video mode can be set to values of from 1 to 7.

- Choose [7] (Low) to help maintain focus on your original subject.
- If the subject leaves the selected focus area when [1] (High) is selected, the camera will

respond by guickly shifting focus to a new subject in the same area.

q8: View Assist MENU button I Custom Settings menu

Choose [ON] for a live preview of video footage recorded with [HLG] or [N-Log] selected for video tone mode, but note that the colors in the preview are simplified for enhanced contrast.

- Colors in the actual recorded footage are unaffected.
- · Contrast is also enhanced when HLG or N-Log footage is viewed on the camera.





g9: Zebra Pattern

MENU button 🔿 🖋 Custom Settings menu


Choose whether a zebra pattern is used to indicate selected tone ranges in video mode.

Pattern Tone Range

Choose the tone range shown by the zebra pattern from [Highlights] or [Mid-tones], or select [Zebra pattern off] to turn the zebra pattern off. Highlights and mid-tones can be defined using [Highlight threshold] and [Mid-tone range], respectively.

Pattern **Pattern**

To enable the zebra display, select [Pattern 1] or [Pattern 2].

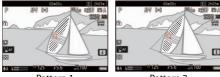



Pattern 2

Highlight Threshold

Choose the brightness needed to trigger the zebra display when [Highlights] is selected for [Pattern tone range].

- Choose from values of from 120 to 255. The lower the value, the greater the range of brightnesses that will be shown as highlights.
- If 255 is selected, the display will show only areas that are potentially overexposed.

Mid-tone Range

Choose the brightness needed to trigger the zebra display when [Mid-tones] is selected for [Pattern tone range].

• The mid-tone range is defined as a brightness [Value] and [Range] of brightnesses centered around the selected value.



• Press ④ or ④ to highlight items and press ④ or ⑤ to change.

Zebra Pattern

If both the zebra display and focus peaking are enabled in manual focus mode, only focus peaking will take effect. To view the zebra display in manual focus mode, select [OFF] for Custom Setting a13 [Focus peaking] > [Focus peaking display].



g10: Limit Zebra Pattern Tone Range MENU button ➡ ✔ Custom Settings menu

Choose the tone range shown by a zebra pattern when a control previously assigned [**Pattern tone range**] is pressed. If [**Highlights**] or [**Mid-tones**] is selected, pressing the control will display a zebra pattern only over areas in the selected tone range; pressing the button a second time hides the zebra pattern.

g11: Grid Type

MENU button 🔿 🖌 Custom Settings menu

Choose a framing grid for video mode. The selected grid can be displayed by placing a check (☑) next to ☶ in the list for Custom Setting g12 [Custom monitor shooting display] (□ 689) or g13 [Custom viewfinder shooting display] (□ 691).

g12: Custom Monitor Shooting Display MENU button 🔿 🖋 Custom Settings menu

Choose the monitor displays accessible by pressing the **DISP** button in video mode.

• Highlight items ([Display 2] through [Display 4]) and press I to select (I) or deselect (
). Only displays marked with a check (☑) can be accessed by pressing the **DISP** button during shooting. [**Display 1**] cannot be deselected.





• To choose indicators that appear in displays [**Display 1**] through [**Display 4**], highlight the corresponding option and press ⊕. You can then highlight items and press ⊛ to select (☑) or deselect (□).



Option		Description
SIMPLE	[Basic shooting info]	View the shooting mode, shutter speed, aperture, and other basic shooting info.
DETAIL	[Detailed shooting info]	View the focus mode, AF-area mode, white balance, and other detailed shooting info.
اها	[Touch controls]	View options that can be accessed via touch controls, including touch AF and the $m{i}$ menu.
[Virtual horizon]		Enable the virtual horizon. The display type can be selected using Custom Setting d16 [Virtual horizon type].
	[Histogram]	Enable the RGB histogram.
	[Framing grid]	Enable the framing grid. The display type can be selected using Custom Setting g11 [Grid type].
÷	[Center indicator]	Display crosshairs at the center of the frame.

• To complete the operation, press MENU.

g13: Custom Viewfinder Shooting Display

MENU button 🔿 🖌 Custom Settings menu

Choose the viewfinder displays accessible by pressing the **DISP** button in video mode.

- Highlight items ([Display 2] or [Display 3]) and press (b) to select (or deselect (□). Only displays marked with a check (☑) can be accessed by pressing the **DISP** button during shooting. [**Display 1**] cannot be deselected.
- To choose indicators that appear in displays [Display 1] through [Display 3], highlight the corresponding option and press (). You can then highlight items and press \circledast to select (\square) or deselect (\square). Apart from [Touch controls], the options are the same as those for Custom Setting g12 [Custom monitor shooting display] (CG 689).
- To complete the operation, press MENU.



► The Playback Menu: Managing Pictures

To display the playback menu, select the
(playback menu) tab in the camera menus.



The playback menu contains the following items:

ltem		ltem	
[Delete]	693	[Filtered playback criteria]	696
[Playback folder]	694	[Picture review]	696
[Playback display options]	694	[After delete]	697
[Delete pictures from both	695	[After burst, show]	698
slots]		[Rotate tall]	698
[Dual-format recording PB slot]	695	[Copy image(s)]	699

🔽 See Also

"Playback Menu Defaults" (🕮 483).

Delete

MENU button 🔿 🖻 playback menu

Delete multiple pictures. For more information, see "Deleting Multiple Pictures" (©260).

Option		Description	
[Selected pictures]		Delete selected pictures.	
6	[Candidates for deletion]	Delete pictures rated 🔂 (candidate for deletion).	
DATE	[Pictures shot on selected dates]	Delete all pictures taken on selected dates.	
ALL	[All pictures]	 Delete all pictures in the folder currently selected for [Playback folder] in the playback menu. If two memory cards are inserted, you can select the card from which pictures will be deleted. 	

Playback Folder

Choose a folder for playback.

Option	Description
(Folder name)	Pictures in all folders with the selected name will be visible during playback. Folders can be renamed using the [Storage folder] > [Rename] option in the photo shooting menu.
[All]	Pictures in all folders will be visible during playback.
[Current]	Only pictures in the current folder will be visible during playback.

Playback Display Options

MENU button
P I playback menu

Choose whether the focus points used when the photograph was taken are displayed during full-frame playback. You can also choose the types of photo information that can be viewed during full-frame playback.

- Highlight options and press () to select (□) or deselect (□).
- To complete the operation, press MENU.

Delete Pictures from Both Slots

Choose whether deleting a copy of a picture recorded to both memory cards with either [Backup] or a dual-format option ([RAW Slot 1 - JPEG Slot 2] or [JPEG Slot 1 - JPEG

Slot 2]) selected for [**Role played by card in Slot 2**] in the photo shooting menu also deletes the remaining copy.

	Option	Description
	[Yes (confirmation required)]	Before deleting one copy, you will be prompted to choose whether to delete the other. To choose the option highlighted by default, press \mathfrak{B} .
[Yes]		[Same pictures on [i] and [2]) is always selected; selecting [Yes] in the confirmation dialog deletes both copies.
	[Off]	The confirmation dialog displayed is the same as that for pictures for which no second copy exists. Deleting the current picture does not delete the copy.

Dual-Format Recording PB Slot

MENU button 🔿 🖻 playback menu

Choose the slot from which dual-format pictures recorded with [RAW Slot 1 - JPEG Slot 2] or [JPEG Slot 1 - JPEG Slot 2] selected for [Role played by card in Slot 2] in the photo shooting menu are played back.



MENU button 🔿 🖻 playback menu

Filtered Playback Criteria

MENU button
P I playback menu

Choose the criteria used to choose the pictures displayed during filtered playback (©255).

Picture Review

MENU button **> D** playback menu

Choose whether pictures are automatically displayed immediately after shooting.

Option	Description	
[O n]	Pictures appear in the currently-selected display (monitor or viewfinder) as they are taken.	
[On (monitor only)]	Pictures are displayed after shooting only when the monitor is used to frame shots. Pictures are not displayed in the viewfinder when [Viewfinder only] is selected for monitor mode.	
[Off]	Pictures can only be viewed by pressing the > button.	

After Delete

MENU button
P I playback menu

Choose the picture displayed after an image is deleted.


Option		Description
	[Show next]	 The following picture is displayed. If the deleted picture was the last picture, the preceding picture will be displayed.
		 The preceding picture is displayed. If the deleted picture was the first picture, the next picture will be displayed.
Dep	[Continue as before]	 If you were scrolling through pictures in the order recorded, the following picture will be displayed as described for [Show next]. If you were scrolling through pictures in reverse order, the preceding picture will be displayed as described for [Show previous].

After Burst, Show

MENU button
P I playback menu

Choose whether the photo displayed immediately after a burst of shots is taken in continuous mode is the first or last shot in the burst.

• This option takes effect only when [Off] is selected for [Picture review] in the playback menu.

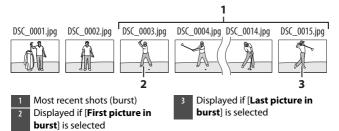

Rotate Tall

MENU button 🔿 🖻 playback menu

When **[ON]** is selected, "tall" (portrait-orientation) pictures will be automatically rotated for display during playback.

🔽 Caution: Rotate Tall

Pictures are not rotated automatically during picture review even when [ON] is selected for [Rotate tall].

Copy Image(s)

MENU button **> D** playback menu

Copy pictures from one memory card to another when two memory cards are inserted.

Option	Description
[Select source]	Choose the card from which pictures will be copied.
[Select picture(s)]	Select pictures to be copied.
[Select destination	Select the destination folder on the remaining card
folder]	(the card not selected for [Select source]).
[Copy picture(s)?]	Copy the pictures.

Copying Pictures

1 Choose [Select source].


Highlight [**Select source**] and press () to display the [**Select source**] dialog.



2 Select the card containing the pictures to be copied.


Highlight the slot for the card containing the pictures to be copied and press ® to select the highlighted slot and return to the [**Copy image(s)**] menu.



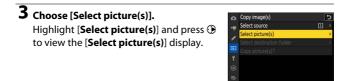

4 Select the source folder.

 Highlight the folder containing the pictures to be copied and press () to display the [Images selected by default] menu.

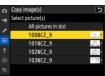

• To copy all pictures from the card in the selected slot, highlight [All pictures in slot], press ®, and proceed to Step 10.

5 Make the initial selection.

Choose the pictures that will be selected by default.



Option	Description
[Deselect all]	None of the pictures in the chosen folder will be selected by default.Choose this option when you want to select pictures individually.
[Select all pictures]	All of the pictures in the chosen folder will be selected by default.Choose this option if you want to copy all or most of the pictures in the folder.
[Select protected pictures]	Only the protected pictures in the folder will be selected by default.

6 Select additional pictures.

- Highlight pictures and press the Q≅ (?) button to select; selected pictures are marked with a check (...). To remove the check (...) and deselect the current picture, press the Q≅ (?) button again.
- \bullet To view the highlighted picture full screen, press and hold the $\ensuremath{\mathfrak{P}}$ button.
- 7 Choose [Select destination folder]. Highlight [Select destination folder] and press () to display [Select destination folder] options.

	Copy image(s)	J
-	Select source	
Ĵ,	Select picture(s)	
_	Select destination folder	101 >
	Copy picture(s)?	



8 Choose a destination folder.

Highlight one of the following options and press ().




Option	Description		
[Select folder by number]	Enter the number of the destination folder (□498). If a folder with the selected number does not already exist, a new folder will be created.	Copy image(s) Select folder by number D Select folder by number D NC2_9 Y O TNC2_9 TO O Select folder Sel	
[Select folder from list]	Choose the destination folder from a list of existing folders.	Copy image(s) D Select folder from list 1000KCZ_9 1010KCZ_9 1010KCZ 1020KCZ_9 1030KCZ ¥ 1030KCZ_9 ∞ 1030KCZ.9	

9 Select the folder.

After entering a folder number or highlighting the folder name, press ® to select the folder and return to the [**Copy image(s)**] menu.

10 Choose [Copy picture(s)?].

Highlight [**Copy picture(s)?**] and press ® to display a confirmation dialog.

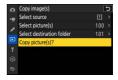

11 Choose [Yes].

- The camera will display the message "[**Copy**?]" together with the number of pictures that will be copied.
- Highlight [**Yes**] and press [®] to copy the selected pictures.



• Press @ again to exit when copying is complete.

Cautions: Copying Pictures

- Pictures will not be copied if there is insufficient space on the destination card.
- If the destination folder contains a file with the same name as one of the pictures to be copied, a confirmation dialog will be displayed. Select [Replace existing picture] or [Replace all] to replace the existing file or files. Protected files



in the destination folder will not be replaced. Select [**Skip**] to continue without replacing existing files. Select [**Cancel**] to exit without copying any further pictures.

- Ratings and protection are copied with the pictures.
- To prevent loss of power while copying is in progress, be sure the battery is fully charged or connect the supplied charging AC adapter or an optional AC adapter and power connector before copying videos.

Y The Setup Menu: Camera Setup

To view the setup menu, select the ${\bf Y}$ tab in the camera menus.



The setup menu contains the following items:

Item		ltem	
[Format memory card]	708	[Sensor shield behavior at	719
[Language]	708	power off]	
[Time zone and date]	709	[Clean image sensor]	719
[Monitor brightness]	709	[Image Dust Off ref photo]	720
[Monitor color balance]	710	[Pixel mapping]	723
[Viewfinder brightness]	711	[Image comment]	724
[Viewfinder color balance]	712	[Copyright information]	725
[Finder display size (photo	710	[IPTC]	726
Lv)]	712	[Voice memo options]	732
[Limit monitor mode	713	[Camera sounds]	733
selection]	/15	[Silent mode]	735
[Auto rotate info display]	713	[Touch controls]	736
[AF fine-tuning options]	714	[HDMI]	736
[Non-CPU lens data]	718	[USB connection priority]	737
[Save focus position]	718	`	

ltem		ltem	
[Location data (built-in)]	737	[Energy saving (photo	746
[Wireless remote (WR)	738	mode)]	/ 10
options]	/30	[Slot empty release lock]	747
[Assign remote (WR) Fn	741	[Save/load menu settings]	748
button]		[Reset all settings]	754
[Conformity marking]	741	[Firmware version]	754
[Battery info]	742		
[USB power delivery]	744		

🔽 See Also

"Setup Menu Defaults" (🕮 485)

Format memory cards. To begin formatting, choose a memory card slot and select [Yes]. Note that formatting permanently deletes all pictures and other data on the card. Before formatting, be sure to make backup copies as required.

🔽 Caution: During Formatting

Do not turn the camera off or remove memory cards until the message [**Formatting memory card**] clears from the display.

The Format Buttons

Keeping both format ($m \ll and ISO \ll buttons pressed for over two seconds displays a dialog prompting you to select a card for formatting.$

Language

MENU button 🔿 🍟 setup menu

Choose a language for camera menus and messages. The languages available vary with the country or region in which the camera was originally purchased.



MENU button 🔿 🍟 setup menu

Time Zone and Date

MENU button 🔿 🍟 setup menu

Change time zones and set the camera clock. We recommend that the camera clock be adjusted regularly.

Option	Description
[Time zone]	Choose a time zone. The time selected for [Date and time] is automatically adjusted for the new time zone.
[Date and time]	Set the camera clock to the current time in the selected [Time zone].
[Date format]	Choose the order in which the day, month, and year are displayed.
[Daylight saving time]	Turn daylight saving time [ON] or [OFF]. Selecting [ON] automatically advances the clock one hour. The default setting is [OFF].

A flashing $\boldsymbol{\mathfrak{G}}$ icon in the shooting display indicates that the clock has not been set.

Monitor Brightness

MENU button 🔿 🖞 setup menu

Press O or O to adjust monitor brightness. Choose higher values for increased brightness, lower values for reduced brightness.


- [Monitor brightness] can only be adjusted when the monitor is the active display. It cannot be adjusted when [Viewfinder only] is selected for monitor mode or when your eye is to the viewfinder.
- Higher values increase the drain on the battery.

Monitor Color Balance

Adjust monitor color balance to your taste.

- [Monitor color balance] can only be adjusted when the monitor is the active display. It cannot be adjusted when [Viewfinder only] is selected for monitor mode or when your eye is to the viewfinder.
- Color balance is adjusted using the multi selector. Press (♣), ♠), ♠), or (♣) to adjust color balance as shown below. Press (֎) to save changes.



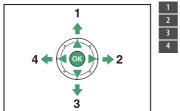

Increase greenIncrease amberIncrease magenta

Increase blue

 Monitor color balance applies only to menus, playback, and the shooting display; photos and videos taken with the camera are not affected.

- The reference image is either the last picture taken or, in playback mode, the picture last displayed. If the memory card contains no pictures, an empty frame will be displayed instead.
- To view the highlighted picture full frame, press and hold ♥.

Viewfinder Brightness

MENU button 🔿 🍟 setup menu

- Adjust viewfinder brightness. [Viewfinder brightness] can only be adjusted when the viewfinder is the active display. It cannot be adjusted when the monitor is on or when [Monitor only] is selected for monitor mode.
- Higher values increase the drain on the battery.

Option	Description
[Auto]	Viewfinder brightness is adjusted automatically in response to lighting conditions.
[Manual]	Press ④ or ⊕ to adjust brightness manually. Choose higher values for increased brightness, lower values for reduced brightness.



Viewfinder Color Balance

MENU button 🔿 🍟 setup menu

Adjust viewfinder color balance to your taste. [Viewfinder color balance] can only be adjusted when the viewfinder is the active display. It cannot be adjusted when the monitor is on or when [Monitor only] is selected for monitor mode. Otherwise the procedure is the same as for [Monitor color balance] (\square 710).

Finder Display Size (Photo Lv)

MENU button 🔿 🍟 setup menu

Choose a magnification for the viewfinder display from [**Standard**] and [**Small**]. Selecting [**Small**] makes it easier to see the entire subject.

Limit Monitor Mode Selection

MENU button 🔿 🍟 setup menu

Choose the monitor modes that can be selected using the I

- Highlight options and press ⊗ or ⊕ to select (☑) or deselect (□). Options marked with a check (☑) are available for selection.
- To complete the operation, press MENU.

Auto Rotate Info Display

MENU button 🔿 🍟 setup menu

When **[ON]** is selected, the indicators in the shooting display will automatically be rotated to match camera orientation.

AF Fine-Tuning Options

Fine-tune focus for the current lens.

- Use only as required.
- We recommend that you perform fine-tuning at a focus distance you use frequently. If you perform focus-tuning at a short focus distance, for example, you may find it less effective at longer distances.

Option	Description
[AF fine-tune]	Select [ON] to turn fine-tuning on.
[Fine-tune and save lens]	 Fine-tune focus for the current lens. Press or or to highlight items and press or or to choose from values between +20 and -20. The larger the fine-tuning value, the farther the focal point is from the lens; the smaller the value, the closer the focal point. The display shows the current and previous values. The camera can store values for up to 40 lens types. If a value already exists for the current lens, you can choose whether to add a new value or overwrite the existing value.
[Default]	Choose the fine-tuning values for lenses for which no values have previously been saved using [Fine-tune and save lens]. Press € or € to choose from values between +20 and -20.

Option	Description	
[List saved values]	List values saved using [Fine- tune and save lens]. Highlighting a lens in the list and pressing () displays a [Choose lens number] dialog. • The [Choose lens number] dialog is used to enter the lens identifier. • In the case of Z mount lenses and some F mount lenses, the lens serial number is entered automatically.	
[Choose value for current lens]	Choose from multiple fine-tuning values saved for lenses of the same type.	

V Deleting Saved Values

To delete values saved using [Fine-tune and save lens], highlight the desired lens in the [List saved values] list and press $\widehat{\mathbf{m}}$ ($\widehat{\mathbf{m}}$).

Creating and Saving Fine-Tuning Values

1 Attach the lens to the camera.

2 Select [AF fine-tuning options] in the setup menu, then highlight [Fine-tune and save lens] and press ().

An AF fine-tuning dialog will be displayed.

3 Press ④ or ④ to fine-tune autofocus.

- Choose from values between +20 and -20.
- The current value is shown by \blacktriangle , the previously-selected value by \bigtriangleup .
- If a zoom lens is attached, you can choose separate fine-tuning values for maximum angle (WIDE) and maximum zoom (TELE). Use
 And to choose between the two.
- The larger the fine-tuning value, the farther the focal point is from the lens; the smaller the value, the closer the focal point.

4 Press [®] to save the new value.

Choosing a Default Fine-Tuning Value

1 Select [AF fine-tuning options] in the setup menu, then highlight [Default] and press ().

2 Press ① or ③ to fine-tune autofocus.

- Choose from values between +20 and -20.
- The current value is shown by \blacktriangle , the previously-selected value by \bigtriangleup .
- The larger the fine-tuning value, the farther the focal point is from the lens; the smaller the value, the closer the focal point.

3 Press ® to save the new value.

Non-CPU Lens Data

MENU button 🔿 🍟 setup menu

Record data for non-CPU lenses attached using an optional mount adapter. Recording the focal length and maximum aperture of non-CPU lenses allows them to be used with some camera features normally reserved for CPU lenses, such as on-board vibration reduction.

Option	Description
[Lens number]	Choose a lens identifier.
[Focal length (mm)]	Enter the focal length.
[Maximum aperture]	Enter the maximum aperture.

Save Focus Position

MENU button 🔿 🍟 setup menu

When **[ON]** is selected, the camera will save the current focus position when turned off and restore it when next turned on. Note that this increases camera startup times.

- Note that even when [**ON**] is selected, if the temperature, zoom position, or other conditions change while the camera is off, focus may resume from a different position when the camera is turned on.
- Similarly, note that even when [**OFF**] is selected, focus may resume from the previously-selected position depending on the state of the camera and lens.

Sensor Shield Behavior at Power Off

If [Sensor shield closes] is selected, the shield in front of the image sensor will close when the camera is turned off. This prevents dust or other foreign matter collecting on the image sensor when lenses are exchanged. It may also, however, increase camera startup times.

Cautions: The Sensor Shield


- The shield can be damaged by touching it when it is closed.
- When exchanging lenses with the shield closed, be sure to insert the lens perpendicular to the mount. If inserted at an angle, lenses could contact the sensor shield and damage the shield or the image sensor.

Clean Image Sensor

MENU button 🔿 🍟 setup menu

Dirt or dust entering the camera when lenses are exchanged or the body cap is removed may adhere to the image sensor and affect your photographs. The "clean image sensor" option vibrates the sensor to remove dust.

Option	Description
[Start]	Perform image sensor cleaning immediately.
[Automatic cleaning]	 [Clean at shutdown]: The image sensor is automatically cleaned during shutdown each time the camera is turned off. [Cleaning off]: Automatic image sensor cleaning off.

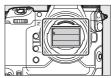

MENU button 🔿 🌱 setup menu

Acquire reference data for the Image Dust Off option in NX Studio. Image Dust Off processes NEF (RAW) pictures to mitigate effects caused by dust adhering in front of the camera image sensor. For more information, refer to NX Studio's online help.

Acquiring Image Dust Off Reference Data

- 1 Choose a start option.
 - Highlight [Start] and press
 immediately display the [Image Dust Off ref photo] dialog.
 - Highlight [Clean sensor and then start] and press is to clean the image sensor before starting. The [Image Dust Off ref photo] dialog will be displayed when image sensor cleaning is complete.
 - To exit without acquiring Image Dust Off reference data, press MENU.



0 5



2 With the lens about ten centimeters (four inches) from a well-lit, featureless white object, frame the object so that it fills the display and then press the shutter-release button halfway.

- In autofocus mode, focus will automatically be set to infinity.
- In manual focus mode, set focus to infinity manually.
- **3** Press the shutter-release button the rest of the way down to acquire Image Dust Off reference data.
 - The monitor turns off when the shutter-release button is pressed.
 - If the reference object is too bright or too dark, the camera may be unable to acquire Image Dust Off reference data, in which case a message will appear and the camera will return to the display shown in Step 1. Choose another reference object and press the shutterrelease button again.

A 1000	Exposur appropr Change	rif es Fife e		
Ø	and try	again. 16	⁰⁹⁸ 200	10770 1987

🔽 Caution: Image Sensor Cleaning

Dust off reference data recorded before image sensor cleaning is performed cannot be used with photographs taken after image sensor cleaning is performed. Select [**Clean sensor and then start**] only if the Image Dust Off reference data will not be used with existing photographs.

🔽 Cautions: Acquiring Image Dust Off Reference Data

- An FX-format lens with a focal length of at least 50 mm is recommended.
- When using a zoom lens, zoom all the way in.
- The same reference data can be used for photographs taken with different lenses or at different apertures.
- Reference images cannot be viewed using computer imaging software.
- A grid pattern is displayed when reference images are viewed on the camera.



Pixel Mapping

MENU button 🔿 🍟 setup menu

Pixel mapping checks and optimizes the camera image sensor. If you notice unexpected bright spots appearing in pictures taken with the camera, perform pixel mapping as described below.

- Pixel mapping is available only when a Z mount lens or an optional FTZ II/FTZ mount adapter is attached.
- To prevent unexpected loss of power, use a fully-charged battery, the supplied charging AC adapter, or an optional AC adapter and power connector.
- To start pixel mapping, select [Start]. A message is displayed while the operation is in progress.

🔽 Cautions: Pixel Mapping

- Do not attempt to operate the camera while pixel mapping is in progress. Do not turn the camera off or remove or disconnect the power source.
- Pixel mapping may not be available if the camera's internal temperature is elevated.

Image Comment

MENU button 🔿 🍟 setup menu

Add a comment to new photographs as they are taken. Comments can be viewed in the NX Studio [Info] tab.

Input Comment

Input a comment of up to 36 characters. Highlight [**Input comment**] and press to display a text-entry dialog. For information on text entry, see "Text Entry" (64).

Attach Comment

Comments will be attached to pictures taken while [Attach comment] is [ON].



🔽 Photo Info

- Comments can be viewed on the [**Other shooting data**] page in the photo information display.
- To display the [Other shooting data] page, select (☑) both [Shooting data] and [Other shooting data] for [Playback display options] in the playback menu.

Copyright Information

Add copyright information to new photographs as they are taken. Copyright information can be viewed in the NX Studio [**Info**] tab.

Artist/Copyright

Enter the names of the photographer (maximum 36 characters) and copyright holder (maximum 54 characters). Highlight [**Artist**] or [**Copyright**] and press ③ to display a text-entry dialog. For information on text entry, see "Text Entry" (□64).

Attach Copyright Information

Copyright information will be attached to pictures taken while [Attach copyright information] is [ON].



Cautions: Copyright Information

- To prevent unauthorized use of the artist or copyright holder names, make sure that [**OFF**] is selected for [**Attach copyright information**] before lending or transferring the camera to another person. You will also need to make sure that the artist and copyright fields are blank.
- Nikon does not accept liability for any damages or disputes arising from the use of the [**Copyright information**] option.

🔽 Viewing Copyright Information


- Copyright information can be viewed on the [**Copyright info**] page in the photo information display.
- To display the [Copyright info] page, select () both [Shooting data] and [Copyright info] for [Playback display options] in the playback menu.

IPTC

MENU button 🔿 🍟 setup menu

IPTC presets can be created or edited on the camera and embedded in new photographs as described below.

• You can also load IPTC presets created on a computer.

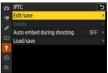

• To create IPTC presets and save them to memory cards for later import, use IPTC Preset Manager (2731).

Creating, Renaming, Editing, and Copying Presets

Highlight [Edit/save] and press () to display the [Select preset to edit or save] list of existing presets.

- To edit or rename a preset, highlight it and press ③. To create a new preset, highlight "Unused" and press ④.
 - [Rename]: Rename the preset.
 - [Edit IPTC information]: Display the selected preset (\$\$\Pi730\$). Selected fields can be edited as desired.
- To copy a preset, highlight it and press \mathfrak{P} . Highlight the destination, press \mathfrak{B} , and name the copy.

Deleting Presets

To delete presets, highlight [Delete] and press ().

Embedding Presets

Highlighting [Auto embed during shooting] and pressing () displays a list of presets. Highlight a preset and press (); the selected preset will be embedded in all subsequent photographs. To disable embedding, select [Off].



Viewing IPTC Data

- Embedded presets can be viewed on the [IPTC data] page in the photo information display.
- To display the [IPTC data] page, select (☑) both [Shooting data] and [IPTC data] for [Playback display options] in the playback menu.

Copying Presets to a Memory Card

To copy IPTC presets from the camera to a memory card, select [Load/ save] > [Slot 1] or [Slot 2], then highlight [Copy to card] and press \textcircled . Select the desired preset and destination (1–99) and press \textcircled to copy the preset to the card.

Copying Presets to the Camera

The camera can store up to ten presets; to copy IPTC presets from a memory card to a selected destination on the camera, select [Load/save] > [Slot 1] or [Slot 2], then highlight [Copy to camera] and press ③.



- Highlight a preset and press
 to proceed
 to the [Select destination] list. To preview
 the highlighted preset, press
 ? (?) instead of pressing
 . After
 previewing the preset, press
 to proceed to the [Select destination]
 list.
- In addition to the ten presets mentioned above, the camera can store up to three XMP/IPTC presets created on a computer and saved in XMP format. XMP/IPTC presets are not displayed during playback. Nor can they be copied from the camera to a memory card.

Cautions: IPTC Information

- The camera supports standard roman alphanumeric characters only. Other characters will not display correctly except on a computer.
- Preset names (
 ⁽¹⁾727) may be up to 18 characters long. If a preset with a longer name is created using a computer, all characters after the eighteenth will be deleted.
- The number of characters that may appear in each field is given below. Any characters over the limit will be deleted.

Field	Max. length	Field	Max. length
Caption	2000	Supp. Cat.	
Event ID	64	(supplemental	256
Headline	256	categories)	
Object name	256	Byline	256
City	256	Byline title	256
State	256	Writer/editor	256
Country	256	Credit	256
· · · · ·		Source	256
Category 3			

🔽 ІРТС

IPTC is a standard established by the International Press Telecommunications Council (IPTC) with the intent of clarifying and simplifying the information required when photographs are shared with a variety of publications.

🔽 IPTC Preset Manager

IPTC presets can be created on a computer and saved to memory cards using IPTC Preset Manager software. IPTC Preset Manager can be downloaded free of charge from the URL below. Instructions on use are available via online help.

https://downloadcenter.nikonimglib.com/

Voice Memo Options

MENU button 🔿 🍟 setup menu

Adjust settings for voice memos (295).

Voice Memo Control

Choose how the **b** button behaves when used to record voice memos.

Option		Description
₹ ¶	[Press and hold]	Voice memos up to 60 seconds long can be recorded while \P button is pressed.
<u>∲7</u>	[Press to start/ stop]	Recording begins when ⊉ button is pressed and ends after about 60 seconds or when the control is pressed a second time.

Audio Output (Playback)

Choose the device used for voice memo playback.

Option		Description	
4	[Speaker/ headphones]	Voice memos are played back over headphones (if connected) or the camera's built-in speaker. • Press (*) or (*) to choose a volume between [1] and [15]. • Press (*) to save changes and exit.	
HDMI	[HDMI]	Voice memos are output to the HDMI terminal at a fixed volume.	
X	[Off]	Voice memos cannot be played even using the button. 🕅 icons are displayed when photographs for which memo exist are viewed in the monitor.	

Camera Sounds

MENU button 🔿 🍟 setup menu

Shutter Sound

Choose whether the camera makes a sound when the shutter is released. Selecting [**OFF**] disables the shutter-release sound.

Beep On/Off

Turn the beep speaker on or off.

- If [On] is selected for [Beep on/off], beeps sound when:
 - the self-timer counts down,
 - interval-timer photography, time-lapse video recording, or focus shift ends,
 - the camera focuses in photo mode (note that this does not apply if **AF-C** is selected for focus mode or if [**Release**] is selected for Custom Setting a2 [**AF-S priority selection**]), or
 - touch controls are used.
- Select [**Off (touch controls only**]] to disable the beep for touch controls while enabling it for other purposes.

<u>Volume</u>

Adjust beep volume and the volume of the shutter-release sound.

Pitch

Choose the pitch of the beep from [**High**] and [**Low**]. The pitch of the shutter sound cannot be changed.

🔽 Silent Mode

Selecting [**ON**] for [**Silent mode**] in the setup menu disables the shutterrelease sound and beep speaker.

🔽 Caution: Camera Sounds

Overlapping beeps and/or shutter sounds may play as a single sound.

Silent Mode

MENU button 🔿 🍟 setup menu

Select [**ON**] to override the options selected for [**Camera sounds**] in the setup menu and mute the electronic shutter and beep speaker during photography.

- Selecting [ON] also suppresses other camera sounds. It does not, however, completely silence the camera. Camera sounds may still be audible, for example during autofocus or aperture adjustment, in the latter case most noticeably at apertures smaller (i.e., at f-numbers higher) than f/5.6.
- The frame advance rate may drop in some circumstances.
- Long-exposure noise reduction is disabled.
- Silent mode mutes the electronic shutter and beep speaker and dampens other camera sounds, but does not absolve photographers of the need to respect their subjects' privacy and image rights.

🖉 The Standby Timer

Even when **[ON]** is selected for **[Silent mode**], a sound will be produced when the standby timer is activated or expires. To mute the standby timer, select **[No limit]** for Custom Setting c3 **[Power off delay]** > **[Standby timer]**.

Touch Controls

MENU button 🔿 🍟 setup menu

Adjust settings for monitor touch controls.

Enable/Disable Touch Controls

Enable or disable touch controls. Select [**Playback only**] to enable touch controls in playback mode only.

Glove Mode

Selecting [**ON**] raises the sensitivity of the touch screen, making it easier to use while wearing gloves.

HDMI

MENU button 🔿 🍟 setup menu

Adjust settings for connection to HDMI devices (2302).

USB Connection Priority

MENU button 🔿 🍟 setup menu

Choose the function assigned priority when the camera is connected to a computer via USB.

Option	Description	
[Upload]	The monitor remains blank while the camera is connected to a computer. The monitor turns on when the shutter-release button is pressed halfway but upload speeds may drop.	
[Shooting]	The monitor remains on while the camera is connected to a computer. Upload speeds may drop.	

Location Data (Built-In)

MENU button 🔿 🍟 setup menu

Adjust settings for use with the camera's built-in GNSS receiver. For more information, see "Location Data" ($\square 204$).

Wireless Remote (WR) Options

MENU button 🔿 🍟 setup menu

Adjust status LED and link mode settings for optional WR-R11a and WR-R10 wireless remote controllers. You can also choose a link mode for connection to optional radio-controlled flash units that support Advanced Wireless Lighting.

🔽 WR-R10 Wireless Remote Controllers

- A WR-A10 adapter is required when using the WR-R10.
- Be sure the firmware for the WR-R10 has been updated to the latest version (version 3.0 or later). For information on firmware updates, see the Nikon website for your area.

LED Lamp

Enable or disable the status LEDs on the WR-R11a or WR-R10 wireless remote controller mounted on the camera. For more information, see the documentation supplied with the wireless remote controller.

Link Mode

Choose a link mode for WR-R11a or WR-R10 wireless remote controllers mounted on other cameras or radio-controlled flash units that support Advanced Wireless Lighting. Be sure that the same mode is selected for the other devices.

Option	Description
[Pairing]	 The camera connects only to devices with which it has previously been paired. Press the pairing button on the wireless remote controller connected to the camera to pair it with other devices. As camera will not communicate with devices with which it has not been paired, this option can be used to prevent signal interference from other devices in the vicinity. Given that each device must be paired separately, however, PIN is recommended when connecting to a large number of devices.

Option	Description		
[PIN]	Communication is shared among all devices with the same four-digit PIN. Enter a four-digit PIN of your choosing. Press ④ or ④ to highlight digits and press ④ or ④ to change. Press ④ to enter and display the selected • This option is a good choice featuring a large number of • If there are multiple camera: same PIN, the flash units will of the camera that connects cameras from connecting (t remote controllers connected will blink).	for photography remote devices. s present that share the l be under the sole control first, preventing all other he LEDs on the wireless	

 Regardless of the option selected for [Link mode], signals from paired wireless remote controllers will always be received by the WR-R11a or WR-R10. Users of the WR-1 wireless remote controller will need to select pairing as the WR-1 link mode.

Assign Remote (WR) Fn Button

MENU button 🔿 🍟 setup menu

Choose the role played by the **Fn** button on optional wireless remote controllers equipped with an **Fn** button. See Custom Setting f2 [**Custom controls (shooting)**] for more information.

Option		Option		
AF-ON	[AF-ON]	() /\$	③/\$ [\$ Disable/enable]	
ĀF	[AF lock only]	\$	[Preview]	
Å:®	[AE lock (Reset on release)]	,Ô	[Recall shooting functions]	
Ā	[AE lock only]	+RAW	[+ RAW]	
A	[AE/AF lock]	[None]		
ŧL	[FV lock]			

Conformity Marking

MENU button 🔿 🍟 setup menu

View some of the standards with which the camera complies.

Battery Info

View information on the battery currently inserted in the camera.

Option	Description	
[Charge]	The current battery level, expressed as a percentage.	
[No. of shots]	The number of pictures taken since the battery was last charged.	
[Calibration]	 An indicator of whether the battery requires calibration. Calibration ensures the accuracy of the battery level display; after the battery has been charged a certain number of times, [%CAL] will be displayed. We recommend that you calibrate the battery when [%CAL] is displayed (\$\sum 850\$). A [] indicates that calibration not required. 	
 [Battery age] A five-level display showing battery age. A value of "0" (123) indicates that battery performunimpaired. A value of "4" (129) indicates that the battery has the end of its charging life. Replace the battery. 		

۵	Battery info	C 8
*	Charge	82%
"	No. of shots	58
	Calibration	(#CAL
۲	Battery age	Q
0	(0 - 4)	æ œ
⇒		OKDone

MENU button 🔿 📍 setup menu

Number of Shots

[**No. of shots**] shows the number of times the shutter has been released. Note that the camera may sometimes release the shutter without recording a photograph, for example when measuring preset manual white balance.

Charging Batteries at Low Temperatures

Batteries in general exhibit a drop in capacity at low ambient temperatures. Even fresh batteries charged at temperatures under about 5 °C (41 °F) may show a temporary increase from "0" to "1" in the value shown for [**Battery age**], but the display will return to normal once the battery has been recharged at a temperature of about 20 °C (68 °F) or higher.

USB Power Delivery

MENU button 🔿 🍟 setup menu

Choose whether the supplied charging AC adapter or computers connected via USB can be used to power the camera (USB power delivery). USB power delivery allows the camera to be used while limiting the drain on the battery.

Option	Description
[ON]	The camera draws power from connected devices while on. Connected devices will also supply power when the camera is off if Bluetooth upload is in progress or the memory card access lamp is lit.
[OFF]	The camera does not draw power from connected devices at any time.

- Power will only be supplied to the camera when the battery is inserted.
- A USB power delivery icon appears in the shooting display and the control panel when the camera is powered by an external source.



🔽 Computer USB Power Delivery

- Before using a computer to supply power to the camera, check that the computer is equipped with a Type C USB connector. Use a UC-E25 USB cable (available separately) to connect the camera to the computer.
- Depending on the model and product specifications, some computers will not supply current to power the camera.

"Power Delivery" Versus "Charging"

The supply of power for camera operations is referred to as "power delivery", while the term "charging" is used when power is supplied only to charge the camera battery. The conditions under which the power supplied by external devices is used to power the camera or charge the battery are shown below.

Option selected for [USB power delivery] Power switch		External power source used for
	On (standby timer active) ¹	Power delivery
[ON]	On (standby timer off)	Charging ²
	Off	source used for Power delivery
	On (standby timer active) ¹	_
[OFF]	On (standby timer off)	Charging ²
	Off	Charging ²

- 1 Includes instances in which the power switch is in the "OFF" position but Bluetooth upload is in progress or the memory card access lamp is lit.
- 2 EN-EL18d, EN-EL18c, and EN-EL18b batteries inserted in the camera will charge when the camera is connected to the supplied charging AC adapter or via USB to a computer. Note, however, that batteries with a "4" (€) showing for [Battery info] > [Battery age] in the setup menu cannot be charged.

Energy Saving (Photo Mode)

MENU button 🔿 🍟 setup menu

In photo mode, the shooting display will dim to save power approximately 15 seconds before the standby timer expires.

Option	Description		
[ON]	Enable energy saving. The display refresh rate may drop.		
[OFF]	Disable energy saving. Note selecting [OFF] does not stop the shooting display dimming a few seconds before the standby timer expires.		

🔽 Energy Saving (Photo Mode)

Note that even when [ON] is selected, energy saving will not function:

- if [No limit] is selected for Custom Setting c3 [Power off delay] > [Standby timer] or if the delay selected is less than 30 seconds,
- during zoom,
- · while the camera is connected to another device via HDMI,
- while the camera is connected to and exchanging data with a computer via USB, or
- while the camera is connected to an AC adapter.

Slot Empty Release Lock

MENU button 🔿 🍟 setup menu

Choose whether the shutter can be released when no memory card is inserted in the camera.

Option		Description	
LOCK	[Release locked]	The shutter cannot be released when no memory card is inserted.	
OK	[Enable release]	The shutter can be released with no memory card inserted. No pictures will be recorded; during playback, the camera displays [Demo].	

Save/Load Menu Settings

MENU button 🔿 🖞 setup menu

Save current camera menu settings to a memory card. You can also load saved settings, allowing menu settings to be shared among cameras of the same model.

 If two memory cards are inserted, the settings will be saved to the card in Slot 1. • The following settings are saved:

Set	tings that can be saved and loaded	
	[Shooting menu bank]	
	[Extended menu banks]	
	[File naming]	
	[Role played by card in Slot 2]	
	[Image area]	
	[Image quality]	
	[Image size]	
	[RAW recording]	
	[ISO sensitivity settings]	
	[White balance]	
	[Set Picture Control] (Custom Picture Controls are	
	saved as [Auto])	
	[Color space]	
PHOTO SHOOTING	[Active D-Lighting]	
MENU	[Long exposure NR]	
	[High ISO NR]	
	[Vignette control]	
	[Diffraction compensation]	
	[Auto distortion control]	
	[Photo flicker reduction]	
	[Metering]	
	[Flash control]	
	[Focus mode]	
	[AF-area mode]	
	[AF subject detection options]	
	[Vibration reduction] (the options available vary with the lens)	
	[Auto bracketing]	

Settings that can be saved and loaded		
	[Shooting menu bank]	
	[Extended menu banks]	
	[File naming]	
	[Destination]	
	[Video file type]	
	[Frame size/frame rate]	
	[lmage area]	
	[ISO sensitivity settings]	
	[White balance]	
VIDEO RECORDING	[Set Picture Control] (Custom Picture Controls are saved as [Auto])	
MENU	[HLG quality]	
	[Active D-Lighting]	
	[High ISO NR]	
	[Vignette control]	
	[Diffraction compensation]	
	[Auto distortion control]	
	[Video flicker reduction]	
	[Metering]	
	[Focus mode]	
	[AF-area mode]	
	[AF subject detection options]	

Settings that can be saved and loaded			
	[Vibration reduction] (the options available vary with the lens)		
	[Electronic VR]		
	[Microphone sensitivity]		
	[Attenuator]		
VIDEO RECORDING MENU	[Frequency response]		
MENO	[Wind noise reduction]		
	[Mic jack plug-in power]		
	[Headphone volume]		
	[Timecode] (excepting [Timecode origin])		
	[External rec. cntrl (HDMI)]		
CUSTOM SETTINGS MENU	All items		
	[Playback display options]		
PLAYBACK MENU	[Dual-format recording PB slot]		
	[Picture review]		
	[After delete]		
	[After burst, show]		
	[Rotate tall]		

Se	Settings that can be saved and loaded		
	[Language]		
	[Time zone and date] (excepting [Date and time])		
	[Finder display size (photo Lv)]		
	[Limit monitor mode selection]		
	[Auto rotate info display]		
	[Non-CPU lens data]		
	[Save focus position]		
	[Sensor shield behavior at power off]		
	[Clean image sensor]		
	[Image comment]		
	[Copyright information]		
SETUP MENU	[IPTC]		
SETUP MENU	[Voice memo options]		
	[Camera sounds]		
	[Silent mode]		
	[Touch controls]		
	[HDMI]		
	[USB connection priority]		
	[Location data (built-in)] (excepting [Position])		
	[Wireless remote (WR) options]		
	[Assign remote (WR) Fn button]		
	[USB power delivery]		
	[Energy saving (photo mode)]		
	[Slot empty release lock]		

Settings that can be saved and loaded		
MY MENU	The current contents of "My Menu"	
	[Choose tab]	
RECENT SETTINGS	The current contents of the recent settings menu (up to 20 items)	
	[Choose tab]	

Save Menu Settings

Save settings to a memory card. If the card is full, an error will be displayed and settings will not be saved. Saved settings can only be used with other cameras of the same model.

Load Menu Settings

Load saved settings from a memory card. Note that [**Load menu settings**] is available only when a memory card containing saved settings is inserted.

Caution: Saved Settings

Settings are saved to files named "NCSET***", where "***" is an identifier that varies from camera to camera. The camera will not be able to load settings if the file name is changed.

Reset All Settings

Reset all settings except [Language] and [Time zone and date] to their default values. Copyright information and other user-generated entries are also reset. Once reset, settings cannot be restored.

We recommend that you save settings using the [Save/load menu settings] item in the setup menu before performing a reset.

Firmware Version

MENU button 🔿 🍟 setup menu

View the current camera firmware version. Firmware updates can be performed if the memory card contains a new version of the camera firmware.

🖉 Firmware Updates

Updates can be performed using a computer or smart device.

- **Computer**: Check the Nikon Download Center for new versions of the camera firmware. For more information, see the firmware download page.
- Smart device: If the smart device has been paired with the camera using the SnapBridge app, the app will automatically notify you when updates become available, and you can then download the update to the camera memory card via the smart device. For more information, see the SnapBridge app's online help. SnapBridge may not display the notification at the same time that updates are made available on the Nikon Download Center.

(a) The Network Menu: Network Connections

To view the network menu, select the (a) tab in the camera menus.

۵	NETWORK MENU		
-	Airplane mode	OFF	
Ĵ,	Wired LAN	OFF	
1	Connect to smart device	OFF >	
Þ	Connect to computer	OFF >	
¥	Connect to FTP server	OFF >	
۲	Connect to other cameras		
⇒	USB	MTP/PTP >	
	a	(111)	

The network menu contains the following items:

Item		Item	
[Airplane mode]	756	[Connect to other cameras]	770
[Wired LAN]	756	[USB]	773
[Connect to smart device]	757	[Start via LAN]	773
[Connect to computer]	760	[Router frequency band]	774
[Connect to FTP server]	765	[MAC address]	774

🔽 See Also

"Network Menu Defaults" (2489)

Airplane Mode

MENU button 🔿 🕲 network menu

Select $\left[\textbf{ON} \right]$ to disable the camera's built-in Bluetooth and Wi-Fi functions.

Wired LAN

MENU button 🔿 🕲 network menu

Select [**ON**] to connect to Ethernet networks. Connect an Ethernet cable to the camera.

Connect to smartphones or tablets (smart devices) via Bluetooth or Wi-Fi.

MENU button 🔿 🐵 network menu

۵	Connect to smart device	Ð
-	Pairing (Bluetooth)	Ø OFF >
2		>
	Wi-Fi connection	0FF →
	Upload while off	OON)
Ð		
\$		

Pairing (Bluetooth)

Pair with or connect to smart devices using Bluetooth.

Option	Description
[Start pairing]	Pair the camera with a smart device (\square 313).
[Paired devices]	List paired smart devices. To connect, select a device from the list.
[Bluetooth connection]	Select [ON] to enable Bluetooth.

Select Pictures for Upload

Select pictures for upload to a smart device. You can also opt to upload pictures as they are taken.

Option	Description
[Auto select for upload]	Select [ON] to mark pictures for upload as they are taken. Photos are uploaded in JPEG format at a size of 2 megapixels, even if other upload size and format options are selected with the camera.
[Manually select for upload]	Upload selected pictures. Transfer marking appears on the selected pictures.
[Deselect all]	Remove transfer marking from all pictures.

Wi-Fi connection

Connect to smart devices via Wi-Fi.

Establish Wi-Fi Connection

Initiate a Wi-Fi connection to a smart device.

- The camera SSID and password will be displayed. To connect, select the camera SSID on the smart device and enter the password (\$\$\mathbb{C1}\$317).
- Once a connection is established, this option will change to [Close Wi-Fi connection].
- Use [Close Wi-Fi connection] to end the connection when desired.

Wi-Fi Connection Settings

Access the following Wi-Fi settings:

Option	Description
[SSID]	Choose the camera SSID.
[Authentication/ encryption]	Choose [OPEN], [WPA2-PSK], [WPA3-SAE], or [WPA2-PSK/WPA3-SAE].
[Password]	Choose the camera password.
[Channel]	 Choose a channel. Select [Auto] to have the camera choose the channel automatically. Select [Manual] to choose the channel manually.
[Current settings]	View current Wi-Fi settings.
[Reset connection settings]	Select [Yes] to reset Wi-Fi settings to default values.

Upload While Off

If [**ON**] is selected, upload of pictures to smart devices connected via Bluetooth will continue even when the camera is off.

Location Data (Smart Device)

Display latitude, longitude, altitude, and UTC (Universal Coordinated Time) data downloaded from a smart device. Note that the camera may be unable to download or display location data from smart devices depending on the version of the device operating system and/or SnapBridge app used.

Connect to Computer

Connect to computers via Ethernet or wireless LAN.

Network Settings


Add camera network profiles. This item can also be used to choose from existing network profiles.

Create Profile

Create new network profiles (2329, 346).

- If more than one profile already exists, you can press ® to choose a profile and connect to the selected network.
- To edit an existing profile, highlight it and press ().

Option	Description
[General]	 [Profile name]: Rename the profile. [Password protection]: Select [On] to require that a password be entered before the profile can be changed.
	To change the password, highlight [On] and press ().

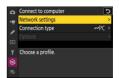

MENU button 🔿 🛞 network menu

Option	Description
[Wireless]	 Display connection settings for connection to wireless networks. Infrastructure mode: Adjust settings for connection to a network via a router. [SSID]: Enter the network SSID. [Channel]: Selected automatically. [Authentication/encryption]: Select the type of encryption used on the wireless network. [Password]: Enter the network password. Access-point mode: Adjust settings for direct wireless connection to the camera. [SSID]: Choose the camera SSID. [Channel]: Choose the camera SSID. [Channel]: Choose the camera SSID. [Channel]: Choose that an or [Manual]. [Authentication/encryption]: Select the type of encryption used on the wireless network.
[TCP/IP]	 Adjust TCP/IP settings for infrastructure connections. An IP address is required. If [ON] is selected for [Obtain automatically], the IP address and sub-net mask for infrastructure mode connections will be acquired via a DHCP server or automatic IP addressing. Select [OFF] to enter the IP address ([Address]) and sub-net mask ([Mask]) manually.

Copy to/from Card

Share network profiles.

• If two memory cards are inserted, the profiles will be copied to and from the card in Slot 1.

Option	Description
[Copy profile from card]	Copy profiles from the root directory of the memory card to the camera profile list.
[Copy profile to card]	Copy profiles from the camera to the memory card. Highlight a profile and press ® to copy it to the memory card. • Password-protected profiles cannot be copied.

II End Current Connection

End the connection to the current network.

Connection Type

Choose an operating mode for use when the camera is connected to a network.

Option	Description
[Picture transfer]	Upload photos to a computer as they are taken or upload existing pictures from the camera memory card.
[Camera control]	Use Camera Control Pro 2 software (available separately) to control the camera and take pictures remotely from a computer.

Options

Adjust upload settings.

Auto Upload

Select [ON] to mark new photos for upload as they are taken.

- Upload begins only after the photo has been recorded to the memory card. Be sure a memory card is inserted in the camera.
- Videos will not be uploaded automatically when recording is complete. They must instead be uploaded from the playback display (²²⁵³).

Delete After Upload

Select [**ON**] to delete photographs from the camera memory card automatically once upload is complete.

- Files marked for transfer before you selected [ON] are not deleted.
- Deletion may be suspended during some camera operations.

Upload RAW + JPEG As

When uploading RAW + JPEG pictures, choose whether to upload both the NEF (RAW) and JPEG files or only the JPEG copy.

 When [RAW Slot 1 - JPEG Slot 2] is selected for [Role played by card in Slot 2] in the photo shooting menu, the option chosen for [Upload RAW + JPEG as] applies only to photos uploaded automatically by selecting [ON] for [Auto upload].

JPEG + JPEG Slot Selection

Choose a source slot for auto upload when taking pictures with [JPEG Slot 1 - JPEG Slot 2] selected for [Role played by card in Slot 2] in the photo shooting menu.

Upload Folder

Mark all photos in a selected folder for upload. Marking will be applied to all photos, regardless of whether they have been uploaded previously.

Videos will not be marked for upload. They must instead be uploaded from the playback display.

Deselect All?

Remove upload marking from all pictures. Upload of pictures with an "uploading" icon will immediately be terminated.

Connect to FTP Server

Connect to FTP servers via Ethernet or wireless LAN.

Network Settings

Add camera network profiles. This item can also be used to choose from existing network profiles.

Create Profile

Create new network profiles (2367, 382).

- If more than one profile already exists, you can press ® to choose a profile and connect to the selected network.
- To edit an existing profile, highlight it and press ().

Option	Description	
[General]	 [Profile name]: Rename the profile. [Password protection]: Select [On] to require that a password be entered before the profile can be changed. 	
	To change the password, highlight [On] and press () .	

Option	Description	
[Wireless]	 Display connection settings for connection to wireless networks. Infrastructure mode: Adjust settings for connection to a network via a router. [SSID]: Enter the network SSID. [Channel]: Selected automatically. [Authentication/encryption]: Select the type of encryption used on the wireless network. [Password]: Enter the network password. Access-point mode: Adjust settings for direct wireless connection to the camera. [SSID]: Choose the camera SSID. [Channel]: Choose [Auto] or [Manual]. [Authentication/encryption]: Select the type of encryption used on the wireless network. 	
[TCP/IP]	 Adjust TCP/IP settings for infrastructure connections. An IP address is required. [Obtain automatically]: If [ON] is selected, the IP address and sub-net mask for infrastructure mode connections will be acquired via a DHCP server or automatic IP addressig. Select [OFF] to enter the IP address ([Address]) and sub-net mask ([Mask]) manually. [Gateway]: Enter the network's default gateway address, if required. [Domain Name Server (DNS)]: If a DNS is present on the same network as the FTP server, enter its address. 	

Option	Description
[FTP]	 [Server type]: Choose the FTP server type and enter the URL or IP address, destination folder, and port number. An IP address is required. [PASV mode]: Select [ON] to enable PASV mode. [Anonymous login]: Select [ON] for anonymous login. This option can only be used with servers that are configured for anonymous login. Select [OFF] to supply a user ID and password. [Proxy server]: Enable this option as required.

Copy to/from Card

Share network profiles.

• If two memory cards are inserted, the profiles will be copied to and from the card in Slot 1.

Option	Description
[Copy profile from card]	Copy profiles from the root directory of the memory card to the camera profile list.
[Copy profile to card]	Copy profiles from the camera to the memory card. Highlight a profile and press ® to copy it to the memory card. • Password-protected profiles cannot be copied.

End Current Connection

End the connection to the current network.

Options

Adjust upload settings.

II Auto Upload

Select [ON] to mark new photos for upload as they are taken.

- Upload begins only after the photo has been recorded to the memory card. Be sure a memory card is inserted in the camera.
- Videos will not be uploaded automatically when recording is complete. They must instead be uploaded from the playback display (¹²253).

Delete After Upload

Select [**ON**] to delete photographs from the camera memory card automatically once upload is complete.

- Files marked for transfer before you selected [ON] are not deleted.
- Deletion may be suspended during some camera operations.

Upload RAW + JPEG As

When uploading RAW + JPEG pictures, choose whether to upload both the NEF (RAW) and JPEG files or only the JPEG copy.

 When [RAW Slot 1 - JPEG Slot 2] is selected for [Role played by card in Slot 2] in the photo shooting menu, the option chosen for [Upload RAW + JPEG as] applies only to photos uploaded automatically by selecting [ON] for [Auto upload].

II JPEG + JPEG Slot Selection

Choose a source slot for auto upload when taking pictures with [JPEG Slot 1 - JPEG Slot 2] selected for [Role played by card in Slot 2] in the photo shooting menu.

II Overwrite If Same Name

Choose [**ON**] to overwrite files with duplicate names during upload. Choose [**OFF**] to add numbers to the names of newly uploaded files as necessary to prevent existing files being overwritten.

II Protect If Marked for Upload

Select [**ON**] to automatically protect files marked for upload. Protection is removed as the files are uploaded.

Upload Marking

Select [**ON**] to add a timestamp to the pictures on the camera memory card giving the time of upload.

The timestamp can be viewed using NX Studio. For more information, see NX Studio's online help.

Upload Folder

Mark all photos in a selected folder for upload. Marking will be applied to all photos, regardless of whether they have been uploaded previously.

Videos will not be marked for upload. They must instead be uploaded from the playback display.

Deselect All?

Remove upload marking from all pictures. Upload of pictures with an "uploading" icon will immediately be terminated.

Connect to Other Cameras

MENU button 🔿 🕲 network menu

Connect to other cameras for shutter or clock synchronization.

Synchronized Release

Select $\left[\textbf{ON} \right]$ to synchronize the shutter release with those of cameras on the same network.

Network Settings

Add camera network profiles. This item can also be used to choose from existing network profiles.

Create Profile

Create new network profiles (2402).

- If more than one profile already exists, you can press ® to choose a profile and connect to the selected network.
- To edit an existing profile, highlight it and press ().

Option	Description
[General]	 [Profile name]: Rename the profile. The default profile name is the same as the network SSID. [Password protection]: Select [On] to require that a password be entered before the profile can be changed. To change the password, highlight [On] and press .

Option	Description
[TCP/IP]	 Adjust TCP/IP settings for infrastructure connections. An IP address is required. If [ON] is selected for [Obtain automatically], the IP address and sub-net mask for infrastructure mode connections will be acquired via a DHCP server or automatic IP addressing. Select [OFF] to enter the IP address ([Address]) and sub-net mask ([Mask]) manually.

Copy to/from Card

Share network profiles.

• If two memory cards are inserted, the profiles will be copied to and from the card in Slot 1.

Option	Description
[Copy profile from card]	Copy profiles from the root directory of the memory card to the camera profile list.
[Copy profile to card]	Copy profiles from the camera to the memory card. Highlight a profile and press ® to copy it to the memory card. • Password-protected profiles cannot be copied.

End Current Connection

End the connection to the current network.

Group Name

Choose a group for synchronized release. Shutter release is synchronized across the cameras on the network that are in the same group.

Master/Remote

Choose a role for each camera from "master" and "remote". Pressing the shutter-release button on the master camera releases the shutters on all remote cameras that are both on the same network and in the same group.

Remote Camera List

The master camera lists the remote cameras connected.

Synchronize Date and Time

Set the clocks on the remote cameras to the date and time reported by the master camera (\Box 421).

USB

Choose the host device type for USB connections.

- Select [MTP/PTP] when connecting to computers or Android devices.
- Select [**iPhone**] only when connecting to iPhones via a third-party USB-C to Lightning cable in order to use NX MobileAir (for information on compatible USB-C to Lightning cables, see the online help for NX MobileAir).

🚺 "[iPhone]"

Selecting [iPhone] disables the camera's built-in network features. Select [MTP/PTP] except when using NX MobileAir.

Start via LAN

MENU button 🔿 🐵 network menu

If **[ON]** is selected, the standby timer can be activated by signals from a computer connected via Ethernet.

Router Frequency Band

Choose the band for the selected SSID when connecting to a wireless network in infrastructure mode. Select [**2.4 GHz/5 GHz**] to connect to networks operating on either band.

- When the camera searches for networks active in the vicinity, it will list only those operating on the chosen band or bands.
- The band is listed to the left of the network SSID.
- If you select [**2.4 GHz/5 GHz**] when connecting via wireless routers that operate on both bands, the list will include the SSIDs in the band or bands detected by the camera.

MAC Address

MENU button 🔿 🐵 network menu

View the MAC address.



MENU button 🔿 🕲 network menu

⇒ My Menu/ 7 Recent Settings

To view [**MY MENU**], select the **⇒** tab in the camera menus.



➡ My Menu: Creating a Custom Menu

My Menu can be used to create and edit a customized list of up to 20 items from the photo shooting, video recording, Custom Settings, playback, setup, and network menus. Items can be added, deleted, and reordered as described below.

Adding Items to My Menu

Select [Add items] in [⇒ MY MENU]. Highlight [Add items] and press ⊕.



2 Select a menu.

Highlight the name of the menu containing the item you wish to add and press **③**.

3 Select an item.

Highlight the desired menu item and press \circledast .

4 Position the new item.

Press O or O to position the new item and press O to add it to My Menu.

5 Add more items.

- The items currently displayed in My Menu are indicated by a check mark (✓).
- Items indicated by a □ icon cannot be selected.
- Repeat Steps 1–4 to select additional items.



f2 Custom controls (shooting)

NORM

ON塑





se positio

Image size RAW recording



Removing Items from My Menu

1 Select [Remove items] in [\Rightarrow MY MENU].

Highlight [Remove items] and press ().

2 Select items.

- Highlight items and press [®] or [●] to select (^I) or deselect.
- Continue until all the items you wish to remove are selected (✓).

3 Remove the selected items.

Press (m (Research); a confirmation dialog will be displayed. Press (Research) to remove the selected items.

۵	Remove items 🗅
-	Select items for removal
	🗹 🖷 Image area
"	Image quality
	🔲 Image size
	RAW recording
	f2 Custom controls (shooting)
₹	Delete

101	Remove items 🗢
100	
	🕅 🕷Image area
1	(!)
	Delete selected item?
Y	[NENUCance] [OK]Yes
١	
₽	🕞 Delete

🔽 Removing Items While in My Menu

Items can also be removed by highlighting them in [= MY MENU] and pressing the \tilde{u} (=) button; a confirmation dialog will be displayed. Press \tilde{u} (=) again to remove the selected item.

Reordering Items in My Menu

1 Select [Rank items] in [录 MY MENU].

Highlight [Rank items] and press ().

2 Select an item.

Highlight the item you wish to move and press \circledast .



NORM

Move 030

Rank items


RAW recording f2 Custom controls (shooting)

3 Position the item.

- Repeat Steps 2–3 to reposition additional items.

4 Exit to [⇒ MY MENU].

Press the MENU button to return to [₹ MY MENU].

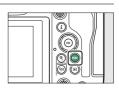



II Displaying [RECENT SETTINGS]

1 Select [Choose tab] in [⇒ MY MENU]. Highlight [Choose tab] and press ③.



2 Select [⁷[™] RECENT SETTINGS].

- Highlight [→ RECENT SETTINGS] in the [Choose tab] menu and press ⊗.
- The name of the menu will change from [MY MENU] to [RECENT SETTINGS].



Recent Settings: Accessing Recently-Used Settings

How Items Are Added to [RECENT SETTINGS]

Menu items are added to the top of the [**RECENT SETTINGS**] menu as they are used. The twenty most recently-used settings are listed.



🔽 Removing Items from the Recent Settings Menu

To remove an item from the [**RECENT SETTINGS**] menu, highlight it and press the fine (weight) button; a confirmation dialog will be displayed. Press fine (weight) again to remove the selected item.

🔽 Displaying My Menu

Selecting [**RECENT SETTINGS**] > [**Choose tab**] menu displays the items shown in Step 2 of "Displaying [**RECENT SETTINGS**]" (□ 779). Highlight [**⇒ MY MENU**] and press [®] to view My Menu.

Troubleshooting

Before Contacting Customer Support

You may be able to resolve any issues with the camera by following the steps below. Check this list before consulting your retailer or Nikon-authorized service representative.

	Check the list of common problems.
-	•
	Common problems and solutions are listed in the following
STEP	sections:
	 "Problems and Solutions" (
	 "Alerts and Error Messages" (¹794)
	Turn the camera off and remove the battery, then wait
	about a minute, re-insert the battery and turn the camera
2	on.
STEP 2	The camera may continue to write data to the memory card
	after shooting. Wait at least a minute before removing the
	battery.
	Search Nikon websites.
-	 For support information and answers to frequently asked
STEP 3	questions, visit the website for your country or region (\square 33).
	 To download the latest firmware for your camera, visit:
	https://downloadcenter.nikonimglib.com/
STEP 4	Consult a Nikon-authorized service representative.

Restoring Default Settings

- Depending on current settings, some menu items and other features may be unavailable. To access menu items that are grayed out or features that are otherwise unavailable, try restoring default settings using the [**Reset all settings**] item in the setup menu.
- Note, however, that wireless network profiles, copyright information, and other user-generated entries will also be reset. Once reset, settings cannot be restored.

Problems and Solutions

Solutions to some common issues are listed below.

Battery/Display

- The camera is on but does not respond:
 - Wait for recording and other operations to end.
 - If the problem persists, turn the camera off.
 - If the camera does not turn off, remove and reinsert the battery.
 - If you are using an AC adapter, disconnect and reconnect the AC adapter.
 - Any data currently being recorded will be lost.
 - Data that have already been recorded are not affected by removing or disconnecting the power source.

The viewfinder or monitor does not turn on:

- Have you changed the monitor mode? Choose a different monitor mode using the IDI button.
- Have you limited the choice of monitor modes available using the [Limit monitor mode selection] item in the setup menu? Adjust settings as required.
- Dust, lint, or other foreign matter on the eye sensor may prevent it functioning normally. Clean the eye sensor with a blower.

• The viewfinder is out of focus:

- Rotate the diopter adjustment control to adjust viewfinder focus.
- If adjusting viewfinder focus does not correct the problem, set the focus mode to AF-S and the AF-area mode to single-point AF. Next, select the center focus point, choose a high-contrast subject, and focus using autofocus. With the camera in focus, use the diopter adjustment control to bring the subject into clear focus in the viewfinder.

 The display in the control panel, viewfinder, or monitor turns off without warning:

Choose longer delays for Custom Setting c3 [Power off delay].

• The control panel is unresponsive and dim: Control panel response times and brightness vary with temperature.

The viewfinder is unresponsive:

The display refresh rate may drop about 20 seconds before the standby timer turns off. The length of time before the standby timer expires automatically can be selected using Custom Setting c3 [**Power off delay**] > [**Standby timer**].

Shooting

The camera takes time to turn on:

More time will be needed to find files if the memory card contains large numbers of files or folders.

The shutter cannot be released:

- Is a memory card inserted, and if so, does it have space available?
- If you selected mode S after selecting a shutter speed of "Bulb" or "Time" in mode M, choose a different shutter speed.
- Is [Release locked] selected for [Slot empty release lock] in the setup menu?

Burst shooting is unavailable:

Burst shooting cannot be used in conjunction with HDR.

Photos are out of focus:

- Is the camera in manual focus mode? To enable autofocus, select AF-S, AF-C, or AF-F for focus mode.
- The camera may be unable to focus if:
 - the subject contains lines parallel to the long edge of the frame,
 - the subject lacks contrast,
 - the subject in the focus point contains areas of sharply contrasting brightness,
 - the focus point includes night-time spot lighting or a neon sign or other light source that changes in brightness,
 - flicker or banding appears under fluorescent, mercury-vapor, sodium-vapor, or similar lighting,
 - a cross (star) filter or other special filter is used,
 - the subject appears smaller than the focus point, or
 - the subject is dominated by regular geometric patterns (e.g., blinds or a row of windows in a skyscraper).
- In focus mode AF-C, the focus point may flash while the shutterrelease button is pressed halfway or the AF-ON button is pressed, indicating that the camera is no longer able to focus. The focus operation can be resumed by releasing and then pressing the button again.

The beep does not sound:

- Is [ON] selected for [Silent mode] in the setup menu?
- A beep does not sound when the camera focuses with AF-C selected for focus mode.
- Select an option other than [Off] for [Camera sounds] > [Beep on/off] in the setup menu.
- The beep does not sound in video mode.

The full range of shutter speeds is not available:	
Using a flash restricts the range of shutter speeds available.	
speed can be set to values of $1/_{200}-1/_{60}$ s using Custom Settir	5 -
sync speed]. When using flash units that support auto FP hi	
sync, choose [1/250 s (Auto FP)] or [1/200 s (Auto FP)] for s	shutter
speeds as fast as 1/ ₈₀₀₀ s.	
• Focus does not lock when the shutter-release button is p	oressed
halfway:	
When AF-C is selected for focus mode, focus can be locked	by pressing
the center of the sub-selector.	
Focus-point selection is not available:	
Focus-point selection is not available when [Auto-area AF]	is selected
for AF-area mode.	
Focus-mode selection is not available.	
Select [No restrictions] for Custom Settings a9 and g5 [Foc	us mode
restrictions].	
The camera is slow to record photos:	
Is [ON] selected for [Long exposure NR] in the photo shoot	ing menu?
• Photographs and videos do not appear to have the same	e exposure
as the preview shown in the display:	
 The effects of changes to settings that affect exposure and 	d color are
not visible in the display when [Adjust for ease of viewing	g] is selected
for Custom Setting d8 [View mode (photo Lv)]. Note that	even when
[Show effects of settings] is selected for Custom Setting	d8, display
brightness will be adjusted for ease of viewing (per [Adjus	t for ease of
viewing]) in mode M when a flash unit is attached.	
 Note that changes to [Monitor brightness] and [Viewfine 	der
brightness] have no effect on pictures recorded with the	camera.

Flicker or banding appears in video mode:

Select [Video flicker reduction] in the video recording menu and choose an option that matches the frequency of the local AC power supply.

Bright regions or bands appear:

Bright regions or bands may occur if the subject is lit by a flashing sign, flash, or other light source with brief duration.

Smudges appear in photographs:

- Are there smudges on the front or rear (mount-side) lens elements?
- Is there foreign matter on the image sensor? Perform image sensor cleaning.

Pictures are affected by noticeable ghosting or flare:

You may notice ghosting or flare in shots that include the sun or other bright light sources. These effects can be mitigated by attaching a lens hood or by composing shots with bright light sources well out of the frame. You can also try such techniques as removing lens filters or choosing a different shutter speed.

Bokeh is irregular:

With fast shutter speeds and/or fast lenses, you may notice irregularities in how *bokeh* is shaped. The effect can be mitigated by choosing slower shutter speeds and/or higher f-numbers.

• Shooting ends unexpectedly or does not start:

- Shooting may end automatically to prevent the camera overheating, for example if:
 - the ambient temperature is high,
 - the camera has been used for extended periods to record videos, or
 - the camera has been used in continuous release modes for extended periods.
- If pictures cannot be taken because the camera is running hot, turn the camera off and wait for it to cool before trying to take pictures again.
 Note that the camera may feel warm to the touch, but this does not indicate a malfunction.

Image artifacts appear in the display during shooting:

- To reduce noise, adjust settings such as ISO sensitivity, shutter speed, or Active D-Lighting.
- At high ISO sensitivities, noise may become more noticeable in long exposures or in pictures recorded when the camera temperature is elevated.
- Randomly-spaced bright pixels, fog, or bright spots may arise as a result of increases in the temperature of the camera's internal circuits. Turn the camera off when it is not in use.
- Randomly-spaced bright pixels, fog, lines or unexpected colors may appear if you press the ? button to zoom in on the view through the lens during shooting.
- Note that the distribution of noise in the display may differ from that in the final picture.
- This issue can sometimes be addressed by checking and optimizing the image sensor. Perform pixel mapping using [Pixel mapping] in the setup menu.

• The camera cannot measure a value for preset manual white balance:

The subject is too dark or too bright.

Certain pictures cannot be selected as sources for preset manual white balance:

Pictures created with cameras of other types cannot serve as sources for preset manual white balance.

• White balance (WB) bracketing is unavailable:

- White balance bracketing is not available when an NEF (RAW) or RAW + JPEG option is selected for image quality.
- White balance bracketing cannot be used in multiple exposure and HDR overlay modes.

● The effects of [Set Picture Control] differ from picture to picture: [Auto] is selected for [Set Picture Control] or as the basis for a custom Picture Control created using [Manage Picture Control], or [A] (auto) is selected for [Quick sharp], [Contrast], or [Saturation]. For consistent results over a series of photographs, choose a setting other than [A] (auto).
 The option selected for metering cannot be changed: The option selected for metering cannot be changed during exposure lock.
• Exposure compensation is not available: Changes to exposure compensation in mode M apply only to the exposure indicator and have no effect on shutter speed or aperture.

• Uneven shading appears in long exposures: Uneven shading may appear in long exposures shot at shutter speeds of "Bulb" or "Time". The effect can be mitigated by selecting [ON] for [Long exposure NR] in the photo shooting menu.

• The AF-assist illuminator does not light:

- Is [OFF] selected for Custom Setting a12 [Built-in AF-assist illuminator]?
- The illuminator does not light in video mode.
- The illuminator does not light when AF-C or MF is selected for focus mode.

Sound is not recorded with videos:

- Is [Microphone off] selected for [Microphone sensitivity] in the video recording menu?
- Was the video recorded with [Microphone sensitivity] > [Manual] chosen in the video recording menu and a low sensitivity selected?

Playback

паук	
NEF	(RAW) pictures are not visible during playback:
The c	camera displays only the JPEG copies of pictures taken with [RAW +
JPEG	i fine★], [RAW + JPEG fine], [RAW + JPEG normal★], [RAW + JPEG
norn	nal], [RAW + JPEG basic★], or [RAW + JPEG basic] selected for
[lma	ge quality].
Pictu	res taken with other cameras are not displayed:
Pictu	res recorded with other types of camera may not display correctly.
Not a	all photos are visible during playback:
Selec	t [All] for [Playback folder] in the playback menu.
• "Tall	" (portrait) orientation photos are displayed in "wide"
(lanc	lscape) orientation:
• ls [(OFF] selected for [Rotate tall] in the playback menu?
 Aut 	to picture rotation is not available during picture review.
• Car	mera orientation may not be correctly recorded in photos taken
wit	h the camera pointing up or down.
Pictu	ires cannot be deleted:
Are t	he pictures protected?
•	res cannot be retouched:
	e pictures cannot be further edited with this camera.
• The	ere is insufficient space on the memory card to record the retouched
cop	by.
	camera displays the message, "[Folder contains no pictures.]":
	t [All] for [Playback folder] in the playback menu.
	(RAW) pictures cannot be printed:
	nt JPEG copies of the pictures created using a tool such as the [RAW
•	ocessing (current picture)] or [RAW processing (multiple
-	tures)] items in the playback i menu.
• Coj	py the pictures to a computer and print them using NX Studio or

 Copy the pictures to a computer and print them using i other software that supports the NEF (RAW) format.

Pictures are not displayed on HDMI devices: Confirm that an LIDMI schla is correctly connected

Confirm that an HDMI cable is correctly connected.

Output to HDMI devices does not function as expected:

- Confirm that an HDMI cable is correctly connected.
- Is [ON] selected for [External rec. cntrl (HDMI)] in the video recording menu?
- Pictures may display correctly if default settings are restored using the [**Reset all settings**] item in the setup menu.
- The Image Dust Off option in NX Studio does not have desired effect:

Image sensor cleaning changes the position of dust on the image sensor and will not have the desired effect if:

- Image Dust Off reference data recorded after image sensor cleaning is performed are used with photographs taken before image sensor cleaning is performed, or
- Image Dust Off reference data recorded before image sensor cleaning is performed are used with photographs taken after image sensor cleaning is performed.
- The effects of [Set Picture Control], [Active D-Lighting], or [Vignette control] are not visible:

In the case of NEF (RAW) pictures, the effects can only be viewed using Nikon software. View NEF (RAW) pictures using NX Studio.

Pictures cannot be copied to a computer:

Depending on the operating system, you may be unable to upload pictures when the camera is connected to a computer. Copy pictures from the memory card to a computer using a card reader or other device.

Bluetooth and Wi-Fi (Wireless Networks)

• Smart devices do not display the camera SSID (network name):

- Navigate to the network menu and confirm both that [OFF] is selected for [Airplane mode] and that [ON] is selected for [Connect to smart device] > [Pairing (Bluetooth)] > [Bluetooth connection].
- Confirm that [Connect to smart device] > [Wi-Fi connection] is enabled in the network menu.
- Try disabling and re-enabling wireless network features on the smart device.
- The camera cannot connect to printers and other wireless devices: The camera cannot establish wireless connections with devices other than smartphones, tablets, and computers.

• Pictures cannot be uploaded to smart devices via auto upload:

- If [Foreground] is selected for [Auto link] > [Link mode] in the SnapBridge at tab, pictures will not be uploaded to the smart device automatically while the SnapBridge app is running in the background. Pictures will only be uploaded when the SnapBridge app is displayed (running in the foreground) on the smart device.
- Check that the camera is paired with the smart device.
- Check that the camera and smart device are configured for connection via Bluetooth.

• The camera cannot download location data from the smart device:

- The camera may be unable to download or display location data from smart devices depending on the version of the operating system and/ or SnapBridge app used.
- If [Foreground] is selected for [Auto link] > [Link mode] in the SnapBridge tab, location data will not be downloaded to the camera. Instead, they will be embedded in photographs after they are uploaded to the smart device.

Miscellaneous

• The date of recording is not correct:

Is the camera clock set correctly? The clock is less accurate than most watches and household clocks; check it regularly against more accurate timepieces and reset as necessary.

Menu items cannot be selected:

Some items are not available at certain combinations of settings.

Alerts and Error Messages

This section lists the alerts and error messages that appear in the control panel and camera display.

<u>Alerts</u>

The following alerts appear in the control panel and camera display:

Alert			
Camera display	Control panel	Problem/solution	
đ	4	Low battery. Ready spare battery.	
F		 Lens is not correctly attached. Ensure that the lens is correctly attached. Ensure that retractable lenses are extended. This indicator is also displayed when a non-CPU lens is attached via a mount adapter, but in this case no action need be taken. 	
Bulb (flashes) Time (flashes)		 "Bulb" selected in mode S. Change shutter speed. Select mode M. 	
		 "Time" selected in mode S. Change shutter speed. Select mode M. 	
	usy shes)	Processing in progress. Wait until processing is complete.	

Alert		
Camera display	Control panel	Problem/solution
		 Subject too bright; limits of camera exposure metering system exceeded. Lower ISO sensitivity. Mode P: Use third-party ND (neutral density) filter (filter can also be used if alert is still displayed after following settings are adjusted in mode S or A). Mode S: Choose faster shutter speed. Mode A: Choose smaller aperture (higher f-number). Subject too dark; limits of camera exposure metering system exceeded. Increase ISO sensitivity. Mode P: Use optional flash unit (flash can also be used if alert is still displayed after following settings are adjusted in mode S or A). Mode S: Choose slower shutter speed. Mode S: Choose solwer shutter speed.
\$ (flashes)	_	Flash has fired at full power. Photo may be underexposed. Check distance to subject and settings such as aperture, flash range, and ISO sensitivity.

Alert			
Camera display	Control panel	Problem/solution	
Full (flashes) Err (flashes)		 Memory insufficient to record further photos. Delete pictures from memory card until there is room for additional pictures to be recorded. Copy pictures you wish to keep to computer or other device before proceeding. Insert new memory card. 	
		 Camera has run out of file numbers. Delete pictures from memory card until there is room for additional pictures to be recorded. Copy pictures you wish to keep to computer or other device before proceeding. Insert new memory card. 	
		Camera malfunction. Press shutter-release button again. If error persists or appears frequently, consult Nikon-authorized service representative.	

Error Messages

The following error messages may appear in the camera display:

Message			
Camera display	Control panel	Problem/solution	
Shutter release disabled. Recharge battery.	_	Battery exhausted. • Replace with spare battery. • Charge battery.	
This battery is unable to pro- vide data to the camera and cannot be used.	_	 Battery info not available. Battery cannot be used. Contact Nikon- authorized service representative. Battery level is extremely low; charge battery. 	
For safety, choose a battery designated for use in this camera.	_	Battery cannot supply data to camera. Replace third-party batteries with genuine Nikon batteries.	
No memory card.	[-E -]	The memory card is inserted incorrectly or not at all. Check that card is inserted correctly.	

Message			
Camera display	Control panel	Problem/solution	
Cannot access this memory card. Insert another card.	Card , Err (flashes)	 Error accessing memory card. Check that camera supports memory card. Insert new memory card. If error persists after card has been repeatedly ejected and reinserted, card may be damaged. Contact retailer or Nikon- authorized service representative. Unable to create new folder. 	
		Insert new memory card.	
This card is not formatted. Format the card.	For (flashes)	Memory card is not correctly formatted.Format memory card.Replace with correctly-formatted memory card.	
FTZ mount adapter firmware version not supported. Upgrade FTZ firmware.	_	Mount adapter firmware out of date. Update to the latest version of the mount adapter firmware. For more information, visit the Nikon website for your country or region.	

Message			
Camera display	Control panel	Problem/solution	
Recording interrupted. Please wait.	_	Memory card does not support required video write speed. Use card that supports required write speed or change option selected for [Frame size/ frame rate] in video recording menu.	
The camera is too hot. It cannot be used until it cools. Please wait.	_	Camera's internal temperature is elevated. Suspend shooting until camera has cooled. High battery temperature.	
Camera will turn itself off.		Remove battery and wait for it to cool.	
Folder contains	_	Folder contains no pictures. Insert memory card that contains pictures.	
no pictures.		No pictures in folder selected for playback. Use [Playback folder] item in playback menu to select folder that contains pictures.	

Message			
Camera display	Control panel	Problem/solution	
Cannot display this file.		File has been modified using computer application or does not conform to DCF file standard. Do not overwrite pictures using computer applications.	
		File is corrupt. Do not overwrite pictures using computer applications.	
Cannot select this file.	_	Selected picture cannot be retouched. Retouch options are available only with pictures taken with or previously retouched on camera.	
This video cannot be edited.	_	 Selected video cannot be edited. Videos created with other devices cannot be edited. Videos under two seconds long cannot be edited. 	
This file cannot be saved to the destination memory card. See the camera manual for details.		Files 4 GB or larger can only be saved to memory cards formatted for exFAT. They will not be saved to cards in other formats such as FAT32. Use a memory card with a capacity over 64 GB formatted in the camera or keep file size to under 4 GB.	

Technical Notes

Compatible Lenses and Accessories

The camera can be used with all Z mount lenses.

NIKKOR Z 24-70mm f/4 S

Confirm that the lens name includes "NIKKOR Z".

Be sure to update to the latest versions of the camera and lens firmware. With earlier versions, some functions may not be available or the camera may fail to correctly detect the lens. The latest firmware is available from the Nikon Download Center.

Compatible F Mount Lenses

F mount lenses can be mounted on Z mount cameras using an FTZ II/FTZ mount adapter.

• Some features may not be available depending on the lens used. Information on the F mount lenses that can be used with Z mount cameras and on any restrictions that may apply can be found in *Compatible F Mount Lenses*, available from the Nikon Download Center:


https://downloadcenter.nikonimglib.com/

Camera Displays

The displays show information on current settings. Other icons or warnings may occasionally be displayed, for example when settings are changed.

The Monitor

Photo Mode

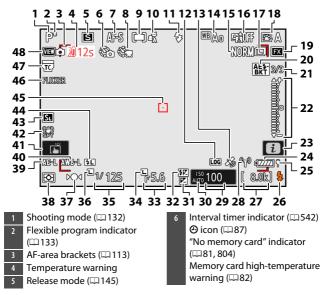

- Focus mode (1110) Time-lapse video recording 8 indicator (22556) 9 AF-area mode (CIII 113) 10 Subject detection (III 119) 11 Flash mode (01429) 12 Track log indicator (2204) Satellite signal indicator 13 (205) 14 White balance (CD 158) 15 Image quality (1105) 16 Active D-Lighting (22512) 17 Image size (🕮 108) 18 Picture Control (1192) Image area (1102) 19 20 Exposure and flash bracketing indicator (CD 178) WB bracketing indicator (📖 183) ADL bracketing indicator (00187) HDR indicator (2538) Multiple exposure indicator (2530)
- Number of shots in exposure 21 and flash bracketing sequence (178) Number of shots in WB bracketing sequence (\Box 183) Number of shots in ADL bracketing sequence (22187) HDR strength (CD 538) Number of shots in multiple exposure (CD 530) 22 Exposure indicator Exposure (CII 136) Exposure compensation (143) Auto bracketing (CII 177) 23 *i* icon (1165) 24 Battery indicator (1180) 25 USB power delivery (CP 744) 26 Flash-ready indicator (11423) 27 Number of exposures remaining (**1**81, 887) Camera control mode (2854) 28 Wi-Fi connection indicator $(\square 317, 329, 367)$ Bluetooth connection indicator $(\Box 757)$ Airplane mode (CC 756)

- ISO sensitivity (CI154) 29 ISO sensitivity indicator (D154) 30 Auto ISO sensitivity indicator (📖 156) Exposure compensation indicator (CIII 143) Flash compensation indicator (2432) 33 Aperture (1134, 135) 34 Aperture lock icon (11665) 35 Shutter speed (22133, 135) 36 Shutter speed lock icon (🖽 665) 37 Focus indicator (1129) 38 Metering (11520)
- 39 Autoexposure (AE) lock (2141)
- 40 Auto white-balance (AWB) lock (11647)
- 41 Touch shooting (253, 124)
- 42 Vibration reduction indicator (CD 526)
- 43 Silent mode (2735)
- 44 FV lock indicator (11434)
- 45 Focus point (1123)
- 46 Flicker detection (CD 518)
- 47 Teleconverter indicator
- 48 View mode (11624)

V Temperature Warnings

- If the camera temperature becomes elevated, a temperature warning and count-down timer will be displayed. When the timer reaches zero, the shooting display will turn off.
- The timer turns red when the thirty second mark is reached. In some cases, the timer may be displayed immediately after the camera is turned on.


🔽 Memory Card High-Temperature Warning

A high-temperature warning appears in the shooting display when the temperature of the memory card rises. Do not attempt to remove the memory card; instead, wait for the camera to cool and the warning to clear from the display.

🔽 No Memory Card Inserted

If no memory card is inserted, a "no memory card" indicator will appear in the shooting display and [-E-] will appear in both the control panel and the shooting display.


The Information Display

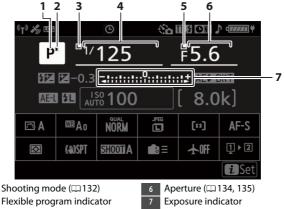


2 (🕮 133)


1

- Shutter speed lock icon (2665) 3
- Shutter speed (2133, 135) 4
- Aperture lock icon (11665) 5
- Exposure (1136)
 - Exposure compensation (📖 143)
 - Auto bracketing (CD 177)

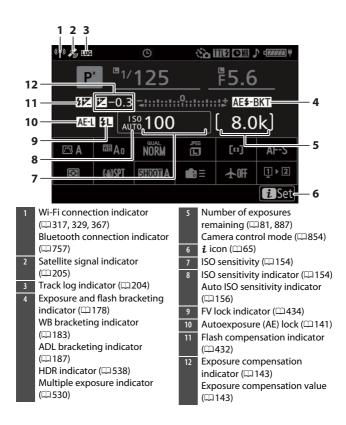

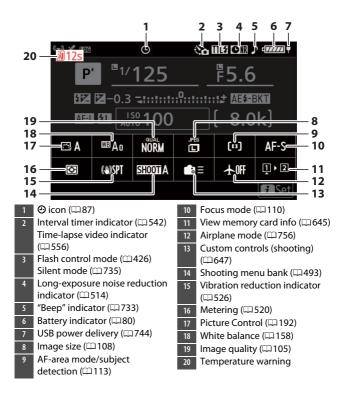

Video Mode

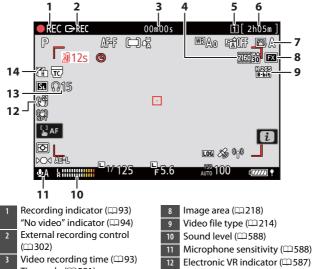


- Timecode (CD 591)
- Frame size and rate (\Box 216)
- 5 Destination (2578)
- Time remaining (🕮 93) 6
- Picture Control (192) Tone mode (C215)

- Electronic VR indicator (2587)
- Headphone volume (1590) 13
- Zebra pattern (CC686) 14

The Viewfinder

II Photo Mode

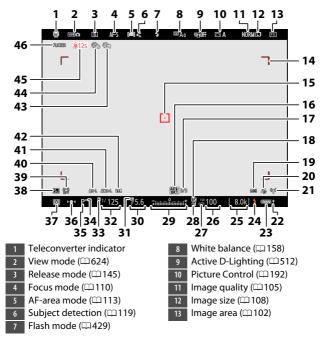


14	AF-area brackets (🕮 113)
15	Focus point (🕮 123)
16	Exposure and flash bracketing
	indicator (🕮 178)
	WB bracketing indicator
	(🖽 183)
	ADL bracketing indicator
	(🖽 187)
	HDR indicator (🕮 538)
	Multiple exposure indicator
	(🕮 530)
17	Number of shots in exposure
	and flash bracketing sequence
	(🕮 178)
	Number of shots in WB
	bracketing sequence (🕮 183)
	Number of shots in ADL
	bracketing sequence (🖽 187)
	HDR strength (🕮 538)
	Number of shots in multiple
	exposure (🎞 530)
18	Flash compensation indicator
	(□ 432)
19	Track log indicator (© 204)
20	Satellite signal indicator
	(□ 205)
21	Wi-Fi connection indicator
	(🕮 317, 329, 367)
	Bluetooth connection indicator
	(757)
	Airplane mode (印756)

22	USB power delivery (🎞 744)
23	Battery indicator (🕮 80)
24	Flash-ready indicator (🕮 423)
25	Number of exposures
	remaining (🕮 81, 887)
	Camera control mode (🗆 854)
26	ISO sensitivity (🕮 154)
27	ISO sensitivity indicator (🕮 154)
	Auto ISO sensitivity indicator
	(🕮 156)
28	Exposure compensation
	indicator (🕮 143)
29	Exposure indicator
	Exposure (🕮 136)
	Exposure compensation
	(🕮 143)
	Auto bracketing (🕮 177)
30	Aperture (🕮 134, 135)
31	Aperture lock icon (🕮 665)
32	Shutter speed (🕮 133, 135)
33	Shutter speed lock icon (🕮 665)
34	Flexible program indicator
	(🕮 133)
35	Shooting mode (🕮 132)
36	Focus indicator (🕮 129)
37	Metering (🕮 520)


- 38 Silent mode (\$\overline\$735)39 Vibration reduction indicator
- (11526)
- 40 Autoexposure (AE) lock (D 141)
- 41 Auto white-balance (AWB) lock (11647)
- 42 FV lock indicator (C2434)
- 43 Time-lapse video indicator (CL 556)
- Interval timer indicator (□ 542)
 ④ icon (□ 87)
 "No memory card" indicator
 - (🖽 81, 804)
 - Memory card high-temperature warning (🕮 82)
- 45 Temperature warning
- 46 Flicker detection (2518)

Video Mode

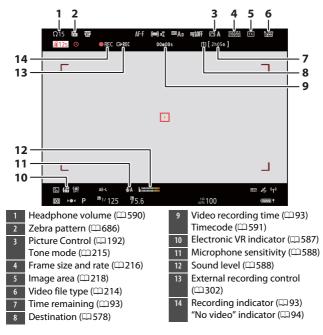

The Control Panel

Photo Mode

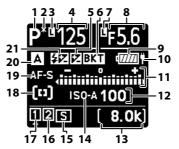

- 1 Shooting mode (🕮 132)
- 2 Flexible program indicator (1133)
- 3 Shutter speed lock icon (CD665)
- 4 Shutter speed (🕮 133, 135) Exposure compensation value (🕮 143)

Flash compensation value (CII 432)

Number of shots in exposure and flash bracketing sequence (□178)


Number of shots in WB bracketing sequence (1183) Intervals remaining in interval timer sequence (1545) Shots remaining in focus shift sequence (1569)

Track log indicator (C204)

- Exposure compensation indicator (⁽¹⁾143)
- Exposure and flash bracketing indicator (□178)
 WB bracketing indicator (□183)
 ADL bracketing indicator (□187)
 HDR indicator (□538)
 Multiple exposure indicator (□530)

7	Aperture lock icon (🎞 665)	13	Number of exposures
8	Aperture (🕮 134, 135)		remaining (🖽 81, 887)
	Exposure and flash bracketing		Preset manual white balance
	increment (🕮 178)		measurement mode (🕮 170)
	WB bracketing increment		Camera control mode (🗆 854)
	(🕮 183)	14	ISO sensitivity indicator (🕮 154)
	Number of shots in ADL		Auto ISO sensitivity indicator
	bracketing sequence (🕮 187)		(🕮 156)
	Interval-timer frame count	15	Release mode (🕮 145)
	(🕮 545)		Buffer capacity (🕮 145)
	Focus-shift frame count (🕮 569)		Buffer capacity (high-speed
	Satellite signal indicator		frame capture; 🕮 149)
	(🕮 205)		Interval timer indicator (🕮 545)
	Wi-Fi connection indicator		Time-lapse video indicator
	(🕮 317, 329, 367)		(🖽 558)
	Bluetooth indicator (🕮 757)		Focus shift indicator (🖽 569)
	Computer connection (🕮 854)	16	Memory card indicator (Slot 2;
9	Battery indicator (🕮 80)		□ 503)
10	USB power delivery (🕮 744)	17	Memory card indicator (Slot 1;
11	Exposure indicator		□ 503)
	Exposure (🕮 136)	18	AF-area mode (🕮 113)
	Exposure compensation	19	Focus mode (🕮 110)
	(🕮 143)	20	Shooting menu bank (🖽 493)
	Exposure and flash	21	Flash compensation indicator
	bracketing (🕮 178)		(□432)
	WB bracketing (🕮 183)		
	ADL bracketing (🕮 187)		
12	ISO sensitivity (🕮 154)		

Video Mode

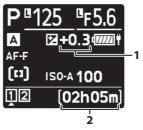

- Exposure compensation value (videos; 🕮 143)
- Available recording time (11578)

Compatible Flash Units

The Nikon Creative Lighting System (CLS)

Nikon's advanced Creative Lighting System (CLS) supports a variety of features thanks to improved communication between the camera and compatible flash units.

Features Available with CLS-Compatible Flash Units

Flash unit		Flash unit	
SB-5000	817	SB-R200	827
SB-910/SB-900/SB-800	819	SB-400	829
SB-700	821	SB-300	831
SB-600	823	SU-800	833
SB-500	825		

Supported features

Single flash

5		
i-TTL	i-TTL balanced fill-flash	✓ 1
	Standard i-TTL fill-flash	✓ ²
⊗A	Auto aperture	~
Α	Non-TTL auto	—
GN	Distance-priority manual	~
м	Manual	~
RPT	Repeating flash	~

Optical Advanced Wireless Lighting

Remote	e flash control	~
i-TTL	i-TTL	~
[A:B]	Quick wireless flash control	~
⊗A	Auto aperture	~
Α	Non-TTL auto	
м	Manual	~
RPT	Repeating flash	~
emote	1	
i-TTL	i-TTL	~
[A:B]	Quick wireless flash control	~
⊗A/A	Auto aperture/non-TTL auto	✓ ³
М	Manual	~
RPT	Repeating flash	~

Supported features	
Radio-controlled Advanced Wireless Lighting	✓ 4
Color Information Communication (flash)	~
Color Information Communication (LED light)	_
Auto FP high-speed sync	✓ 5
FV lock	✓ 6
Red-eye reduction	~
Camera modeling illumination	~
Unified flash control	~
Camera flash unit firmware update	~

- 1 Not available with spot metering.
- 2 Can also be selected via the flash unit.
- 3 Choice of **A** and **A** depends on the option selected with the master flash.
- 4 Supports the same features as remote flash units with optical AWL.
- 5 Available only in i-TTL, (A, A, GN, and M flash-control modes.
- 6 Available only in **i-TTL** flash control mode or when the flash is configured to emit monitor preflashes in **BA** or **A** flash control mode.

II The SB-910, SB-900, and SB-800

Single flash i-TTL balanced fill-flash ✓ 1 i-TTL Standard i-TTL fill-flash ✓ 2 ⊗A Auto aperture ✓ 3 Α Non-TTL auto ✓ ³ GN Distance-priority manual ~ М Manual ~ RPT Repeating flash ~

Optical Advanced Wireless Lighting

Master

laster		
Remote	e flash control	~
i-TTL	i-TTL	~
[A:B]	Quick wireless flash control	_
⊗A	Auto aperture	~
Α	Non-TTL auto	_
м	Manual	~
RPT	Repeating flash	~
emote	l	
i-TTL	i-TTL	~
[A:B]	Quick wireless flash control	~
⊛A/A	Auto aperture/non-TTL auto	✓ ⁴
м	Manual	~
RPT	Repeating flash	~

Supported features

Supported features	
Radio-controlled Advanced Wireless Lighting	_
Color Information Communication (flash)	~
Color Information Communication (LED light)	_
Auto FP high-speed sync	✓ ⁵
FV lock	✓ 6
Red-eye reduction	~
Camera modeling illumination	~
Unified flash control	_
Camera flash unit firmware update	✓ 7

- 1 Not available with spot metering.
- 2 Can also be selected via the flash unit.
- 3 **SA**/A mode selection is performed on the flash unit using custom settings.
- 4 Choice of **A** and **A** depends on the option selected with the master flash.
- 5 Available only in i-TTL, 🖗 A, A, GN, and M flash-control modes.
- 6 Available only in **i-TTL** flash control mode or when the flash is configured to emit monitor preflashes in **BA** or **A** flash control mode.
- 7 Firmware updates for the SB-910 and SB-900 can be performed from the camera.

Supported features

Single flash

5		
i-TTL	i-TTL balanced fill-flash	✓ 1
	Standard i-TTL fill-flash	~
⊗A	Auto aperture	—
Α	Non-TTL auto	—
GN	Distance-priority manual	~
м	Manual	~
RPT	Repeating flash	_

Optical Advanced Wireless Lighting

Remote	e flash control	~
i-TTL	i-TTL	✓ ✓
[A:B]	Quick wireless flash control	~
⊗A	Auto aperture	
Α	Non-TTL auto	
м	Manual	~
RPT	Repeating flash	
emote		
i-TTL	i-TTL	~
[A:B]	Quick wireless flash control	~
⊗A/A	Auto aperture/non-TTL auto	
М	Manual	~
RPT	Repeating flash	~

Supported features	
Radio-controlled Advanced Wireless Lighting	_
Color Information Communication (flash)	~
Color Information Communication (LED light)	_
Auto FP high-speed sync	✓ 2
FV lock	✓ ³
Red-eye reduction	~
Camera modeling illumination	~
Unified flash control	_
Camera flash unit firmware update	~

- 1 Not available with spot metering.
- 2 Available only in **i-TTL**, **GN**, and **M** flash-control modes.
- 3 Available only in i-TTL flash-control mode.

Supported features

Single flash

5		
i-TTL	i-TTL balanced fill-flash	✓ 1
	Standard i-TTL fill-flash	✓ ²
⊗A	Auto aperture	—
Α	Non-TTL auto	—
GN	Distance-priority manual	—
м	Manual	~
RPT	Repeating flash	

Optical Advanced Wireless Lighting

master		
Remote	e flash control	—
i-TTL	i-TTL	_
[A:B]	Quick wireless flash control	
⊗A	Auto aperture	
Α	Non-TTL auto	
М	Manual	
RPT	Repeating flash	_
Remote	1	
i-TTL	i-TTL	~
[A:B]	Quick wireless flash control	~
⊛A/A	Auto aperture/non-TTL auto	
м	Manual	~
RPT	Repeating flash	~

Supported features	
Radio-controlled Advanced Wireless Lighting	_
Color Information Communication (flash)	~
Color Information Communication (LED light)	-
Auto FP high-speed sync	✓ ³
FV lock	✓ 4
Red-eye reduction	~
Camera modeling illumination	~
Unified flash control	_
Camera flash unit firmware update	

- 1 Not available with spot metering.
- 2 Can also be selected via the flash unit.
- 3 Available only in **i-TTL** and **M** flash-control modes.
- 4 Available only in i-TTL flash-control mode.

Supported features

Single flash

5		
i-TTL	i-TTL balanced fill-flash	✓ 1
	Standard i-TTL fill-flash	~
⊗A	Auto aperture	—
Α	Non-TTL auto	—
GN	Distance-priority manual	—
м	Manual	✓ ²
RPT	Repeating flash	

Optical Advanced Wireless Lighting

Remote	e flash control	✓ ²
i-TTL	i-TTL	✓ 2
[A:B]	Quick wireless flash control	
⊗A	Auto aperture	
Α	Non-TTL auto	
м	Manual	✓ 2
RPT	Repeating flash	
emote	1	
i-TTL	i-TTL	~
[A:B]	Quick wireless flash control	~
⊛A/A	Auto aperture/non-TTL auto	
м	Manual	~
RPT	Repeating flash	~

Supported features			
Radio-controlled Advanced Wireless Lighting	_		
Color Information Communication (flash)	~		
Color Information Communication (LED light)	~		
Auto FP high-speed sync	✓ 3		
FV lock	✓ 4		
Red-eye reduction	~		
Camera modeling illumination	~		
Unified flash control	~		
Camera flash unit firmware update	~		

- 1 Not available with spot metering.
- 2 Can be selected using the [Flash control] item in the camera menus.
- 3 Available only in **i-TTL** and **M** flash-control modes.
- 4 Available only in i-TTL flash-control mode.

Supported features

Single flash

5					
i-TTL	i-TTL balanced fill-flash	—			
1-116	Standard i-TTL fill-flash	—			
⊗A	Auto aperture	—			
Α	Non-TTL auto				
GN	Distance-priority manual				
М	Manual				
RPT	Repeating flash	_			

Optical Advanced Wireless Lighting

	Remote				
	i-TTL	i-TTL			
	[A:B]	Quick wireless flash control	—		
	⊗A	Auto aperture	—		
	Α	Non-TTL auto	_		
	м	Manual	_		
	RPT	Repeating flash			
Rei	mote				
	i-TTL	i-TTL	~		
	[A:B]	Quick wireless flash control	~		
	⊗A/A	Auto aperture/non-TTL auto	_		
	м	Manual	~		
	RPT	Repeating flash	_		

Supported features	
Radio-controlled Advanced Wireless Lighting	-
Color Information Communication (flash)	_
Color Information Communication (LED light)	_
Auto FP high-speed sync	✓ 1
FV lock	✓ 2
Red-eye reduction	_
Camera modeling illumination	~
Unified flash control	_
Camera flash unit firmware update	-

- 1 Available only in **i-TTL** and **M** flash-control modes.
- 2 Available only in i-TTL flash-control mode.

The SB-400

Supported features

Single flash

5		
i-TTL	i-TTL balanced fill-flash	✓ 1
FILE	Standard i-TTL fill-flash	~
⊗A	Auto aperture	—
Α	Non-TTL auto	—
GN	Distance-priority manual	
м	Manual	✓ ²
RPT	Repeating flash	

Optical Advanced Wireless Lighting

Master

ma					
	Remote flash control —				
	i-TTL	TTL i-TTL —			
	[A:B]	Quick wireless flash control	_		
	⊗A	Auto aperture	—		
	A	Non-TTL auto	—		
	м	M Manual —			
	RPT	RPT Repeating flash —			
Rer	note	I			
	i-TTL	i-TTL	—		
	[A:B] Quick wireless flash control —		—		
			—		
	M Manual —		—		
	RPT	Repeating flash	—		

Supported features			
Radio-controlled Advanced Wireless Lighting			
Color Information Communication (flash)	~		
Color Information Communication (LED light)			
Auto FP high-speed sync			
FV lock	✓ ³		
Red-eye reduction	~		
Camera modeling illumination			
Unified flash control	~		
Camera flash unit firmware update			

- 1 Not available with spot metering.
- 2 Can be selected using the [Flash control] item in the camera menus.
- 3 Available only in **i-TTL** flash-control mode.

The SB-300

Supported features

Single flash

5		
i-TTL	i-TTL balanced fill-flash	✓ 1
FILE	Standard i-TTL fill-flash	~
⊗A	Auto aperture	—
Α	Non-TTL auto	—
GN	Distance-priority manual	
м	Manual	✓ ²
RPT	Repeating flash	

Optical Advanced Wireless Lighting

Master

ma					
	Remote flash control —				
	i-TTL	TTL i-TTL			
	[A:B]	A:B] Quick wireless flash control –			
	⊗A	Auto aperture	_		
	Α	Non-TTL auto	_		
	м	Manual —			
	RPT	Repeating flash	_		
Rer	note	I			
	i-TTL	i-TTL	—		
	[A:B] Quick wireless flash control —		_		
	SA/A Auto aperture/non-TTL auto —		—		
	M Manual —		—		
	RPT	Repeating flash	—		

Supported features			
Radio-controlled Advanced Wireless Lighting			
Color Information Communication (flash)	~		
Color Information Communication (LED light)	_		
Auto FP high-speed sync			
FV lock	✓ ³		
Red-eye reduction			
Camera modeling illumination			
Unified flash control	~		
Camera flash unit firmware update	~		

- 1 Not available with spot metering.
- 2 Can be selected using the [Flash control] item in the camera menus.
- 3 Available only in **i-TTL** flash-control mode.

The SU-800 Wireless Speedlight Commander

When mounted on a CLS-compatible camera, the SU-800 can be used as a commander for SB-5000, SB-910, SB-900, SB-800, SB-700, SB-600, SB-500, or SB-R200 flash units. Group flash control is supported for up to three groups. The SU-800 itself is not equipped with a flash.

Supported features								
Sin	Single flash							
	i-TTL		TL balanced fill-flash	_				
	1-1	St	andard i-TTL fill-flash	_				
	Ś	A A	ito aperture	_				
	F	A No	on-TTL auto	_				
	G	N Di	stance-priority manual	_				
	٨	I M	nual —					
	RF	PT Re	peating flash —					
Opt	Optical Advanced Wireless Lighting							
	Master							
		Remo	Remote flash control 🗸					
		i-TTL i-TTL		_				
	[A:B]		Quick wireless flash control	✓ 1				
	⊗A		Auto aperture	_				
	A Non-TTL auto		Non-TTL auto	—				
		М	_					

Remote

RPT

Repeating flash

inc	mote				
	i-TTL	-TTL —			
	[A:B]	Quick wireless flash control	—		
	⊗A/A	Auto aperture/non-TTL auto			
	м	Manual	—		
	RPT	Repeating flash	_		

Supported features	
Radio-controlled Advanced Wireless Lighting	_
Color Information Communication (flash)	_
Color Information Communication (LED light)	_
Auto FP high-speed sync	✓ 2
FV lock	✓ 3
Red-eye reduction	_
Camera modeling illumination	~
Unified flash control	_
Camera flash unit firmware update	-

1 Available during close-up photography only.

2 Not available when **RPT** is selected as the flash control mode for the remote flash unit.

3 Available only when **i-TTL** is selected as the flash control mode for the remote flash unit or when the flash is configured to emit monitor preflashes in mode **SA**.

Notes on Optional Flash Units

Be sure also to consult documentation for the optional flash unit before use.

- If the unit supports CLS, refer to the section on CLS-compatible digital SLR cameras. This camera is not included in the "digital SLR" category in the documentation for the SB-80DX, SB-28DX, and SB-50DX.
- If the flash-ready indicator (\$) flashes for about three seconds after a photograph is taken in i-TTL or non-TTL auto mode, the flash has fired at full power and the photograph may be underexposed (CLS-compatible flash units only).
- i-TTL flash control can be used at ISO sensitivities between 64 and 12800 equivalent.
- At ISO sensitivities over 12800, the desired results may not be achieved at some ranges or aperture settings.
- In mode **P**, the maximum aperture (minimum f-number) is limited according to ISO sensitivity, as shown below:

	Maximum aperture (f-number) at ISO equivalent of:						
100	200	400	800	1600	3200	6400	12800
4	5	5.6	7.1	8	10	11	13

* If the maximum aperture of the lens is smaller than given above, the maximum value for aperture will be the maximum aperture of the lens.

- The SB-5000, SB-910, SB-900, SB-800, SB-700, SB-600, SB-500, and SB-400 provide red-eye reduction in red-eye reduction and slow-sync with red-eye reduction flash modes.
- "Noise" in the form of lines may appear in flash photographs taken with an SD-9 or SD-8A high-performance battery pack attached directly to the camera. Reduce ISO sensitivity or increase the distance between the camera and the battery pack.
- The camera provides AF-assist illumination as required. AF-assist illuminators on optional flash units will not light.
- When an SC-series 17, 28, or 29 sync cable is used for off-camera flash photography, correct exposure may not be achieved in i-TTL mode. We recommend that you select standard i-TTL fill-flash. Take a test shot and view the results in the camera display.
- In i-TTL, do not use any form of flash panel (diffusion panel) other than the flash unit's built-in flash panel or supplied bounce adapter. Using other panels may produce incorrect exposure.

🔽 Flash Photography

Flash photography cannot be combined with some camera features, including:

- silent mode,
- video recording,
- high-speed frame capture, and
- HDR overlay.

Vising FV Lock with Optional Flash Units

- FV lock is available with optional flash units in TTL and (where supported) monitor pre-flash **③A** and monitor pre-flash **A** flash control modes (see the documentation provided with the flash unit for more information).
- Note that when Advanced Wireless Lighting is used to control remote flash units, you will need to set the flash control mode for the master or at least one remote group to TTL, I A, or A.

🔽 Other Flash Units

The following flash units can be used in non-TTL auto (**A**) and manual modes. The options available do not vary with the lens used.

Flash unit	Supported features
SB-80DX, SB-28DX, SB-28, SB-26, SB-25, SB-24	Non-TTL auto, manual, repeating flash, rear-curtain sync ¹
SB-50DX, SB-23, SB-29, SB-21B, SB-29S	Manual, rear-curtain sync ¹
SB-30, SB-27 ² , SB-225, SB-22, SB-20, SB-16B, SB-15	Non-TTL auto, manual, rear-curtain sync ¹

- 1 Available when the camera is used to select the flash mode.
- 2 Mounting an SB-27 on the camera automatically sets the flash mode to **TTL**, but setting the flash mode to **TTL** disables the shutter release. Set the SB-27 to **A**.

Metering Areas for FV Lock

The areas metered when FV lock is used with optional flash units are as follows:

Stand-Alone

Flash control mode	Metered area
i-TTL	6-mm circle in center of frame
Auto aperture (🟵 🗛)	Area metered by flash exposure meter

Remote

Flash control mode	Metered area	
i-TTL	Entire frame	
Auto aperture (🛞 A)	Area metered by flash exposure meter	
Non-TTL auto (A)		

Flash Compensation for Optional Flash Units

In i-TTL and auto aperture (**③A**) flash control modes, the flash compensation selected with the optional flash unit or with [**Flash control**] in the camera photo shooting menu is added to the flash compensation selected with the [**Flash compensation**] item in the photo shooting menu.

Modeling Illumination

- Pressing the control to which [Preview] has been assigned using Custom Setting f2 [Custom controls (shooting)] causes CLS-compatible flash units to emit a modeling flash.
- This feature can be used with Advanced Wireless Lighting to preview the total lighting effect achieved with multiple flash units.
- The effects of shadows cast by the flash are best observed directly rather than in the shooting display.
- Modeling illumination can be turned off by selecting [**OFF**] for Custom Setting e5 [**Modeling flash**].

🜌 Studio Strobe Lighting

To adjust the color and brightness of the view through the lens so that shots are easier to frame, select [**Adjust for ease of viewing**] for Custom Setting d8 [**View mode (photo Lv**)].

Compatible Accessories

A variety of accessories are available for your Nikon camera.

Compatible Accessories

- Availability may vary with country or region.
- See our website or brochures for the latest information.

Power Sources

- EN-EL18d Rechargeable Li-ion Battery: EN-EL18d batteries can be used with Nikon Z 9 digital cameras.
 - EN-EL18c, EN-EL18b, EN-EL18a, and EN-EL18 batteries can also be used. Note, however, that fewer pictures can be taken on a single charge than with the EN-EL18d (^{CD}889).
- MH-33 Battery Charger: The MH-33 can be used to recharge EN-EL18d batteries. Batteries can be charged while the charger is connected to a power source via the EH-7P charging AC adapter.
- EH-7P Charging AC Adapter: The EH-7P can be used to charge batteries inserted in the camera.
 - The battery will not charge while the camera is on.
 - Charging AC adapters cannot be used to charge EN-EL18a or EN-EL18 batteries.
 - The charging AC adapter can be used to power the camera; to do so, select [**ON**] for [**USB power delivery**] in the setup menu. For more information, see "USB Power Delivery" (\Box 744).

- EP-6a Power Connector, EH-6d AC Adapter: Use AC adapters to power the camera for extended periods.
 - The EP-6a is needed to connect the EH-6d to the camera. See "Attaching a Power Connector and AC Adapter" (\square 852) for details.
 - EH-6c, EH-6b, EH-6a, and EH-6 AC adapters can be used in place of the EH-6d.

• Filters

- Neutral Color (NC) filters can be used to protect the lens.
- Filters may cause ghosting when the subject is framed against a bright light, or when a bright light source is in the frame. Filters can be removed if ghosting occurs.
- Matrix metering may not produce the desired results with filters with exposure factors (filter factors) over 1× (Y44, Y48, Y52, O56, R60, X0, X1, C-PL, ND2S, ND4, ND4S, ND8, ND8S, ND400, A2, A12, B2, B8, B12); we suggest that [**Center-weighted metering**] be selected instead. See the documentation provided with the filter for details.
- Filters intended for special-effects photography may interfere with autofocus or the in-focus indicator (●).

Remote Terminal Accessories

The camera is equipped with a ten-pin remote terminal for remote control and automatic photography.

Be sure to replace the terminal cap when the terminal is not in use. Dust or other foreign matter accumulating in the terminal contacts could cause the camera to malfunction.

- MC-22/MC-22A Remote Cords (length approximately 1 m/3.3 ft): Remote shutter releases with blue, yellow, and black terminals for connection to remote shutter-triggering devices, allowing control via sound or electronic signals.
- MC-30/MC-30A Remote Cords (length approximately 80 cm/2.7 ft): Remote shutter releases; can be used to reduce camera shake.
- MC-36/MC-36A Remote Cords (length approximately 85 cm/2.8 ft): Remote shutter releases with timers for interval-timer photography.
- MC-21/MC-21A Extension Cords (length approximately 3 m/9.9 ft): Can be connected to ML-3 or MC-series 20, 22, 22A, 23, 23A, 25, 25A, 30, 30A, 36, or 36A, but note that two or more extension cords cannot be connected together.
- MC-23/MC-23A Connecting Cords (length approximately 40 cm/1.4 ft): Use an MC-23 or 23A to connect two cameras via their ten-pin terminals for simultaneous operation.
- MC-25/MC-25A Adapter Cords (length approximately 20 cm/7.9 in.): Ten-pin to two-pin adapter cords for connection to devices with two-pin terminals, including the MW-2 radio control set, MT-2 intervalometer, and ML-2 modulite remote control set.
- WR-A10 WR Adapter: An adapter used to connect WR-R10 wireless remote controllers to cameras with ten-pin remote terminals.
- ML-3 Modulite Remote Control Set: Allows infrared remote control at ranges of up to 8 m (26.2 ft).

USB Cables

- UC-E24 USB Cable: A USB cable with a type C connector for connection to the camera and a type A connector for connection to the USB device.
- UC-E25 USB Cable: A USB cable with two type C connectors.

Accessory Shoe Covers

BS-1 Accessory Shoe Cover: A cover protecting the accessory shoe when no flash unit is attached.

Body Caps

BF-N1 Body Cap: The body cap prevents dust entering the camera when no lens is in place.

• Viewfinder Eyepiece Accessories

DK-33 Rubber Eyecup: A rubber eyecup that comes fitted to the camera. It can be removed by holding the eyepiece release (\mathbb{T}) and rotating the eyecup in the direction shown (\mathbb{Q}) .





To re-attach the eyecup, align the mark on the rear of the eyecup (() with the mark on the camera body (() and rotate the eyecup as shown until it clicks into place (().



Flash Units

- SB-5000, SB-910, SB-900, SB-800, SB-700, SB-600, SB-500, SB-400, SB-300, and SB-R200 Speedlights: These units can be mounted on the camera for flash photography. Some also support wireless remote control for off-camera flash photography with multiple flash units.
 - See the documentation supplied with each Speedlight for information on mounting the unit on the camera.
 - For more information on flash photography, see "Flash Photography" (\Box 422), "Remote Flash Photography" (\Box 437), and "Compatible Flash Units" (\Box 816).
- SU-800 Wireless Speedlight Commander: A wireless commander for use with SB-5000, SB-910, SB-900, SB-800, SB-700, SB-600, SB-500, and SB-R200 flash units. Flash units can be divided into up to three groups for remote flash control. The SU-800 itself is not equipped with a flash.

Mount Adapters

FTZ II/FTZ Mount Adapter: An adapter that allows NIKKOR F mount lenses to be used with digital cameras that support interchangeable Z mount lenses.

- For information on attaching, removing, maintaining, and using mount adapters, refer to the product documentation.
 - * Update to the latest version of the mount adapter firmware if so prompted after attaching the adapter. Information on performing firmware updates is available via the Nikon website for your country or region.
- Users of the FTZ should note that the lack of space between adapter and grip can make the grip difficult to use.

Microphones

- **ME-1 Stereo Microphone**: Connect the ME-1 to the camera microphone jack to record stereo sound. Using an external microphone also reduces the chance of picking up equipment noise, such as the sounds produced during video recording when focus is achieved using autofocus.
- ME-W1 Wireless Microphone: A wireless Bluetooth microphone. Use the ME-W1 for off-camera recording.

Wireless Remote Controllers

- WR-R11a, WR-R10, and WR-T10 Wireless Remote Controllers
 - When a WR-R11a is connected to the ten-pin remote terminal, or when a WR-R10 is connected to the ten-pin remote terminal using a WR-A10 adapter, the camera can be controlled remotely using a WR-T10 wireless remote controller.
 - WR-R11a and WR-R10 wireless remote controllers can also be used to control radio-controlled flash units.
- WR-1 Wireless Remote Controller: WR-1 units are used with WR-R11a/ WR-R10 or WR-T10 wireless remote controllers or with other WR-1 remote controllers, with the WR-1 units functioning as either transmitters or receivers. When a WR-R11a/WR-R10 or a WR-1 configured as a receiver is connected to the camera ten-pin remote terminal, a second WR-1 configured as a transmitter can be used to take pictures and adjust camera settings remotely. Update the WR-1 firmware to the latest version (version 1.0.4 or later).
 - * When using a wireless remote controller with the WR-R10, be sure the firmware for the WR-R10 has been updated to the latest version (version 3.0 or later). For information on firmware updates, see the Nikon website for your area. Consult a Nikon-authorized service representative when updating the firmware for the WR-R10 from versions prior to version 2.0 to version 3.0 or later.


Charging Batteries

Compatible batteries can be charged using the devices below.

Battery	Battery	Charging AC		
battery	MH-33	MH-26a	adapter	
EN-EL18d	~	_	~	
EN-EL18c	~	~	~	
EN-EL18b	~	~	~	
EN-EL18a	—	~	—	
EN-EL18	—	~	—	

Mattaching and Removing the Accessory Shoe Cover


The BS-1 accessory shoe cover slides into the shoe as shown. To remove the cover, hold the camera firmly, press the cover down with a thumb and slide it in the direction shown.

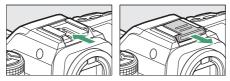


🔽 The HDMI/USB Cable Clip

To prevent accidental disconnection, attach the supplied clip to HDMI or USB cables as shown (note that the clip may not fit all cables).

- The illustrations show the USB cable. Pass HDMI cables through the other channel.
- Keep the monitor in the storage position when using the cable clip.

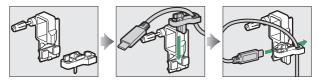

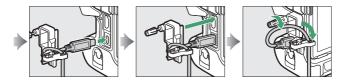



USB cable




HDMI cable and USB cable used simultaneously

The Memory Card Slot Cover


The camera features a removable memory card slot cover.

• After opening the memory card slot cover, slide the memory card slot cover release latch in the direction shown until it latches (①) and then remove the cover from the camera (②).

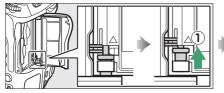





• Be careful not to slide the memory card slot cover release latch back down after removing the memory card slot cover. The cover cannot be re-attached with the latch lowered.

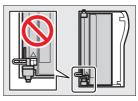

• The inner cover may move when the memory card slot cover release latch is lowered. The memory card slot cover cannot be reattached when the inner cover is out of position. Slide the memory card slot cover latch down (①) and restore the inner and outer covers to their original positions (②).

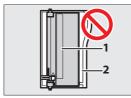

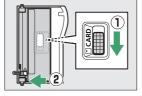


Inner cover
 Outer cover

- To re-attach the memory card slot cover, follow the steps below.
 - Insert the top hinge into the top socket on the camera body (①).




- Insert the end of the sprung hinge (3) into the hinge socket (2).



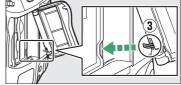


- Keeping the bottom hinge aligned with the bottom socket (④), slide the memory card slot cover release latch down until it clicks into place in its original position (⑤).

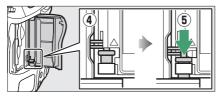

Calibrating Batteries

The MH-33 battery charger can detect whether batteries require calibration and calibrate them as necessary to ensure the accuracy of the battery level display.

Calibration status and progress are shown by lamps on the battery charger:

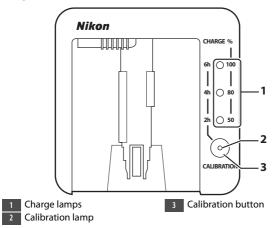

If the calibration lamp flashes when a battery is inserted, the battery needs to be calibrated.

To begin calibration, press the calibration button for about a second. The charge lamps and calibration lamp light red while calibration is in progress. The display can be read as follows:

		Approximate time needed to recalibrate battery			
		Under 2 hours	2–4 hours	4–6 hours	Over 6 hours
Charge lamps	2h	• (off)	(on)	(on)	(on)
	4h	• (off)	• (off)	(on)	\bigcirc (on)
ianips	6h	• (off)	• (off)	• (off)	\bigcirc (on)
Calibration lamp		(on)	(on)	O (on)	\bigcirc (on)

Although calibration is recommended for accurate measurement of battery charge state, calibration need not be performed when the calibration lamp flashes. Once begun, calibration can be interrupted as desired.

- If the calibration button is not pressed while the calibration lamp is flashing, normal charging will begin after about ten seconds.
- To interrupt calibration, press the calibration button again. Calibration will end and charging will begin.

When calibration is complete, the charge lamps and calibration lamp will turn off and charging will begin immediately.

Attaching a Power Connector and AC Adapter

Turn the camera off before attaching an optional power connector and AC adapter.


1 Remove the BL-7 battery chamber cover.


Lift the battery chamber cover latch, turn it to the open (\bigcirc) position (\bigcirc), and remove the BL-7 battery chamber cover ((o).



2 Connect the EH-6d AC adapter to the EP-6a power connector.


- Pass the DC cable over the power connector cable guide (①) and slide it down until it is at the bottom of the slot.
- Insert the DC plug into the DC IN connector (2).

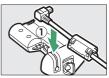

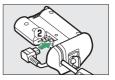


3 Insert the power connector.

Fully insert the power connector into the battery chamber as shown.

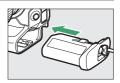

4 Latch the power connector.

- Rotate the latch to the closed position $(\ensuremath{\overline{0}})$ and fold it down as shown ((2)).

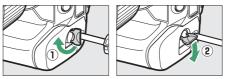

- To prevent the power connector being dislodged during operation, be sure that it is securely latched.
- The battery level is not displayed in the control panel while the camera is powered by the AC adapter and power connector.

Software

The following Nikon software can be used with the camera. For more information, visit the Nikon website for your country or region.

Computer Software

Nikon computer software is available from the Nikon Download Center. Check the version and system requirements and be sure to download the latest version.

https://downloadcenter.nikonimglib.com/

- Camera Control Pro 2 (available for purchase): Control the camera remotely from a computer to record photos and videos and save them directly to the computer hard disk.
- NX Tether: Use for tethered photography when the camera is connected to a computer. Exposure, white balance, and other camera settings can be adjusted remotely using controls in the computer display.
- NX Studio *: View and edit photos and videos shot with Nikon digital cameras. NX Studio can be used to fine-tune files in Nikon's unique NEF/ NRW (RAW) format and convert them to JPEG or TIFF (NEF/RAW processing). It supports not only NEF/NRW (RAW) pictures but also JPEG and TIFF photos shot with Nikon digital cameras for such tasks as editing tone curves and enhancing brightness and contrast.
 - * Existing users should be sure to download the latest version, as earlier versions may be unable to download pictures from the camera or open NEF (RAW) pictures.
- Wireless Transmitter Utility: The Wireless Transmitter Utility is required if the camera is to be connected to a network. Pair the camera with the computer and download pictures over a wireless or Ethernet network.

• Webcam Utility: The Webcam Utility lets you use your camera as a webcam when it is connected to the computer via USB. The camera will appear as "Webcam Utility" in web conferencing apps. Selecting "Webcam Utility" converts the camera into a webcam. For information on compatible cameras, system requirements, and using the Webcam Utility, as well as on the precautions to be observed during use, see the Webcam Utility page in the Nikon Download Center.

• Smartphone (Tablet) Apps

Smartphone (tablet) apps are available from the Apple App Store[®] and Google Play[™]. For the latest information on our apps, visit the Nikon website.

- **SnapBridge**: Download photos and videos from the camera to your smart device via a wireless connection.
- NX MobileAir (offers in-app purchases): Import pictures from a camera connected to your smart device via USB and upload them wirelessly to an FTP server.
 - * Supported features and operating systems vary by country and region.

Caring for the Camera

Long-Term Storage

When the camera will not be used for an extended period, remove the battery. Before removing the battery, confirm that the camera is off. Do not store the camera in locations that:

- are poorly ventilated or subject to humidities of over 60%,
- are next to equipment that produces strong electromagnetic fields, such as televisions or radios, or
- are exposed to temperatures above 50 °C (122 °F) or below –20 °C (–4 °F).

Cleaning

The procedure varies with the part that requires cleaning. The procedures are detailed below.

• Do not use alcohol, thinner, or other volatile chemicals.

Camera Body

Use a blower to remove dust and lint, then wipe gently with a soft, dry cloth. After using the camera at the beach or seaside, wipe off sand or salt with a cloth lightly dampened in distilled water and dry the camera thoroughly.

Important: Dust or other foreign matter inside the camera may cause product malfunction. Damage due to the presence of foreign matter inside the camera is not covered under warranty.

Lens and Viewfinder

These glass elements are easily damaged: remove dust and lint with a blower. If using an aerosol blower, keep the can vertical to prevent the discharge of liquid that could damage glass elements. To remove fingerprints and other stains, apply a small amount of lens cleaner to a soft cloth and clean with care.

The Monitor

Remove dust and lint with a blower. When removing smudges, fingerprints, and other oily stains, wipe the surface lightly with a soft cloth or chamois leather. Do not apply pressure, as this could result in damage or malfunction.

Image Sensor Cleaning

Dirt or dust entering the camera when lenses are exchanged or the body cap is removed may adhere to the surface of the image sensor and affect your photographs. The "clean image sensor" option vibrates the sensor to remove dust.

The image sensor can be cleaned at any time from the menus, or cleaning can be performed automatically when the camera is turned off. If image sensor cleaning fails to resolve the problem, contact a Nikonauthorized service representative.

Using the Menus

• For maximum effect, hold the camera in normal orientation (base down).

- Select [Clean image sensor] in the setup menu, then highlight [Start] and press
 [®] to begin cleaning.
- Camera controls cannot be used while cleaning is in progress. Do not remove or disconnect the power source.
- The setup menu will be displayed when cleaning is complete.



Cleaning the Image Sensor at Shutdown

Option		Description
©OFF	[Clean at	The image sensor is automatically cleaned during
	shutdown]	shutdown each time the camera is turned off.
[Cleaning off]		Automatic image sensor cleaning off.

1 Select [Automatic cleaning] for [Clean image sensor].

Clean image sensor Start Automatic deaning Start Automatic deaning Start S

Pressing () when [Automatic cleaning] is highlighted displays [Automatic cleaning] options.

2 Highlight an option.

Press ® to select the highlighted option.



Cautions: Image Sensor Cleaning

- Using camera controls interrupts any image sensor cleaning begun in response to the operation of the power switch.
- If image sensor cleaning is performed several times in succession, image sensor cleaning may be temporarily disabled to protect the camera's internal circuitry. Cleaning can be performed again after a short wait.

Manual Cleaning

If foreign matter cannot be removed from the image sensor using image sensor cleaning, the sensor can be cleaned manually as described below. Note, however, that the sensor is extremely delicate and easily damaged; we recommend that manual cleaning be performed only by a Nikon-authorized service representative.

• Select [Sensor shield stays open] for [Sensor shield behavior at power off] in the setup menu.

1 Turn the camera off and remove the lens.


2 Holding the camera so that light can enter, examine the image sensor for dust or lint.

If no foreign objects are present, proceed to Step 4.



3 Remove any dust and lint from the sensor with a blower.

- Do not use a blower-brush. The bristles could damage the sensor.
- Dirt that cannot be removed with a blower can only be removed by Nikonauthorized service personnel. Under no

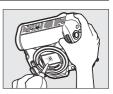

circumstances should you touch or wipe the sensor.

4 Replace the lens or supplied body cap.

🔽 Foreign Matter on the Image Sensor

Foreign matter entering the camera when lenses or body caps are removed or exchanged (or in rare circumstances lubricant or fine particles from the camera itself) may adhere to the image sensor, where it may appear in photographs taken under certain conditions. To prevent entry of foreign matter when attaching the body cap or exchanging lenses, avoid dusty environments and be sure to remove all dust and other foreign matter that may be adhering to the camera mount, lens mount, or body cap. To protect the camera when no lens is in place, be sure to replace the supplied body cap. Should you encounter foreign matter that cannot be removed using the image sensor cleaning option ($\square 858$), clean the image sensor as described in "Manual Cleaning" ($\square 860$), or have the sensor cleaned by authorized Nikon service personnel. Photographs affected by the presence of foreign matter on the sensor can be retouched using the clean image options available in some imaging applications.

Servicing the Camera and Accessories

The camera is a precision device and requires regular servicing; Nikon recommends that the camera be inspected once every one to two years, and that it be serviced once every three to five years (note that fees apply to these services).

- Frequent inspection and servicing are particularly recommended if the camera is used professionally.
- Any accessories regularly used with the camera, such as lenses or optional flash units, should be included when the camera is inspected or serviced.

Caring for the Camera and Battery: Cautions

Cautions: Using the Camera

Do Not Drop

Do not drop the camera or lens or subject them to blows. The product may malfunction if subjected to strong shocks or vibration.

Keep Dry

Keep the camera dry. Rusting of the internal mechanism caused by water inside the camera can not only be expensive to repair but can in fact cause irreparable damage.

Avoid Sudden Changes in Temperature

Taking the camera from a warm to a cold environment or *vice versa* may cause damaging condensation inside and outside the camera. Place the camera in a sealed bag or plastic case before taking it across a temperature boundary. The camera can be taken from the bag or case once it has had time to adjust to the new temperature.

• Keep Away from Strong Magnetic Fields

Static charges or the magnetic fields produced by equipment such as radio transmitters could interfere with the monitor, corrupt data stored on the memory card, or affect the product's internal circuitry.

Do Not Leave the Lens Pointed at the Sun

Do not leave the lens pointed at the sun or other strong light source for extended periods. Intense light may damage the image sensor or cause fading or "burn in". Photographs taken with the camera may exhibit a white blur effect.

Lasers and Other Bright Light Sources

Do not direct lasers or other extremely bright light sources toward the lens, as this could damage the camera's image sensor.

• Cleaning


When cleaning the camera body, use a blower to gently remove dust and lint, then wipe gently with a soft, dry cloth. After using the camera at the beach or seaside, wipe off any sand or salt using a cloth lightly dampened in fresh water and then dry the camera thoroughly. In rare instances, static electricity may cause the LCD displays to light up or go dark; this does not indicate a malfunction. The display will soon return to normal.

Cleaning the Lens and Viewfinder

These glass elements are easily damaged: remove dust and lint with a blower. If using an aerosol blower, keep the can vertical to prevent the discharge of liquid that could damage glass elements. To remove fingerprints and other stains from the lens, apply a small amount of lens cleaner to a soft cloth and wipe the lens carefully.

Do Not Touch the Image Sensor

Under no circumstances should you exert pressure on the image sensor, poke it with cleaning tools, or subject it to powerful air currents from a blower. These actions could scratch or otherwise damage the sensor.

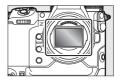


• Cleaning the Image Sensor

For information on cleaning the image sensor, see "Image Sensor Cleaning" (D858) and "Manual Cleaning" (D860).

Do Not Touch the Sensor Shield

If **[Sensor shield closes]** is selected for **[Sensor shield behavior at power off]** in the setup menu, the sensor shield in front of the image sensor will close when the camera turns off. Never pierce or apply pressure to the sensor shield. Failure to observe this precaution could scratch or otherwise damage the shield.

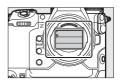

The Lens Contacts

Keep the lens contacts clean. Avoid touching them with your fingers.

Store in a Well-Ventilated Area

To prevent mold or mildew, store the camera in a dry, well-ventilated area. Do not store the camera with naphtha or camphor moth balls, next to equipment that produces strong electromagnetic fields, or where it will be exposed to extremely high temperatures, for example near a heater or in an enclosed vehicle on a hot day. Failure to observe these precautions could result in product malfunction.

Long-Term Storage

To prevent damage caused for example by leaking battery fluid, remove the battery if the product will not be used for an extended period. Store the camera in a plastic bag containing a desiccant. Do not, however, store the leather camera case in a plastic bag, as this may cause the material to deteriorate. Store the battery in a cool, dry place. Note that desiccant gradually loses its capacity to absorb moisture and should be replaced at regular intervals. To prevent mold or mildew, take the camera out of storage at least once a month, insert the battery, and release the shutter a few times.

• Turn the Product Off Before Removing or Disconnecting the Power Source

Removing or disconnecting the power source while the camera is on could damage the product. Particular care should be taken not to remove or disconnect the power source while pictures are being recorded or deleted.

Monitor/Viewfinder

- The monitors (including viewfinder) are constructed with extremely high precision; at least 99.99% of pixels are effective, with no more than 0.01% being missing or defective. Hence while these displays may contain pixels that are always lit (white, red, blue, or green) or always off (black), this is not a malfunction. Pictures recorded with the device are unaffected. Your understanding is requested.
- Pictures in the monitor may be difficult to see in a bright light.
- Do not apply pressure to the monitor. The monitor could malfunction or suffer damage. Dust or lint on the monitor can be removed with a blower. Stains can be removed by wiping the monitor lightly with a soft cloth or chamois leather. Should the monitor break, care should be taken to avoid injury from broken glass. Be careful that liquid crystal from the monitor does not touch the skin or enter the eyes or mouth.
- Should you experience any of the following symptoms while framing shots in the viewfinder, discontinue use until your condition improves:
 - nausea, eye pain, eye fatigue,
 - dizziness, headache, stiffness in your neck or shoulders,
 - queasiness or loss of hand-eye coordination, or
 - motion sickness.
- The display may rapidly flicker on and off during burst photography. Watching the flickering display could cause you to feel unwell. Discontinue use until your condition improves.

Bright Lights and Back-Lit Subjects

Noise in the form of lines may in rare cases appear in pictures that include bright lights or back-lit subjects.

Cautions: Using Batteries

Precautions for Use

- If improperly handled, batteries may rupture or leak, causing the product to corrode. Observe the following precautions when handling batteries:
 - Turn the product off before replacing the battery.
 - Batteries may be hot after extended use.
 - Keep the battery terminals clean.
 - Use only batteries approved for use in this equipment.
 - Do not short or disassemble batteries or expose them to flame or excessive heat.
 - Replace the terminal cover when the battery is not inserted in the camera or charger.
- If the battery is hot, for example immediately after use, wait for it to cool before charging. Attempting to charge the battery while its internal temperature is elevated will impair battery performance, and the battery may not charge or charge only partially.
- If the battery will not be used for some time, remove it from the camera and store it in a cool, dry location with an ambient temperature of 15 °C to 25 °C (59 °F to 77 °F). Avoid hot or extremely cold locations.
- Batteries should be charged within six months of use. During long periods of disuse, charge the battery once every six months before returning it to a cool location for storage.
- Remove the battery from the camera or charger when not in use. The camera and charger draw minute amounts of charge even when off and could draw the battery down to the point that it will no longer function.

- Do not use the battery at ambient temperatures below -10 °C (14 °F) or above 40 °C (104 °F). Failure to observe this precaution could damage the battery or impair its performance. Charge the battery indoors at ambient temperatures of 5 °C–35 °C (41 °F–95 °F). The battery will not charge if its temperature is below 0 °C (32 °F) or above 60 °C (140 °F).
- Capacity may be reduced and charging times increase at battery temperatures from 0 °C (32 °F) to 15 °C (59 °F) and from 45 °C (113 °F) to 60 °C (140 °F).
- Batteries in general exhibit a drop in capacity at low ambient temperatures. Even fresh batteries charged at temperatures under about 5 °C (41 °F) may show a temporary increase from "0" to "1" in the setup menu [Battery info] age display, but the display will return to normal once the battery has been recharged at a temperature of about 20 °C (68 °F) or higher.
- Battery capacity drops at low temperatures. The change in capacity with temperature is reflected in the camera battery-level display. As a result, the battery display may show a drop in capacity as the temperature drops, even if the battery is fully charged.
- Batteries may be hot after use. Observe due caution when removing batteries from the camera.

• Charge Batteries Before Use

Charge the battery before use. The supplied battery is not fully charged at shipment.

Ready Spare Batteries

Before taking photographs, ready a spare battery and keep it fully charged. Depending on your location, it may be difficult to purchase replacement batteries on short notice.

Have Fully-Charged Spare Batteries Ready on Cold Days

Partially-charged batteries may not function on cold days. In cold weather, charge one battery before use and keep another in a warm place, ready to be exchanged as necessary. Once warmed, cold batteries may recover some of their charge.

Battery Level

- Turning the camera on or off repeatedly when the battery is fully discharged will shorten battery life. Batteries that have been fully discharged must be charged before use.
- A marked drop in the time a fully charged battery retains its charge when used at room temperature indicates that it requires replacement. Purchase a new rechargeable battery.

Do Not Attempt to Charge Fully-Charged Batteries

Continuing to charge the battery after it is fully charged can impair battery performance.

Recycling Used Batteries

Recycle rechargeable batteries in accord with local regulations, being sure to first insulate the terminals with tape.

Cautions: Using the Charger

- Do not move the charger or touch the battery during charging; failure to
 observe this precaution could in very rare instances result in the charger
 showing that charging is complete when the battery is only partially
 charged. Remove and reinsert the battery to begin charging again.
- Do not short the charger terminals. Failure to observe this precaution could result in overheating and damage to the charger.
- Unplug the charger or disconnect the charging AC adapter when the charger is not in use.
- Use the MH-33 with compatible batteries only.
- Do not use chargers with damage that leaves the interior exposed or that produce unusual sounds when used.
- The symbols on this product represent the following: ---- DC

Cautions: Using the Charging AC Adapter

- Latch the battery chamber cover before charging the battery via the charging AC adapter.
- Do not move the camera or touch the battery during charging; failure to
 observe this precaution could in very rare instances result in the camera
 showing that charging is complete when the battery is only partially
 charged. Disconnect and reconnect the adapter to begin charging again.
- Do not short the adapter terminals. Failure to observe this precaution could result in overheating and damage to the charger.
- Unplug the adapter when it is not in use.
- Do not use adapters with damage that leaves the interior exposed or that produce unusual sounds when used.
- The symbols on this product represent the following:
 AC, --- DC, C Class II equipment (the construction of the product is double-insulated)

Specifications

Nikon Z 9 Digital Camera

Туре			
Туре	Digital camera with support for interchangeable lenses		
Lens mount	Nikon Z mount		
Lens			
Compatible lenses	 Z mount NIKKOR lenses F mount NIKKOR lenses (mount adapter required; restrictions may apply) 		
Effective pixels	Effective pixels		
Effective pixels	45.7 million		
Image sensor			
Туре	35.9 × 23.9 mm CMOS sensor (Nikon FX format)		
Total pixels	52.37 million		
Dust- reduction system	Image sensor cleaning, Image Dust Off reference data (requires NX Studio)		

Storage	
	• [FX (36 × 24)] selected for image area:
	- 8256 × 5504 (Large: 45.4 M)
	- 6192 × 4128 (Medium: 25.6 M)
	- 4128 × 2752 (Small: 11.4 M)
	 [DX (24 × 16)] selected for image area:
	- 5392 × 3592 (Large: 19.4 M)
	- 4032 × 2688 (Medium: 10.8 M)
lmage size	- 2688 × 1792 (Small: 4.8 M)
(pixels)	• [1:1 (24 × 24)] selected for image area:
	- 5504 × 5504 (Large: 30.3 M)
	- 4128 × 4128 (Medium: 17.0 M)
	- 2752 × 2752 (Small: 7.6 M)
	• [16:9 (36 × 20)] selected for image area:
	- 8256 × 4640 (Large: 38.3 M)
	- 6192 × 3480 (Medium: 21.5 M)
	- 4128 × 2320 (Small: 9.6 M)
	• NEF (RAW): 14 bit; choose from lossless compression,
	high efficiency \star , and high efficiency options
File format	• JPEG: JPEG-Baseline compliant with fine (approx. 1:4),
(image quality)	normal (approx. 1:8), or basic (approx. 1:16)
	compression; size-priority and optimal-quality
	compression available
	• NEF (RAW)+JPEG: Single photograph recorded in both
	NEF (RAW) and JPEG formats

C	
Storage	
Picture Control System	Auto, Standard, Neutral, Vivid, Monochrome, Portrait, Landscape, Flat, Creative Picture Controls (Dream, Morning, Pop, Sunday, Somber, Dramatic, Silence, Bleached, Melancholic, Pure, Denim, Toy, Sepia, Blue, Red, Pink, Charcoal, Graphite, Binary, Carbon); selected Picture Control can be modified; storage for custom Picture Controls
Media	CFexpress (Type B) and XQD memory cards
Dual card slots	The card in Slot 2 can be used for overflow or backup storage, for separate storage of NEF (RAW) and JPEG pictures, or for storage of duplicate JPEG pictures at different sizes and image qualities; pictures can be copied between cards.
File system	DCF 2.0, Exif 2.32
Viewfinder	
Viewfinder	1.27-cm/0.5-in. approx. 3690k-dot (Quad VGA) OLED electronic viewfinder with color balance and auto and 16-level manual brightness controls
Frame coverage	Approx. 100% horizontal and 100% vertical
Magnification	Approx. $0.8 \times (50 \text{ mm lens at infinity}, -1.0 \text{ m}^{-1})$
Eyepoint	23 mm (–1.0 m ⁻¹ ; from rearmost surface of viewfinder eyepiece lens)
Diopter adjustment	-4 - +3 m ⁻¹
Eye sensor	Automatically switches between monitor and viewfinder displays
Monitor	
Monitor	8-cm/3.2-in., approx. 2100k-dot vertically and horizontally tilting TFT touch-sensitive LCD with 170° viewing angle, approximately 100% frame coverage, and color balance and 11-level manual brightness controls

Shutter	Shutter	
Туре	Electronic shutter with shutter sound and sensor shield	
Speed	$^{1}\!/_{32000}-30$ s (choose from step sizes of $^{1}\!/_{3},$ $^{1}\!/_{2},$ and 1 EV, extendable to 900 s in mode M), bulb, time	
Flash sync speed	Flash synchronizes with shutter at speeds of $1/_{250}$ or $1/_{200}$ s or slower (but note that the guide number drops at speeds of $1/_{200}$ to $1/_{250}$ s); sync speeds as fast as $1/_{8000}$ s are supported with auto FP high-speed sync	
Release		
Release mode	Single frame, continuous low-speed, continuous high- speed, high-speed frame capture, self-timer	
Approximate frame advance rate	 Continuous low-speed: Approx. 1–10 fps Continuous high-speed: Approx. 10–20 fps High-speed frame capture (C30): Approx. 30 fps High-speed frame capture (C120): Approx. 120 fps Maximum frame advance rate as measured by in-house tests. 	
Self-timer	2 s, 5 s, 10 s, 20 s; 1–9 exposures at intervals of 0.5, 1, 2, or 3 s	
Exposure		
Metering system	TTL metering using camera image sensor	
Metering mode	 Matrix metering Center-weighted metering: Weight of 75% given to 12 or 8 mm circle in center of frame or weighting can be based on average of entire frame Spot metering: Meters circle with a diameter of approximately 4 mm centered on selected focus point Highlight-weighted metering 	

Exposure	
Range	-3-+17 EV * Figures are for ISO 100 and f/2.0 lens at 20 °C/68 °F
Mode	P: programmed auto with flexible program, S: shutter- priority auto, A: aperture-priority auto, M: manual
Exposure compensation	$-5-+5$ EV (choose from step sizes of $1/_3$ and $1/_2$ EV)
Exposure lock	Luminosity locked at detected value
ISO sensitivity (Recommended Exposure Index)	ISO 64–25600 (choose from step sizes of 1 / ₃ and 1 EV); can also be set to approx. 0.3, 0.7, or 1 EV (ISO 32 equivalent) below ISO 64 or to approx. 0.3, 0.7, 1, or 2 EV (ISO 102400 equivalent) above ISO 25600; auto ISO sensitivity control available
Active D-Lighting	Auto, Extra high 2, Extra high 1, High, Normal, Low, and Off
Multiple exposure	Add, average, lighten, darken
Other options	HDR overlay, photo mode flicker reduction

Autofocus	
Туре	Hybrid phase-detection/contrast AF with AF assist
Detection range	 -6.5-+19 EV (-8.5-+19 EV with starlight view) * Measured in photo mode at ISO 100 and a temperature of 20 °C/68 °F using single-servo AF (AF-S) and a lens with a maximum aperture of f/1.2
Lens servo	 Autofocus (AF): Single-servo AF (AF-S); continuous- servo AF (AF-C); full-time AF (AF-F; available only in video mode); predictive focus tracking Manual focus (M): Electronic rangefinder can be used
Focus points	 493 focus points * Number of focus points available in photo mode with single-point AF selected for AF-area mode and FX selected for image area

Autofocus	
AF-area mode	Pinpoint (available in photo mode only), single-point, dynamic-area (S, M, and L; available in photo mode only), wide-area (S and L), and auto-area AF; 3D-tracking (available in photo mode only); subject-tracking AF (available in video mode only)
Focus lock	Focus can be locked by pressing shutter-release button halfway (single-servo AF/ AF-S) or by pressing the center of the sub-selector

Vibration reduc	Vibration reduction (VR)	
Camera on- board VR	5-axis image sensor shift	
Lens on-board VR	Lens shift (available with VR lenses)	
Flash		
Flash control	TTL: i-TTL flash control; i-TTL balanced fill-flash is used with matrix, center-weighted, and highlight-weighted metering, standard i-TTL fill-flash with spot metering	
Flash mode	Front-curtain sync, slow sync, rear-curtain sync, red-eye reduction, red-eye reduction with slow sync, off	
Flash compensation	$-3-+1$ EV (choose from step sizes of $1/_3$ and $1/_2$ EV)	
Flash-ready indicator	Lights when optional flash unit is fully charged; flashes as underexposure warning after flash is fired at full output	
Accessory shoe	ISO 518 hot-shoe with sync and data contacts and safety lock	

Flash		
Nikon Creative Lighting System (CLS)	i-TTL flash control, radio-controlled Advanced Wireless Lighting, optical Advanced Wireless Lighting, modeling illumination, FV lock, Color Information Communication, auto FP high-speed sync, unified flash control	
Sync terminal	ISO 519 sync terminal with locking thread	
White balance		
White balance	Auto (3 types), natural light auto, direct sunlight, cloudy, shade, incandescent, fluorescent (3 types), flash, choose color temperature (2500–10,000 K), preset manual (up to 6 values can be stored), all with fine-tuning	
Bracketing		
Bracketing	Exposure and/or flash, white balance, and ADL	
Video		
Metering system	TTL metering using camera image sensor	
Metering mode	Matrix, center-weighted, or highlight-weighted	
Frame size (pixels) and frame rate	 7680 × 4320 (8K UHD): 30p (progressive)/25p/24p 3840 × 2160 (4K UHD): 120p/100p/60p/50p/30p/25p/24p 1920 × 1080: 120p/100p/60p/50p/30p/25p/24p Actual frame rates for 120p, 100p, 60p, 50p, 30p, 25p, and 24p are 119.88, 100, 59.94, 50, 29.97, 25, and 23.976 fps respectively 	

Video	
File format	MOV, MP4
Video compression	Apple ProRes 422 HQ (10 bit), H.265/HEVC (8 bit/10 bit), H.264/AVC (8 bit)
Audio recording format	Linear PCM (for videos recorded in MOV format) or AAC (for videos recorded in MP4 format)
Audio recording device	Built-in stereo or external microphone with attenuator option; sensitivity adjustable
Exposure compensation	$-3 - +3$ EV (choose from step sizes of $1/_3$ and $1/_2$ EV)
ISO sensitivity (Recommended Exposure Index)	 Mode M: Manual selection (ISO 64–25600; choose from step sizes of ¹/₃ and 1 EV); with additional options available equivalent to approximately 0.3, 0.7, 1, or 2 EV (ISO 102400 equivalent) above ISO 25600; auto ISO sensitivity control (ISO 64–Hi 2.0) available with selectable upper limit Modes P, S, A: Auto ISO sensitivity control (ISO 64–Hi 2.0) with selectable upper limit
Active D-Lighting	Extra high, High, Normal, Low, and Off
Other options	Time-lapse video recording, electronic vibration reduction, time codes, N-Log and HDR (HLG) video
Playback	
Playback	Full-frame and thumbnail (up to 4, 9, or 72 pictures) playback with playback zoom, playback zoom cropping, video playback, histogram display, highlights, photo information, location data display, auto picture rotation, picture rating, voice memo input and playback, and IPTC information embedding and display

Interface	
USB	Type C USB connector (SuperSpeed USB); connection to built-in USB port is recommended
HDMI output	Type A HDMI connector
Audio input	Stereo mini-pin jack (3.5 mm diameter; plug-in power supported)
Audio output	Stereo mini-pin jack (3.5 mm diameter)
Ten-pin remote terminal	Built-in (can be used with MC-30A/MC-36A remote cords and other optional accessories)
Ethernet	 RJ-45 connector Standards: IEEE 802.3ab (1000BASE-T), IEEE 802.3u (100BASE-TX), IEEE 802.3 (10BASE-T) Data rates *: 1000/100/10 Mbps with auto detect Port: 1000BASE-T/100BASE-TX/10BASE-T (AUTO-MDIX) * Maximum logical data rates according to IEEE standard; actual rates may differ.

Wi-Fi/Bluetoot	Wi-Fi/Bluetooth	
Wi-Fi	 Standards: IEEE 802.11b/g/n (Africa, Asia, and Oceania) IEEE 802.11b/g/n/a/ac (Europe, U.S.A., Canada, Mexico) IEEE 802.11b/g/n/a (other countries in the Americas) Operating frequency: 2412–2462 MHz (channel 11; Africa, Asia, and Oceania) 2412–2462 MHz (channel 11) and 5180–5825 MHz (U.S.A., Canada, Mexico) 2412–2462 MHz (channel 11) and 5180–5805 MHz (other countries in the Americas) 2412–2462 MHz (channel 11) and 5180–5805 MHz (Georgia) 2412–2462 MHz (channel 11) and 5745–5805 MHz (Georgia) 2412–2462 MHz (channel 11) and 5745–5805 MHz (other European countries) Maximum output power (EIRP): 2.4 GHz band: 8.4 dBm 5 GHz band: 9.0 dBm (other countries) Authentication: Open system, WPA2-PSK, WPA3-SAE 	
Bluetooth	 Communication protocols: Bluetooth Specification version 5.0 Operating frequency: Bluetooth: 2402–2480 MHz Bluetooth Low Energy: 2402–2480 MHz Maximum output power (EIRP): Bluetooth: 2.9 dBm Bluetooth Low Energy: 1.4 dBm 	
Range (line of sight)	Approximately 10 m (32 ft) * * Without interference. Range may vary with signal strength and presence or absence of obstacles.	

Location Data					
Supported GNS systems	GPS (USA), GLONASS (Russia), QZSS (Japan)				
Data acquired	Latitude, longitude, altitude, UTC (Universal Coordinated Time)				
Clock synchronization	Camera clock can be set to time acquired via GNSS				
Track logs	NMEA-compliant				
Log interval	15 s, 30 s, 1 min., 2 min., 5 min.				
Maximum log recording time	6, 12, or 24 hours				
Log deletion	Supported				
Power source					
Battery	One EN-EL18d rechargeable Li-ion battery * * EN-EL18c, EN-EL18b, EN-EL18a, and EN-EL18 batteries can also be used. Note, however, that fewer pictures can be taken on a single charge than with the EN-EL18d. The EH-7P charging AC adapter can be used to charge EN-EL18d, EN-EL18c, and EN-EL18b batteries only.				
Charging AC adapter	EH-7P charging AC adapter				
AC adapter	EH-6d; requires EP-6a power connector (available separately)				
Tripod socket					
Tripod socket	0.635 cm (¹ / ₄ in., ISO 1222)				

Dimensions/weight				
Dimensions (W × H × D)	Approx. 149 × 149.5 × 90.5 mm/5.9 × 5.9 × 3.6 in.			
Weight	Approx. 1340 g (2 lb. 15.3 oz.) with battery and memory card but without body cap and accessory shoe cover; approx. 1160 g/2 lb. 9 oz. (camera body only)			

Operating environment

operating environment					
Temperature -10 °C-40 °C (+14 °F-104 °F)					
Humidity	85% or less (no condensation)				

- Unless otherwise stated, all measurements are performed in conformity with Camera and Imaging Products Association (CIPA) standards or guidelines.
- All figures are for a camera with a fully-charged battery.
- The sample images displayed on the camera and the images and illustrations in this document are for expository purposes only.
- Nikon reserves the right to change the appearance and specifications of the hardware and software described in this document at any time and without prior notice. Nikon will not be held liable for damages that may result from any mistakes that this document may contain.

II MH-33 Battery Charger

DC 5 V/9 V, 3 A/3 A
DC 12.6 V, 1.6 A
EN-EL18d, EN-EL18c, and EN-EL18b rechargeable Li-ion batteries
 Approx. 4 hours (approx. 3 hours with EN-EL18c/ EN-EL18b batteries) * Time required to charge battery at an ambient temperature of 25 °C (77 °F) when no charge remains
0 °C–40 °C (+32 °F–104 °F)
Approx. 87 \times 25 \times 86.5 mm /3.5 \times 1 \times 3.5 in., excluding projections
Approx. 101 g/3.6 oz

The symbols on this product represent the following: $\xrightarrow{\text{end}}$ DC

II EH-7P Charging AC Adapter

Rated input	AC 100–240 V, 50/60 Hz, MAX 0.5 A
Rated output	DC 5.0 V/3.0 A, 15.0 W
Supported batteries	EN-EL18d, EN-EL18c, and EN-EL18b rechargeable Li-ion batteries
Operating temperature	0 °C–40 °C (+32 °F–104 °F)
Average active efficiency	81.80%
Efficiency at low load (10%)	72.50%
No-load power consumption	0.075 W
Dimensions (W × H × D)	Approx. 65.5 \times 26.5 \times 58.5 mm/2.6 \times 1.1 \times 2.4 in., excluding plug adapter
Weight	Approx. 135 g (4.8 oz), excluding plug adapter

The EH-7P comes with a plug adapter attached in countries or regions where required; the shape of the plug adapter varies with the country of sale. Do not attempt to remove the plug adapter, as this could damage the product. The symbols on this product represent the following:

 \sim AC, == DC, \Box Class II equipment (the construction of the product is double-insulated)

Notice for Customers in Europe Distributor (Importer for EU Countries) Nikon Europe B.V.	
Tripolis 100, Burgerweeshuispad 101, 1076 ER Amsterdam, The	
Netherlands	
+31-20-7099-000	
Commercial registration number: 34036589	
Importer UK: Nikon UK, Branch of Nikon Europe BV' with Chamber of	
Commerce: BR022801	
The Crescent, Surbiton, Surrey, United Kingdom, KT6 4BN	

II EN-EL18d Rechargeable Li-ion Battery

Туре	Rechargeable lithium-ion battery					
Rated capacity	10.8 V, 3300 mAh					
Operating temperature	–10 °C–40 °C (+14 °F–104 °F) with Z 9					
Dimensions $(W \times H \times D)$	Approx. 56.5 × 27 × 82.5 mm (2.3 × 1.1 × 3.3 in.)					
Weight	Approx. 175 g (6.2 oz), excluding terminal cover					

Caution: Disposing of Data Storage Devices

Please note that deleting pictures or formatting memory cards or other data storage devices does not completely erase the original image data. Deleted files can sometimes be recovered from discarded storage devices using commercially available software, potentially resulting in the malicious use of personal image data. Ensuring the privacy of such data is the user's responsibility.

Before discarding a data storage device or transferring ownership to another person, erase all data using commercial deletion software, or format the device and then completely refill it with pictures containing no private information (for example, pictures of empty sky). Care should be taken to avoid injury when physically destroying data storage devices.

Before discarding the camera or transferring ownership to another person, you should also use the [**Reset all settings**] item in the camera setup menu to delete network settings and other personal information.

Supported Standards

- **DCF Version 2.0**: The Design Rule for Camera File System (DCF) is a standard widely used in the digital camera industry to ensure compatibility among different makes of camera.
- Exif Version 2.32: The camera supports Exif (Exchangeable Image File Format for Digital Still Cameras) version 2.32, a standard introduced with the goal of improving the interoperability of printers and digital cameras, making it easier to produce high-quality prints. Information stored with photographs is used for optimal color reproduction when the images are output on Exif-compliant printers. See the printer documentation for details.
- **HDMI**: High-Definition Multimedia Interface is a standard for multimedia interfaces used in consumer electronics and AV devices. This standard ensures that audiovisual data and control signals can be transmitted to HDMI-compliant devices via a single cable connection.

Approved Memory Cards

- The camera can be used with CFexpress (Type B) and XQD memory cards.
- CFexpress or XQD cards with a maximum data transfer rate of at least 250 MB/s are recommended for high-speed frame capture.
- CFexpress or XQD cards with a maximum data transfer rate of at least 45 MB/s (300×) are recommended for video recording and playback. CFexpress or XQD cards with a maximum data transfer rate of at least 250 MB/s are recommended for recording and playback of videos with a high frame size or rate. Slower speeds may result in recording or playback being interrupted.
- When choosing cards for use in card readers, be sure they are compatible with the device.
- Contact the manufacturer for information on features, operation, and limitations on use.

Memory Card Capacity

The following table shows buffer capacity and the approximate number of pictures that can be stored on a 325 GB¹ card at different image qualities (\Box 105) and sizes (\Box 108) when [**FX (36 × 24)**] is selected for [**Choose image area**]. Actual capacity varies with shooting conditions and the type of card.

Image quality	lmage size	File size	Number of exposures remaining ²	Buffer capacity ^{2, 3}
NEF (RAW), lossless compression	_	Approx. 55.1 MB	3600 frames	79 frames
NEF (RAW), high efficiency★	_	Approx. 33.0 MB	8500 frames	685 frames
NEF (RAW), high efficiency	_	Approx. 22.0 MB	12,100 frames	Over 1000 frames
	Large	Approx. 24.1 MB	10,400 frames	
JPEG fine ⁴	Medium	Approx. 14.3 MB	17,700 frames	Over 1000 frames
	Small	Approx. 7.0 MB	35,400 frames	-
	Large	Approx. 12.2 MB	20,600 frames	
JPEG normal ⁴	Medium	Approx. 7.2 MB	34,400 frames	Over 1000 frames
	Small	Approx. 3.6 MB	68,800 frames	

Image quality	lmage size	File size	Number of exposures remaining ²	Buffer capacity ^{2, 3}
	Large	Approx. 5.3 MB	39,900 frames	Over 1000 frames
JPEG basic ⁴	Medium	Approx. 3.4 MB	65,200 frames	
	Small	Approx. 1.9 MB	123,000 frames	

- 1 Figures are for a ProGrade Digital COBALT 1700R 325GB memory card (as of September 2021) with a NIKKOR Z 50mm f/1.8S lens mounted on the camera.
- 2 Number of pictures that can be saved to memory card or stored in memory buffer varies with scene recorded.
- 3 Maximum number of exposures that can be stored in memory buffer at ISO 100. May drop in some situations, including when:
 - an optimal-compression ([★]) JPEG option is selected for [Image quality] or
 - [ON] is selected for [Auto distortion control].
- 4 Figures assume a size-priority option (an option not marked with [★]) is selected for [Image quality]. Selecting an optimal-compression ([★]) option increases file size; the number of images and buffer capacity drop accordingly.

Battery Endurance

The video footage or number of shots that can be recorded with a fullycharged EN-EL18d rechargeable Li-ion battery ¹ is given below ². Actual endurance varies with such factors as the condition of the battery, the interval between shots, and the options selected in the camera menus.

Photo Mode (Single Frame): Number of Shots ³

- [Viewfinder only] selected for monitor mode with:
 - [ON] selected for [Energy saving (photo mode)] in the setup menu: Approx. 740 shots
 - [OFF] selected for [Energy saving (photo mode)] in the setup menu: Approx. 700 shots
- [Monitor only] selected for monitor mode with:
 - [ON] selected for [Energy saving (photo mode)] in the setup menu: Approx. 770 shots
 - [OFF] selected for [Energy saving (photo mode)] in the setup menu: Approx. 740 shots

Photo Mode (Burst Photography): Number of Shots ⁴

Approx. 5310 shots

Video Mode: Length of Footage ⁵

- [Viewfinder only] selected for monitor mode: Approx. 170 minutes
- [Monitor only] selected for monitor mode: Approx. 170 minutes

Actions such as the following can reduce battery endurance:

- · keeping the shutter-release button pressed halfway,
- repeated autofocus operations,
- taking NEF (RAW) photographs,
- slow shutter speeds,
- using camera Wi-Fi (wireless LAN) and Bluetooth features,
- using the built-in GNSS receiver,
- using the camera with optional accessories connected,
- repeatedly zooming in and out, and
- taking pictures at low ambient temperatures.

To ensure that you get the most from rechargeable Nikon EN-EL18d batteries:

- Keep the battery contacts clean. Soiled contacts can reduce battery performance.
- Use batteries immediately after charging. Batteries will lose their charge if left unused.
- 1 EN-EL18c, EN-EL18b, EN-EL18a, and EN-EL18 batteries can also be used. Note, however, that fewer pictures can be taken on a single charge than with the EN-EL18d.
- 2 Measured at 23 °C/73.4 °F (±2 °C/3.6 °F) with a SONY CEB-G128 memory card.
- 3 Camera and Imaging Products Association (CIPA) standard. One photograph taken at default settings once every 30 s. Measured with a NIKKOR Z 24–70mm f/4 S lens.
- 4 In-house measurements. Image quality set to JPEG normal, image size to "Large", shutter speed to 1/250 s, shutter-release button pressed halfway for 3 s and focus cycled from infinity to minimum range three times before a burst of six shots, after which the viewfinder is turned on for 5 s and then turned off and the standby timer allowed to expire. This process is then repeated. Measured with a NIKKOR Z 70–200mm f/2.8 VR S lens. [Viewfinder only] was selected for monitor mode.
- 5 Actual battery endurance as measured under conditions specified by CIPA. Measured with a NIKKOR Z 24–70mm f/4 S lens. Measurement performed at default settings.
 - Each shot can be up to 125 minutes in length.
 - If camera temperature rises, recording may end before maximum length or size is reached.

Trademarks and Licenses

- CFexpress is a trademark of the CompactFlash Association in the United States and other countries.
- NVM Express is a trademark of NVM Express Inc. in the United States and other countries.
- XQD is a trademark of Sony Corporation.
- Windows is either a registered trademark or a trademark of Microsoft Corporation in the United States and/or other countries.
- Apple[®], App Store[®], the Apple logos, iPhone[®], iPad[®], Mac, and macOS are trademarks of Apple Inc. registered in the U.S. and/or other countries.
- Android, Google Play and the Google Play logo are trademarks of Google LLC. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License.
- IOS is a trademark or registered trademark of Cisco Systems, Inc., in the United States and/or other countries and is used under license.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.

HOMI

- The Bluetooth[®] word mark and logo are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Nikon is under license.
- Wi-Fi and the Wi-Fi logo are trademarks or registered trademarks of the Wi-Fi Alliance.
- Powered by intoPIX technology.



- All other trade names mentioned in this document or the other documentation provided with your Nikon product are trademarks or registered trademarks of their respective holders.
- Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple products identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with an Apple product may affect wireless performance.
- This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit.

FreeType License (FreeType2)

Portions of this software are copyright © 2012 The FreeType Project (<u>https://www.freetype.org</u>). All rights reserved.

MIT License (HarfBuzz)

Portions of this software are copyright © 2018 The HarfBuzz Project (https://www.freedesktop.org/wiki/Software/HarfBuzz). All rights reserved.

Unicode[®] Character Database License (Unicode[®] Character Database)

The software for this product uses the Unicode[®] Character Database License open-source software. The terms of the software license are as follows: COPYRIGHT AND PERMISSION NOTICE

Copyright © 1991–2020 Unicode, Inc. All rights reserved.

Distributed under the Terms of Use in

https://www.unicode.org/copyright.html.

Permission is hereby granted, free of charge, to any person obtaining a copy of the Unicode data files and any associated documentation (the "Data Files") or Unicode software and any associated documentation (the "Software") to deal in the Data Files or Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, and/or sell copies of the Data Files or Software, and to permit persons to whom the Data Files or Software are furnished to do so, provided that either

- (i) this copyright and permission notice appear with all copies of the Data Files or Software, or
- (ii) this copyright and permission notice appear in associated Documentation.

THE DATA FILES AND SOFTWARE ARE PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR HOLDERS INCLUDED IN THIS NOTICE BE LIABLE FOR ANY CLAIM, OR ANY SPECIAL INDIRECT OR CONSEQUENTIAL DAMAGES, OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE DATA FILES OR SOFTWARE.

Except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in these Data Files or Software without prior written authorization of the copyright holder.

AVC Patent Portfolio License

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE https://www.mpegla.com

BSD License (NVM Express Driver)

The license for the open-source software included in the camera's NVM Express driver is as follows: https://imaging.nikon.com/support/pdf/LicenseNVMe.pdf

V Other Open-Source Software

Additional open-source licenses can be found at the URL below: https://imaging.nikon.com/oss/en/index.htm

Cautions: Location Data (GPS/ GLONASS)

Location Data and Track Logs

- If [ON] is selected for [Location data (built-in)] > [Record location data] in the setup menu or log tracking is in progress, the camera will continue to acquire log and/or location even while off.
- Personal information may be inferred from the location data stored in track logs or embedded in photos and videos. Exercise caution when sharing photos, videos, or track logs or when posting them to the Internet or other locations where they can be viewed by third parties. Be sure to also read "Caution: Disposing of Data Storage Devices" (©885).

Navigation

This product is a camera. It is not intended for use as a navigation or surveying device.

• The location reported by the camera is an approximation only. It is not to be used for surveying or for navigation when travelling by air or car, on foot, or by other means.

Overseas Use

- Before travelling, check with your travel agent or the embassy or tourism board of the countries you will be visiting for information on restrictions that may apply to the use of cameras that support the recording of location data. China, for example, prohibits unauthorized recording of location data. Select [**OFF**] for [**Record location data**].
- As of October, 2021, the location data function may not perform as expected in China and in the vicinity of the Chinese border.

Notices

Notices for Customers in the U.S.A.

The Battery Charger IMPORTANT SAFETY INSTRUCTIONS—SAVE THESE INSTRUCTIONS DANGER—TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS

Federal Communications Commission (FCC) Radio Frequency Interference Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTIONS

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device



that are not expressly approved by Nikon Corporation may void the user's authority to operate the equipment.

Interface Cables

Use the interface cables sold or provided by Nikon for your equipment. Using other interface cables may exceed the limits of Class B Part 15 of the FCC rules.

Nikon Inc., 1300 Walt Whitman Road, Melville, New York 11747-3064, U.S.A.Tel.: 631-547-4200

• Notice for Customers in Canada

CAN ICES-3 B / NMB-3 B

Notices for Customers in Europe

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

This symbol indicates that electrical and electronic equipment is to be collected separately.

The following apply only to users in European countries:

- This product is designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- Separate collection and recycling helps conserve natural resources and prevent negative consequences for human health and the environment that might result from incorrect disposal.
- For more information, contact the retailer or the local authorities in charge of waste management.

This symbol on the battery indicates that the battery is to be collected separately.

The following apply only to users in European countries:

- All batteries, whether marked with this symbol or not, are designated for separate collection at an appropriate collection point. Do not dispose of as household waste.
- For more information, contact the retailer or the local authorities in charge of waste management.





Bluetooth and Wi-Fi (Wireless LAN)

This product is controlled by the United States Export Administration Regulations (EAR). The permission of the United States government is not required for export to countries other than the following, which as of this writing are subject to embargo or special controls: Cuba, Iran, North Korea, Sudan, and Syria (list subject to change).

The use of wireless devices may be prohibited in some countries or regions. Contact a Nikon-authorized service representative before using the wireless features of this product outside the country of purchase. The Bluetooth transmitter in this device operates in the 2.4 GHz band.

Notice for Customers in the U.S.A. and Canada

This device complies with part 15 of FCC Rules and Innovation, Science and Economic Development Canada's licence-exempt RSSs. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Nikon Corporation may void the user's authority to operate the equipment.

Compliance with FCC requirement 15.407(c)

Data transmission is always initiated by software, which is the passed down through the MAC, through the digital and analog baseband, and finally to the RF chip. Several special packets are initiated by the MAC. These are the only ways the digital baseband portion will turn on the RF transmitter, which it then turns off at the end of the packet. Therefore, the transmitter will be on only while one of the aforementioned packets is being transmitted. In other words, this device automatically discontinue transmission in case of either absence of information to transmit or operational failure.

Frequency Tolerance: ±20 ppm

FCC Radio Frequency Interference Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Co-location

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Nikon Inc., 1300 Walt Whitman Road, Melville, New York 11747-3064, U.S.A. Tel.: 631-547-4200

FCC/ISED RF Exposure Statement

The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power Wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure of low-level RF that does not produce heating effects causes no known adverse health effects. Many studies of low-level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research. This product has been tested and found to comply with FCC/ISED radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the ISED radio frequency (RF) Exposure rules. Please refer to the SAR test report that was uploaded to FCC website.

Compliance with RSS-247 Issue 2 §6.4

Data transmission is always initiated by software, which is the passed down through the MAC, through the digital and analog baseband, and finally to the RF chip. Several special packets are initiated by the MAC. These are the only ways the digital baseband portion will turn on the RF transmitter, which it then turns off at the end of the packet. Therefore, the transmitter will be on only while one of the aforementioned packets is being transmitted. In other words, this device automatically discontinue transmission in case of either absence of information to transmit or operational failure.

Notice for Customers in Canada

For indoor use only (5150-5350MHz).

• Notice for Customers in Europe and in Countries Complying with the Radio Equipment Directive

CE

Hereby, Nikon Corporation declares that the radio equipment type Z 9 is in compliance with Directive 2014/53/EU.

The full texts of the EU declarations of conformity are available at the following internet addresses:

https://imaging.nikon.com/support/pdf/DoC_N2014.pdf

Wi-Fi

- Operating frequency:
 - 2412-2462 MHz (channel 11; Africa, Asia, and Oceania)
 - 2412–2462 MHz (channel 11) and 5180–5825 MHz (U.S.A., Canada, Mexico)
 - 2412–2462 MHz (channel 11) and 5180–5805 MHz (other countries in the Americas)
 - 2412-2462 MHz (channel 11) and 5745-5805 MHz (Georgia)
 - 2412–2462 MHz (channel 11) and 5180–5320 MHz (other European countries)
- Maximum output power (EIRP):
 - 2.4 GHz band: 8.4 dBm
 - 5 GHz band: 6.0 dBm (Georgia)
 - 5 GHz band: 9.0 dBm (other countries)

Bluetooth

- Operating frequency:
 - Bluetooth: 2402-2480 MHz
 - Bluetooth Low Energy: 2402-2480 MHz
- Maximum output power (EIRP):
 - Bluetooth: 2.9 dBm
 - Bluetooth Low Energy: 1.4 dBm

Notice for Customers in Singapore



This device complies with radio-frequency regulations. The content of certification labels not affixed to the device is given below.



Notice for Customers in Nigeria

Connection and use of this communications

equipment is permitted by the Nigerian

Communications Commission

Security

Although one of the benefits of this product is that it allows others to freely connect for the wireless exchange of data anywhere within its range, the following may occur if security is not enabled:

- Data theft: Malicious third-parties may intercept wireless transmissions to steal user IDs, passwords, and other personal information.
- Unauthorized access: Unauthorized users may gain access to the network and alter data or perform other malicious actions. Note that due to the design of wireless networks, specialized attacks may allow unauthorized access even when security is enabled.
- Unsecured networks: Connecting to open networks may result in unauthorized access. Use secure networks only.

Conformity Marking

The standards with which the camera complies can be viewed using the [**Conformity marking**] option in the setup menu.

Certificates

• Maroc/

المغرب

AGREE PAR L'ANRT MAROC Numéro d'agrément : MR00029511ANRT2021



• México

La operación de este equipo está sujeta a las siguientes dos condiciones:

- (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y
- (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.



Emap S.A. (Casa Nissei)

Avda Adrian Jara, Esq. Regimiento Piribebuy, Ciudad del Este, Paraguay.

Tel: 595 61 500 115 Fax: 595 61 500 115

• ประเทศไทย

เครือ่ งโทรคมนาคมและอุปกรณ์นี้ มีความ สอดคล้องตามมาตรฐานหรือข้อกำหนดทาง เทคนิคของ กสทช

• عُمان



Index

Symbols

P (Programmed auto)	133
S (Shutter-priority auto)	133
A (Aperture-priority auto)	134
M (Manual)	135
⑤ (Single frame)	145
믹L (Continuous low-speed)	145
및 H (Continuous high-speed)	145
ⓒ (Self-timer)146	ó, 152
및 (Quick release-mode select	ion)
146, 148	
대 (Pinpoint AF)	114
[1] (Single-point AF)	114
函\$ (Dynamic-area AF (S))	115
🖾 (Dynamic-area AF (M))	
🔁 (Dynamic-area AF (L))	115
Wide-area AF (S))	116
₩12 (Wide-area AF (L))	116
[30] (3D-tracking)	
(Subject-tracking AF)	117
[III] (Auto-area AF)	
(Matrix metering)	520
(Center-weighted metering)).520
(Spot metering)	520
•* (Highlight-weighted meter	ring)
520	
i button	
<i>i</i> menu	
甸 (ლ) button	
🖳 button	
\$ button	
🔁 button	143
	295
О-п (Fn4) button192	2, 249
⑦ (help)	63

Numerics

1:1 (24×24) (Image area)	. 103
16:9 (36×20) (Image area)	. 103
3D-tracking	.116

A

AC adapter	852
Access-point mode329,	
Active D-Lighting512,	583
ADL bracketing (Auto bracketin	g
set)	
AE & flash bracketing (Auto	
bracketing set)	178
AE bracketing (Auto bracketing	set)
178	
AE-L icon	141
AF activation	604
AF fine-tuning options	714
AF speed	684
AF subject detection options	119,
587	
AF tracking sensitivity	685
AF-area mode	113
AF-C	
AF-C priority selection	598
AF-F	.111
AF-ON button	128
AF-S	
AF-S priority selection	599
After burst, show	698
After delete	697
Airplane mode	756
All pictures	263
Aperture	
Aperture-priority auto	134

В

Backup (Role played by card in Slot 2)
Battery
Battery charger
Battery info742
BKT button 178, 183, 187
Bluetooth
Bracketing178, 183, 187
Bracketing order
Brightness (Set Picture Control) 196
Built-in AF-assist illuminator609
Bulb
Bulb (Long time-exposures)
Burst photography145

С

C30	
C120	149
Calibration	850
Camera control	361
Camera Control Pro2	361
Camera sounds	733
Candidates for deletion	262
Center-weighted area	614

Center-weighted metering Charging AC adapter Choose color temperature (Whi	75
balance)	
Choose image area	
Clarity (Set Picture Control)	
Clean image sensor	
Cloudy (White balance)	
Color space	
Color temperature	
Conformity marking	
Connect to computer	
Connect to FTP server	
Connect to other cameras	
Connect to smart device	
Continuous AF	
Continuous high-speed	
Continuous low-speed	
Continuous shooting speed	619
Contrast (Set Picture Control)	196
Control lock	682
Control ring	129
Control ring response	669
Copy image(s)	699
Copyright information	725
Creative Picture Control	193
Custom controls	674
Custom controls (playback)	659
Custom controls (shooting)	
Custom monitor shooting displ 634, 689	ay
Custom Settings	593
Custom settings bank	
Custom viewfinder shooting dis 636, 691	play

D

Darken	
Delete	101, 259, 693
Delete pictures from	both slots.695
Destination	

Detaching lenses
DISP button
Distortion control
D-Lighting
Dual-format recording PB slot 695
DX (24×16) (Image area) 103
DX format
DX-based video format
Dynamic-area AF (L) 115
Dynamic-area AF (M) 115
Dynamic-area AF (S) 115

Ε

Easy Connect338, 375, 404Easy exposure compensation613Effect level (Set Picture Control) 196Electronic VRElectronic VR340, 377, 406Energy saving (photo mode)746Ethernet connection346, 382EV steps for exposure cntrl612Exposure141, 143, 177Exposure compensation143Exposure indicators136Exposure info232Extended menu banks496Extended shutter speeds (M)621
• • • •
External rec. cntrl (HDMI) 592
External recorder

F

File Information	
File naming	.502, 578
File number sequence	
Fill flash	

Filter effects (Set Picture Contro 196))
Filtered playback	.255
Filtered playback criteria255,	696
Finder display size (photo Lv)	.712
Fine-tune optimal exposure	
Firmware version	
Flange-back distance	
Flash (White balance)	.160
Flash bracketing (Auto bracketi	ng
set)	.178
Flash burst priority	.643
Flash compensation	.432
Flash control	
Flash control mode	.426
Flash mode	.429
Flash off	
Flash photography	
Flash shutter speed	
Flash sync speed	637
Flat (Set Picture Control)	.193
Fluorescent (White balance)	.160
Focal plane mark	.131
Focus indicator	
Focus lock	
Focus mode110,	
Focus mode restrictions606,	
Focus peaking131,	
Focus point	
Focus point display	
Focus point persistence	
Focus point wrap-around	
Focus points used	
Focus ring	
Focus ring rotation range	
Focus shift shooting	
Focus tracking with lock-on	
Focus-mode selector	
Format memory card	
Frame rate	
Frame size/frame rate	.216

Frequency response	589
Full-frame playback	227
Full-frame playback flicks	670
Full-time AF	111
FV lock	434
FX (36×24) (Image area)	
FX format	
FX-based video format	

G

Grid type	630,	688
-----------	------	-----

Η

HDMI	537 590
Hi (ISO sensitivity)	
High sensitivity (Hi)	
Highlight display	
Highlight-weighted metering	520
High-speed frame capture	149
Histogram	233
HLG	223
HLG quality	582
HLG video	223
Hue (Set Picture Control)	196

I

Image area102	, 218
Image comment	724
Image Dust Off ref photo	720
Image frame	630
Image quality	105
Image size	108
Incandescent (White balance).	159
Infrastructure mode	, 373
Interval timer shooting	542
IPTC	726

ISO (Real button	154
ISO sensitivity	154
ISO sensitivity settings	508, 580
ISO sensitivity step value	612

J

JPEG Slot 1 - JPEG Slot 2 (Role played by card in Slot 2).....503

Κ

Keep exp. when f/ changes616

L

Landscape (Set Picture Control) 193 Language
Lighten
Limit AF-area mode selection606, 683
Limit monitor mode selection713
Limit release mode selection620
Limit selectable image area621
Limit zebra pattern tone range688
Lo (ISO)155
Location data
Location data (built-in) 204, 737
Location data (smart device)759
Log recording
Long exposure NR514
Long time-exposures
Low sensitivity (Lo)155

Μ

MAC address	774
Manage Picture Control	199
Manual (Shooting mode)	135
Manual focus 111	, 129

Manual focus ring in AF mode 611 Matrix metering 520 Matrix metering face detection 613 Maximum shots per burst 619 Memory card 81, 886 Memory card capacity 887 MENU button 59 Metering 520 MF (Manual focus) 111, 129 Mic jack plug-in power 590 Microphone (for voice memos) 295 Mid-range sharpening (Set Picture Control) 196 Mired 166 MODE button 132 Modeling flash 640
Monitor brightness
Monitor color balance
Monochrome
Monochrome (Set Picture Control) 193
Multiple exposure
My Menu

Ν

Natural light auto (White balan 159	ce)
NEF (RAW) processing	267
Network menu	755
Network settings (Connect to	
computer)	760
Network settings (Connect to F	ТΡ
Network settings (Connect to F server)	
5 (765
server)	765 193
server) Neutral (Set Picture Control)	765 193 225
server) Neutral (Set Picture Control) N-Log.	765 193 225 718

0

On-camera flash photography4	22
Overflow (Role played by card in	
Slot 2)	03
Overlay (add)2	85
Overview2	39

Ρ

Pairing (Bluetooth)	.757
Perspective control	.283
Photo flicker reduction	.518
Photo information	.230
Photo shooting menu	.491
Photo/video selector	8, 93
Picture review	.696
Pictures shot on selected dates	.262
PIN-entry WPS	
Pinpoint AF	.114
Pixel mapping	.723
Playback display options	.694
Playback folder	
Playback menu	.692
Playback zoom	.247
Portrait (Set Picture Control)	.193
Power connector	.852
Power off delay	618
Preset manual (White balance) 170	
Press the shutter-release button	n all
the way down	91
Press the shutter-release button	n
halfway	90
Programmed auto	.133
Protect	
Push-button WPS	404

Q

Quick crop241 Quick release-mode selection146,
148
Quick sharp (Set Picture Control)196

R

Rating	.251
RAW recording	
RAW Slot 1 - JPEG Slot 2 (Role pl	
by card in Slot 2)	
Rear-curtain sync	.431
Recent settings	.780
Rechargeable Li-ion battery	72
Red-eye reduction	.430
Release button to use dial	.666
Release mode	
Release timing indicator	.629
Remote flash photography	.437
Remote photography	.312
Reset	597
Reset all settings	.754
Resize	
Retouch	.264
Reverse dial rotation	
Reverse indicators	
Reverse ring for focus	
Role played by card in Slot 2	
Rotate tall	
Router frequency band	
	··· ·

S

Saturation (Set Picture Control). 19	96
Save focus position7	18
Save/load menu settings74	48
Security slot	40
Select for upload (FTP)	90
Select for upload to computer 35	56
Select pictures for upload25	53
Select pictures for upload (Conne	ct
to smart device)75	58

Selected pictures	.261
Self-timer146, 152,	617
Sensor shield behavior at powe 719	r off
Set Picture Control	.192
Set the clock	85
Setup menu	.706
Shade (White balance)	.159
Sharpening (Set Picture Contro	l)196
Shooting data	.235
Shooting menu bank	.493
Shooting mode	.132
Shutter speed 133,	135
Shutter-priority auto	133
Shutter-release button AE-L	.617
Silent mode	.735
Single AF	.111
Single frame	.145
Single-point AF	.114
Slide show	257
Slot empty release lock	
Slow sync	.430
SnapBridge	.311
Spot metering	.520
Standard (Set Picture Control)	
Standby timer	80
Starlight view (photo Lv)	.626
Start via LAN	.773
Stereo microphone (for videos)	94
Storage folder	
Store points by orientation	.602
Straighten	.281
Subject-tracking AF	.117
Sub-selector	141
Sync. release mode options	.620
Synchronized release	.402

Т

Thumbnail playback	228
Time	138
Time (Long time-exposures)	138

Time zone and date	85, 709
Timecode	591
Time-lapse video	556
Toning (Set Picture Control)	196
Touch controls	53, 736
Touch shutter	
Trim	
Trim video	
Two-button reset	

U

Upload while off	
USB	
USB cable	4
USB connection priority	
USB power delivery	

V

	526
Vibration reduction	
Video file type	
Video flicker reduction	
Video recording menu	
Video-record button	
View all in continuous mo	de 629
View assist	
View mode (photo Lv)	
Viewfinder brightness	711
Viewfinder color balance	
Vignette control	
Virtual horizon type	631
Vivid (Set Picture Control)	
Voice memo	
Voice memo options	

W

Warm display colors	626
WB bracketing	183
WB button	158
White balance	158

Wide-area AF (L)116
Wide-area AF (S)116
Wi-Fi connection758
Wi-Fi mode
Wind noise reduction
Wired LAN756
Wireless LAN
Wireless remote (WR) options 738
Wireless Transmitter Utility
WR-R10439, 738
WR-R11a439, 738

Ζ

No reproduction in any form of this document, in whole or in part (except for brief quotation in critical articles or reviews), may be made without written authorization from NIKON CORPORATION.

NIKON CORPORATION

© 2021 Nikon Corporation